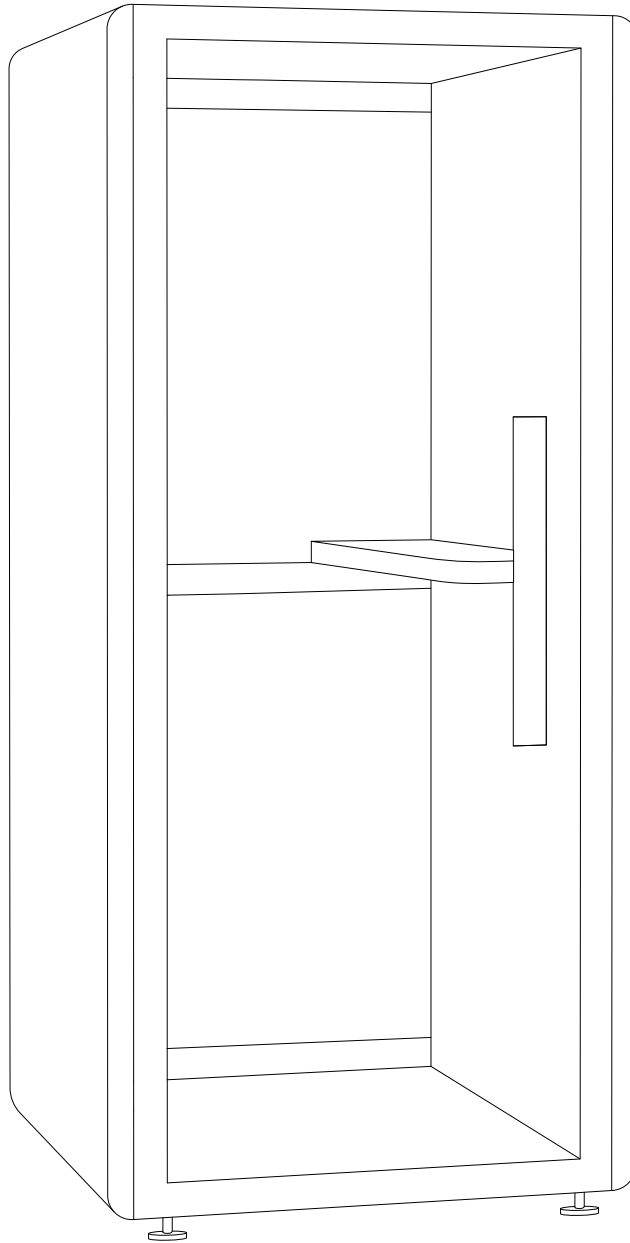# Kameleon K1- Solid Back

ASSEMBLY INSTRUCTIONS

ASKÍA

ACOUSTIC PODS

Info.
ASSEMBLY INSTRUCTIONS

❶ ❷ ❸ Steps.

Ⓐ Ⓑ Ⓒ Bag with screws.

🔓 Unlocked.

🔒 Lock.

Level check.

Allen key needed.

Allen key and screws needed.

T-Handle hex key needed.

T-Handle hex key and screws needed.

Position the door on pins.

Screwdriver needed.

Power drill needed.

Move in place.

Main Ethernet supply.

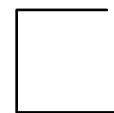Main Power supply.

Ventilation coupling.

Power coupling.

Ethernet coupling.

Lighting coupling.

Motion sensor coupling.

Magnetic coupling element.

Pay attention to.

Pay attention to.

Do.

Don't.

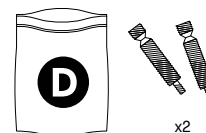Pay attention not to break the glass.

Ok.
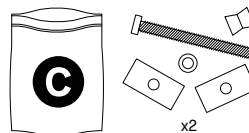
Stop.

Whiteboard.

Pinboard.

VESA Adapter.
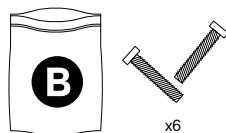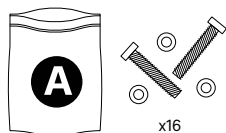
Assembly in 40 min. with 2 people

Included

x1 Allen Key 2   x1 Allen Key 3   x1 T-Handle Hex Key 4   x1 T-Handle Hex Key 5   x1 T-Handle Hex Key 7   x1 Ceiling Panels Adjuster   x2 Sucction cups
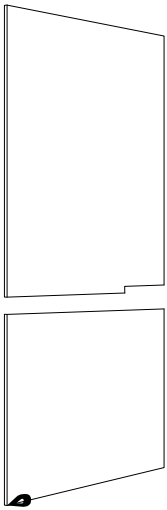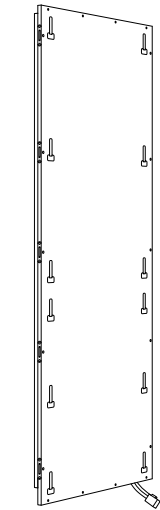
A x16

B x6

**C** x2

D x2
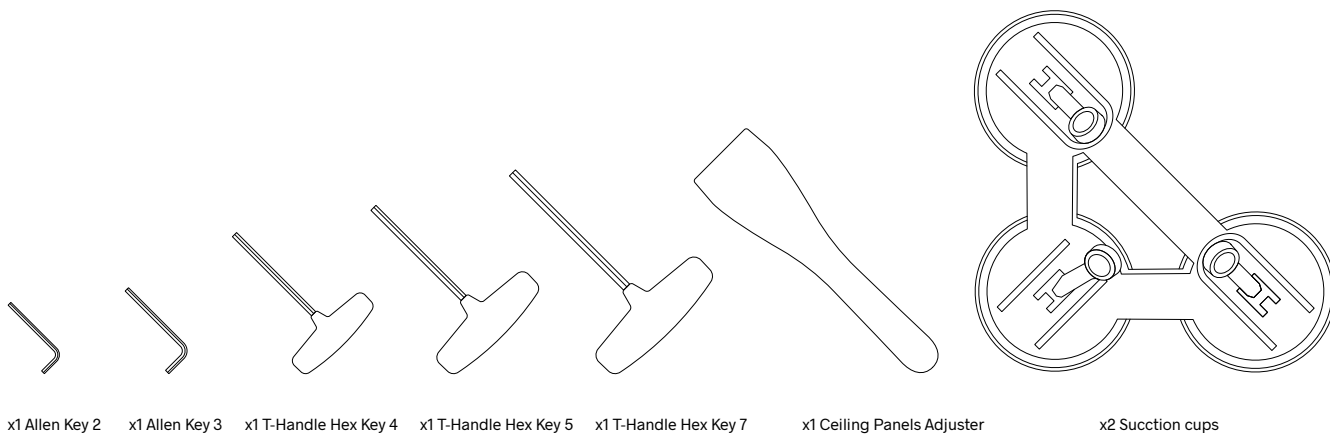
Not Included
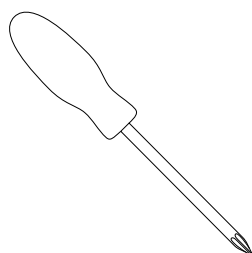
Screwdriver

Elements
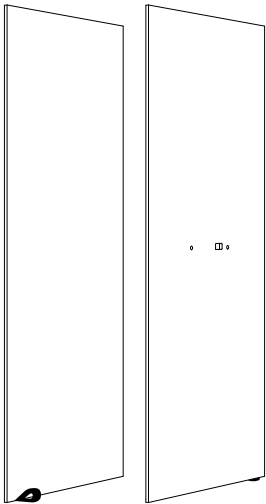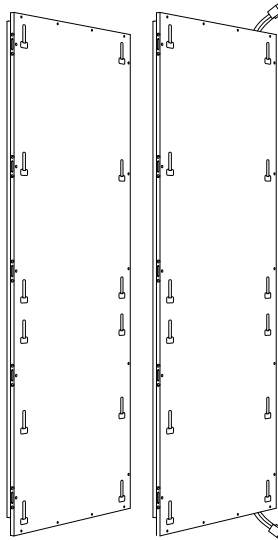
x2 Middle
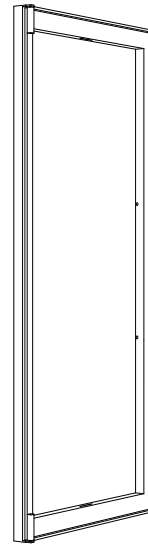Back Panels

x1 Middle Structure Panel
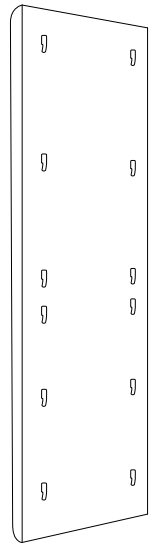
x1 Exterior Back
Panel

x1 Left & x1 Right Interior Panel

x1 Left & x1 Right Structure Panels

x1 Door Frame

x2 Exterior Panel

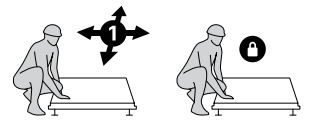x1 Ceiling

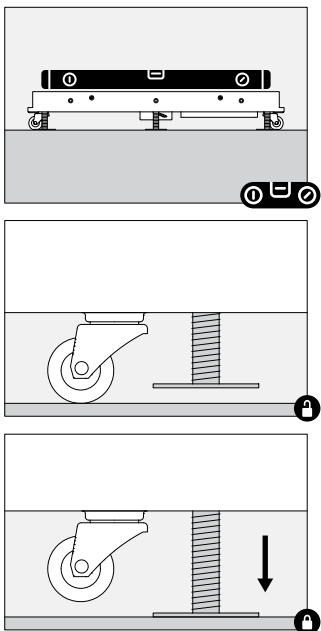x3 Acoustic Felt Ceiling Panels

x1 Carpet

x1 Floor

x1 Door Handle

x1 Table

1
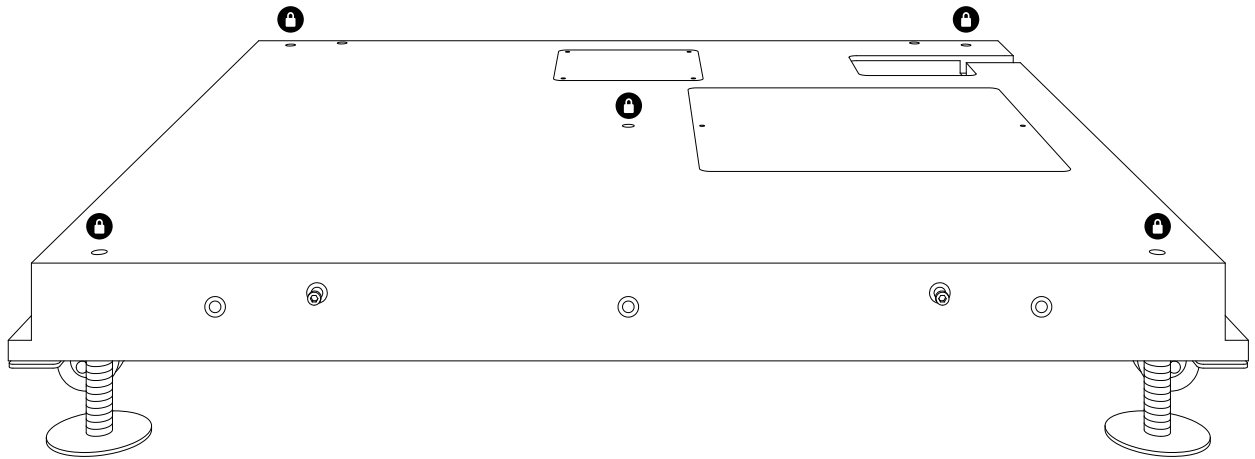
T-Handle Hex Key 4
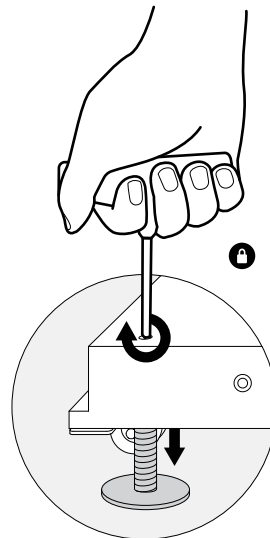
2
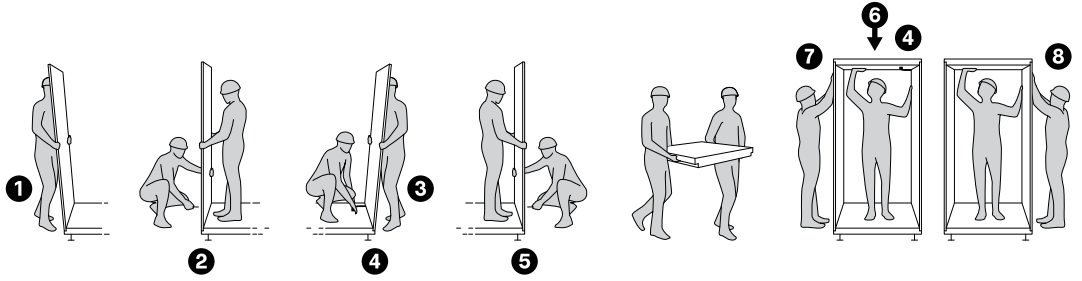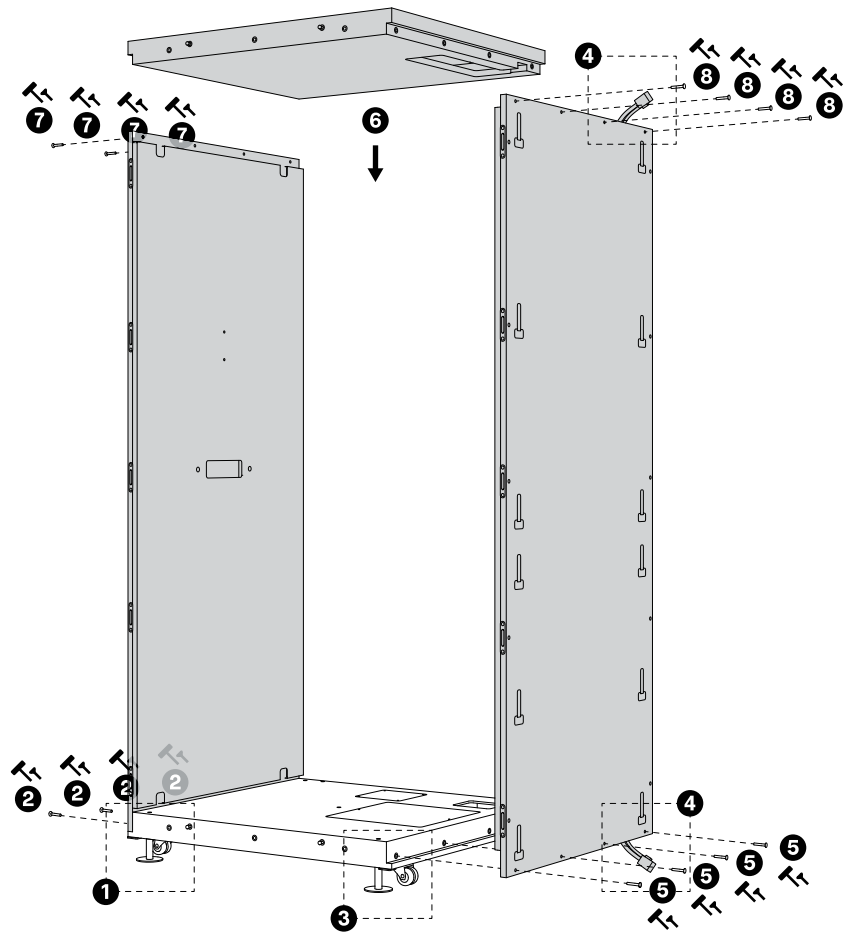
A x16 with
T-Handle Hex Key 4
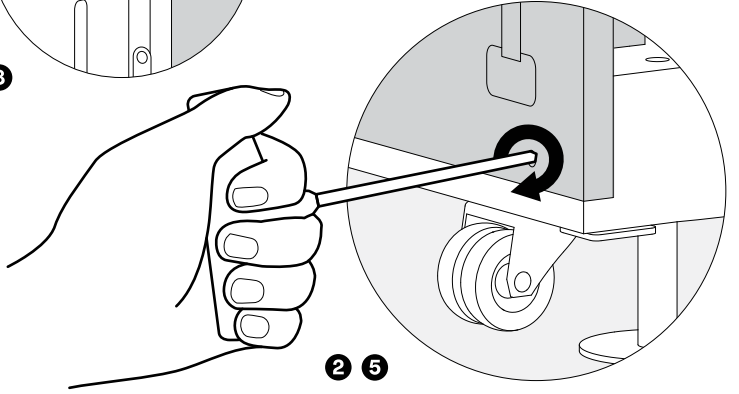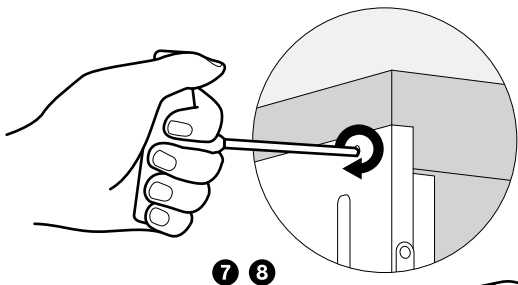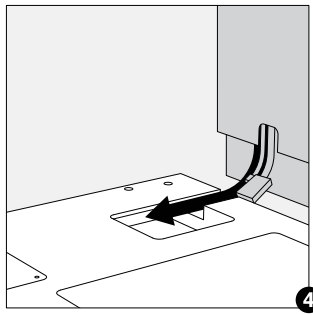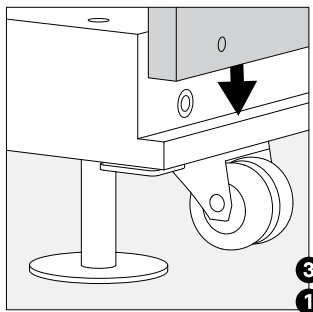
3

T-Handle Hex Key 7
Succion cup handles

3 6 Inside
4 5 Outside

4

T-Handle Hex Key 7
Suction cup handles

2 3 Outside

The door opening can
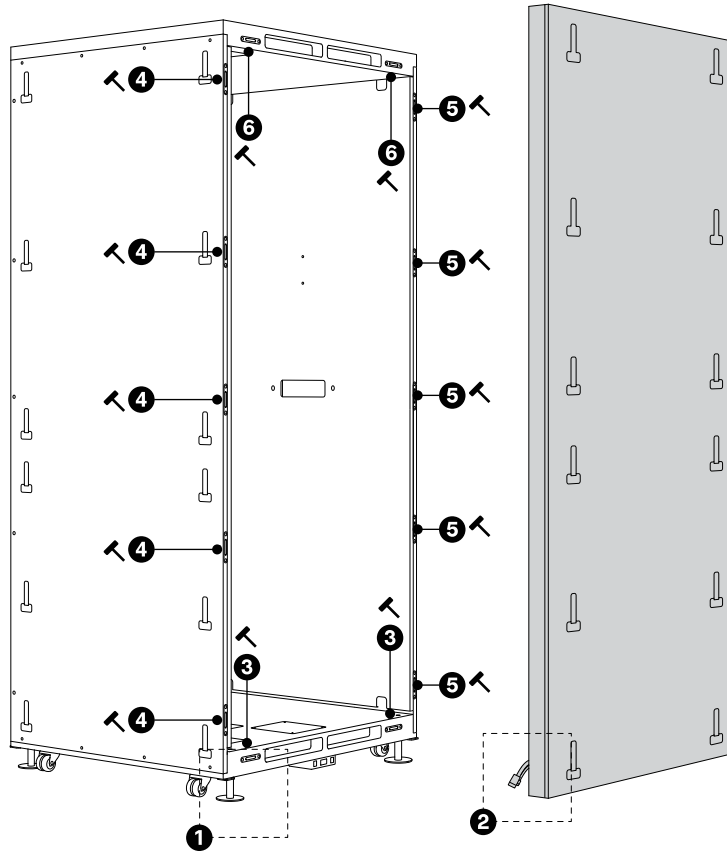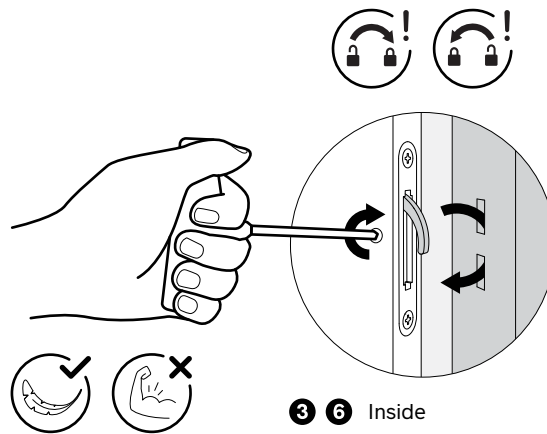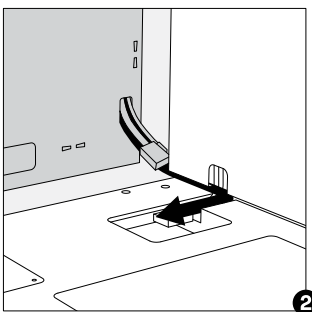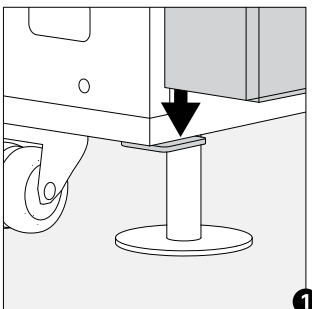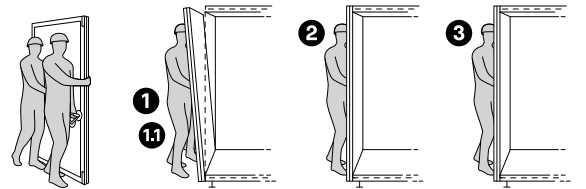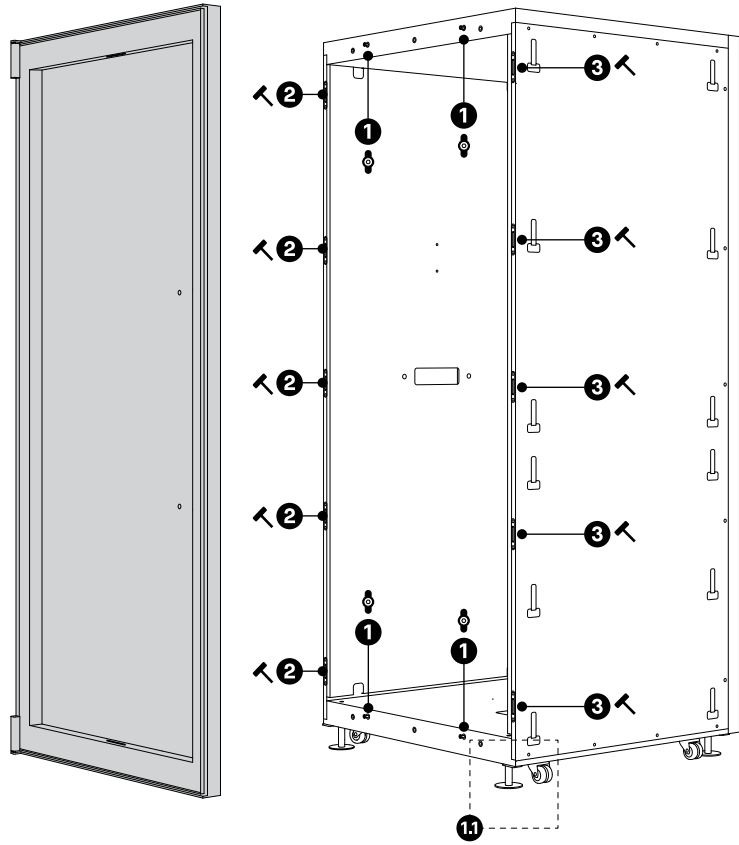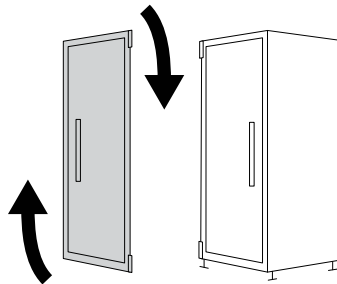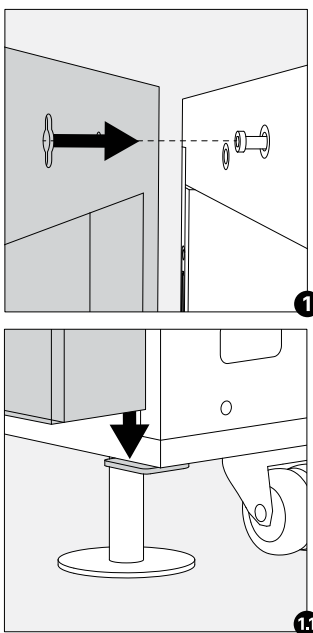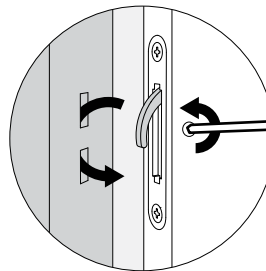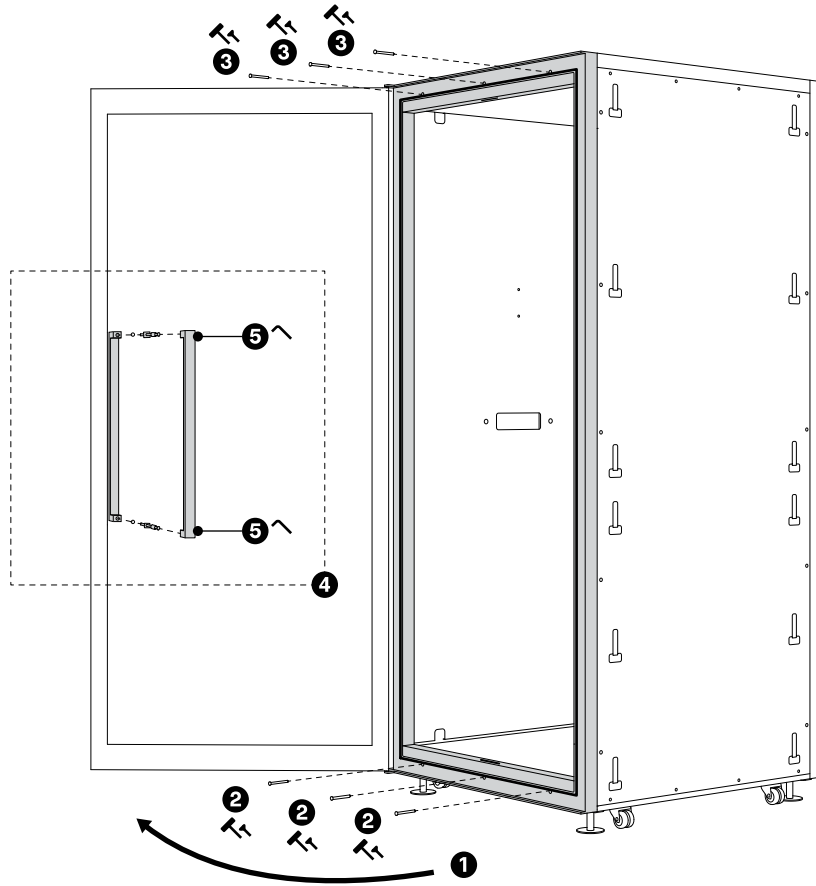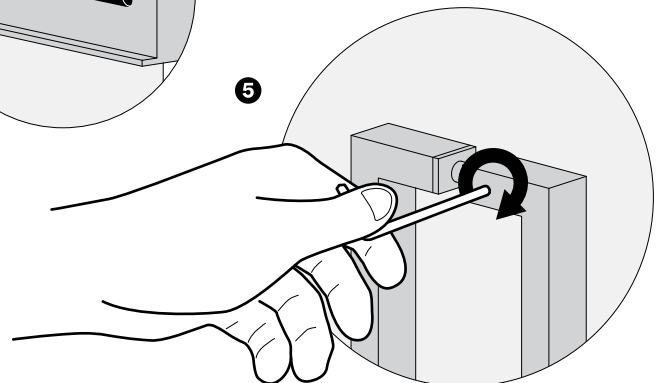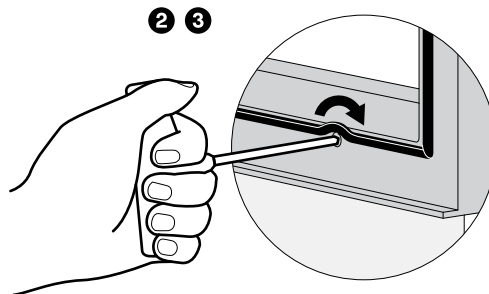be oriented **Left** or **Right**
just by rotating the frame.

5

B x6 with
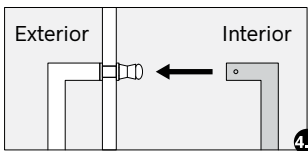**T-Handle Hex Key** 4

C x2 with
Allen Key 3

Exterior   Interior

4.1

Exterior   Interior

4.2

6

Pay attention not to break the glass door.

Pay attention not to break the glass door.

Check if the glass door hits the frame edge before closing it.

Adjust the glass door if necessary.
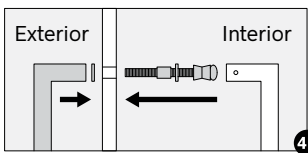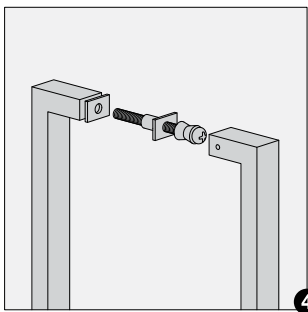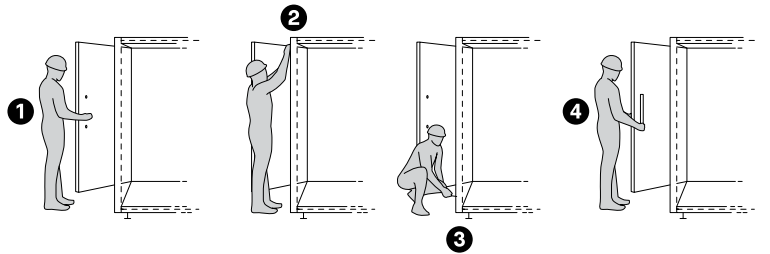
Allen Key 3
Allen Key 2

Top

Bottom

To adjust the glass door the height must be calibrated. If you need to raise the glass door, you loosen the top hinge and tighten the bottom hinge.

If you need to lower the glass door, you loosen the bottom hinge and tighten the top hinge.

Check if the door closes properly and adjust the door plates if needed.

Tighten or loosen the plates when needed.

7

Orange

Black

Main Power & Ethernet supply at the back of the pod.

Check if the lighting, ventilation and power sockets are connected properly.

8

How to remove
the Interior Panel.

9

Ceiling Panels Adjuster

How to place the Acoustic Felt Ceiling Panels.

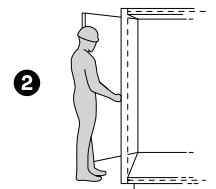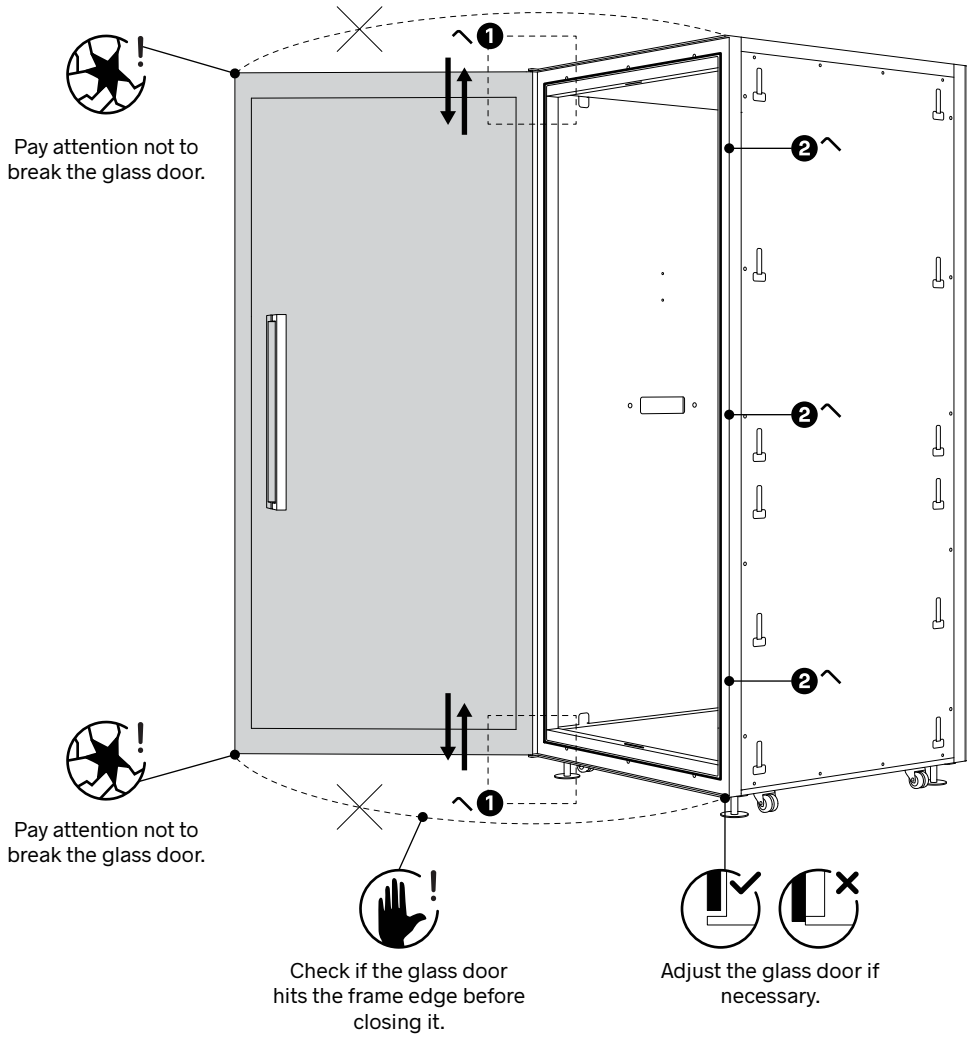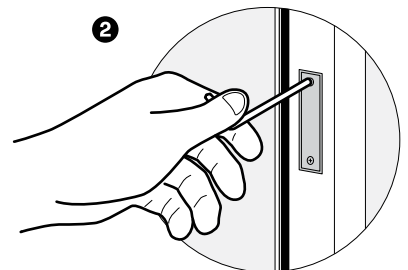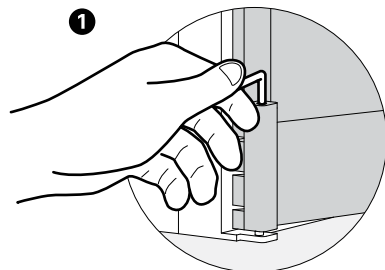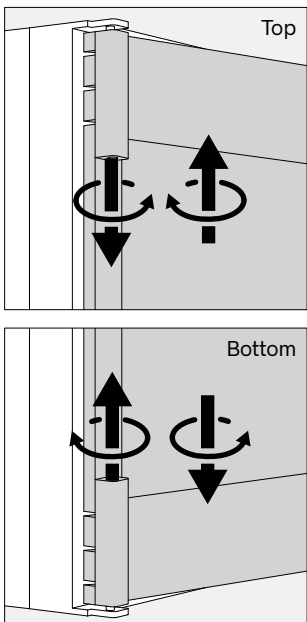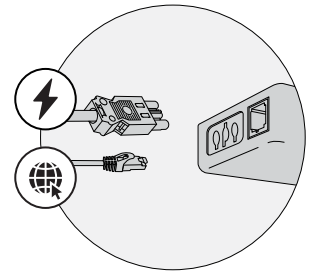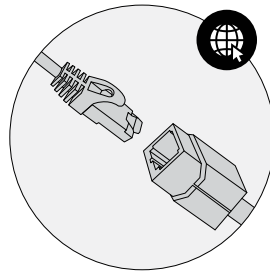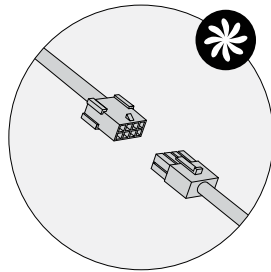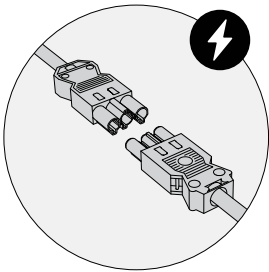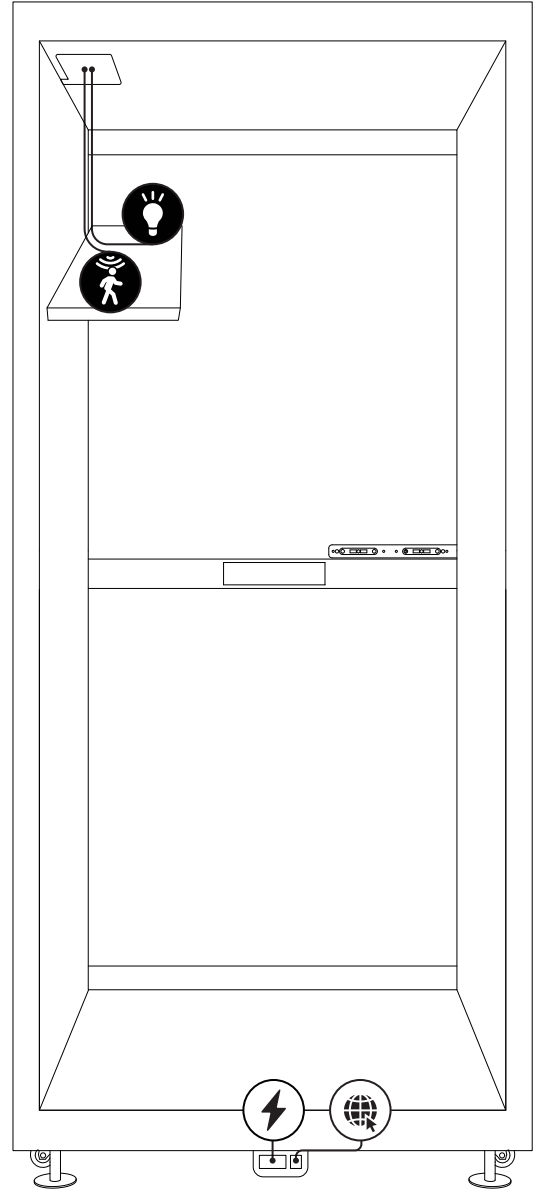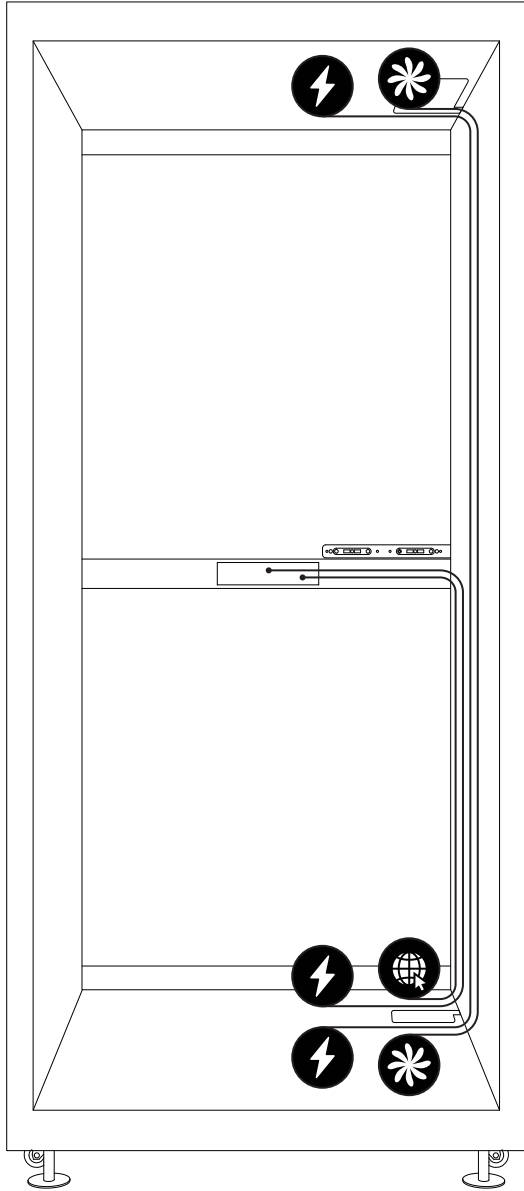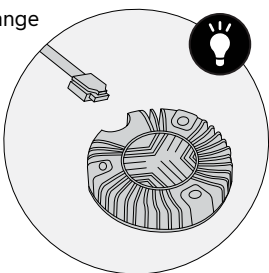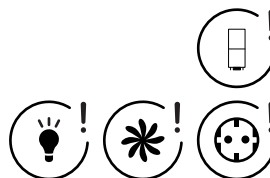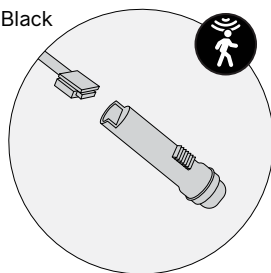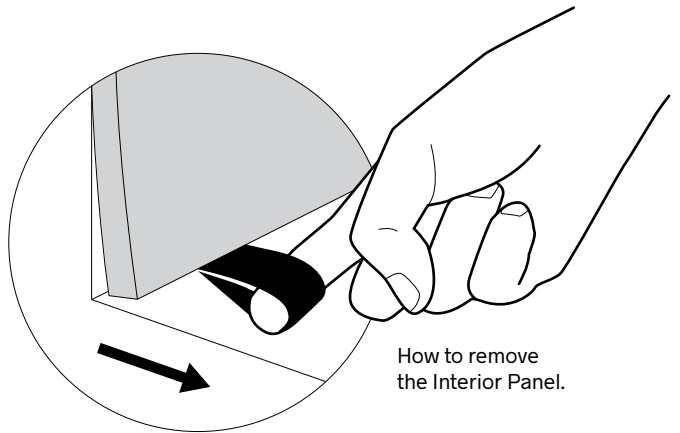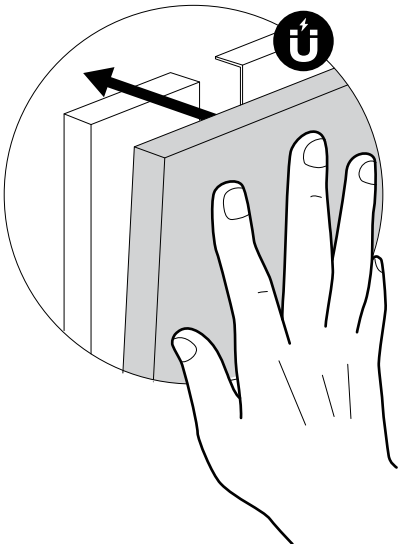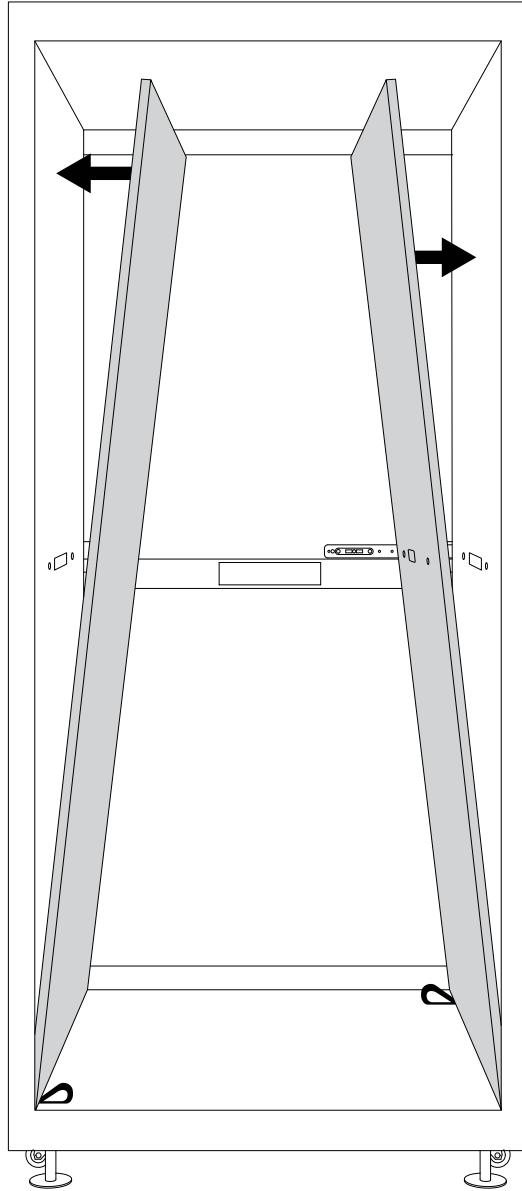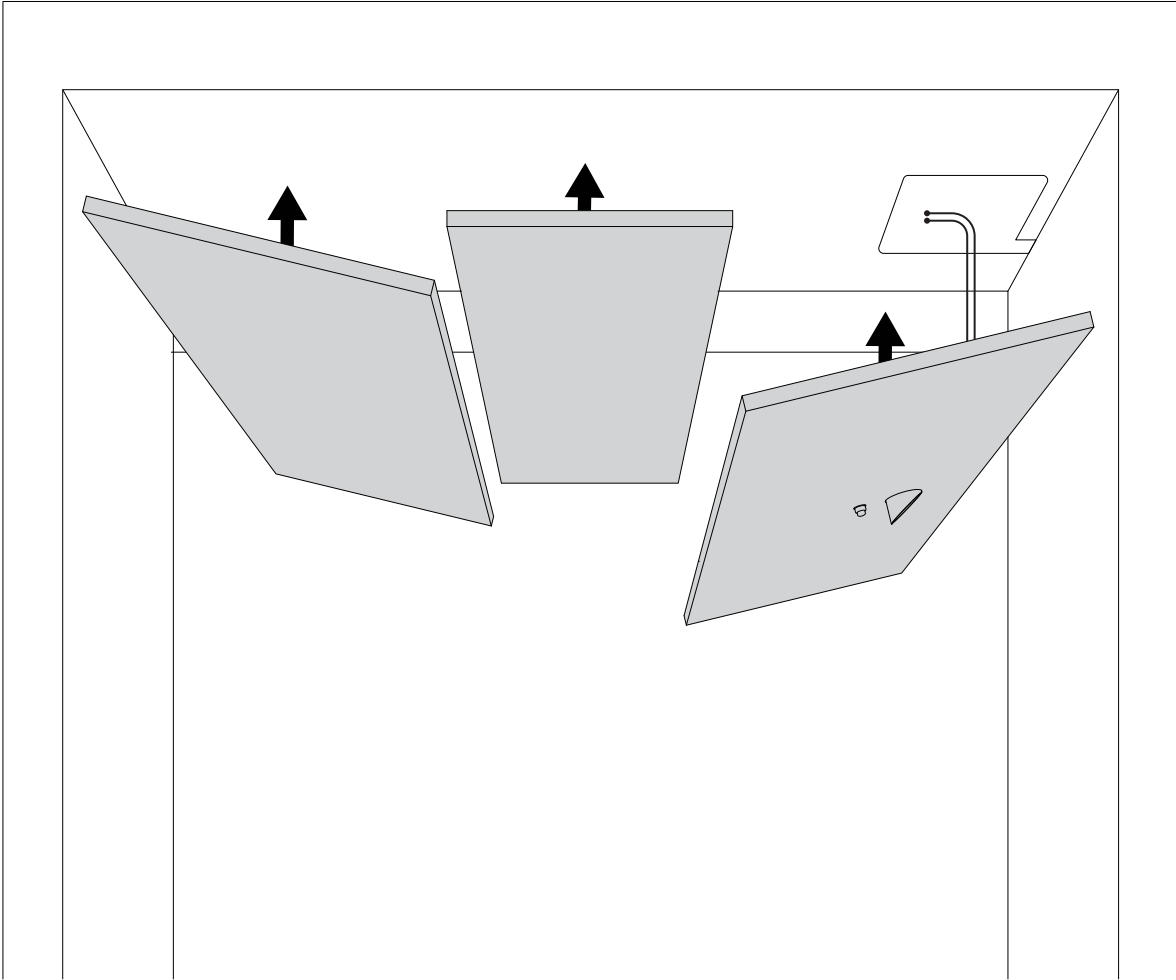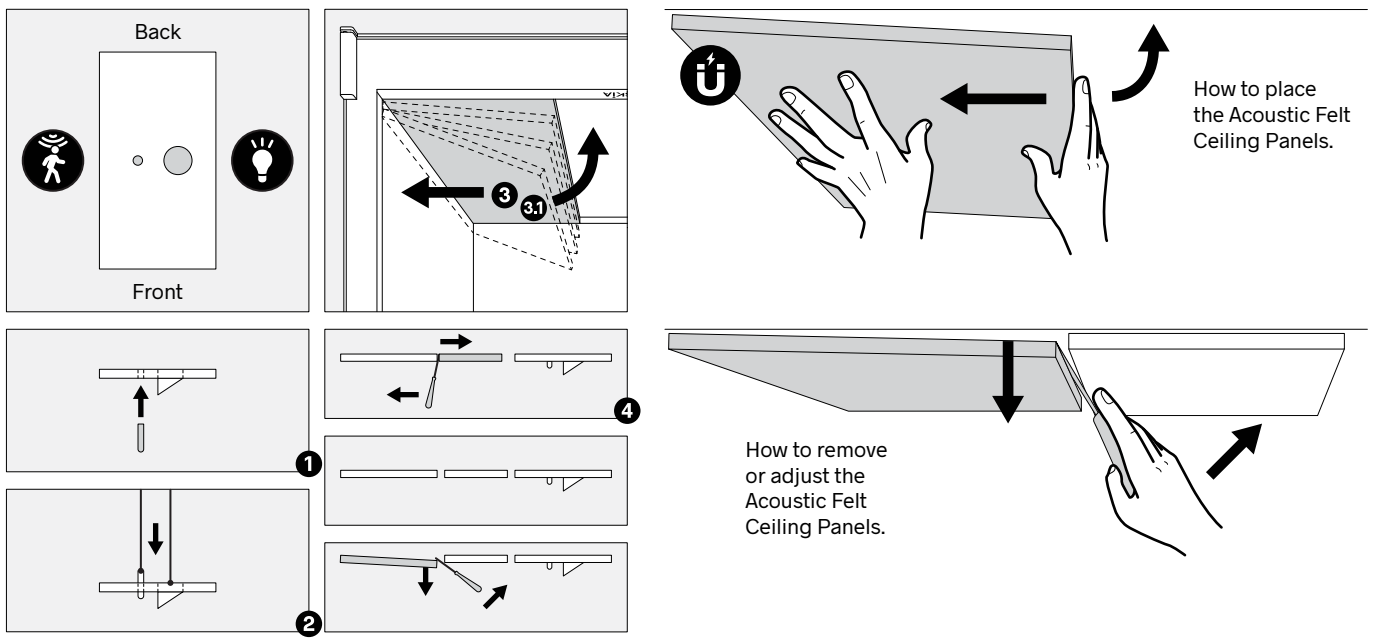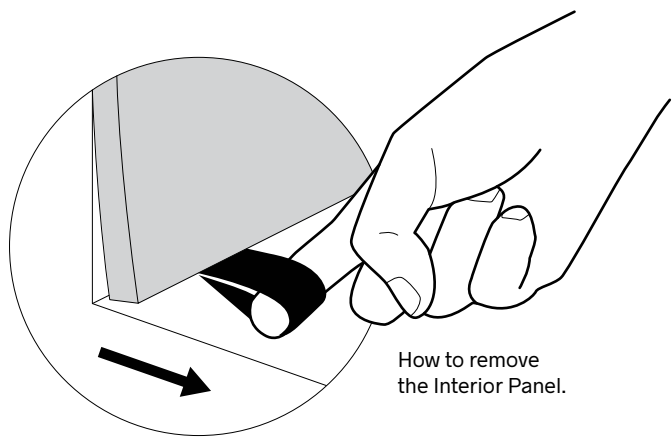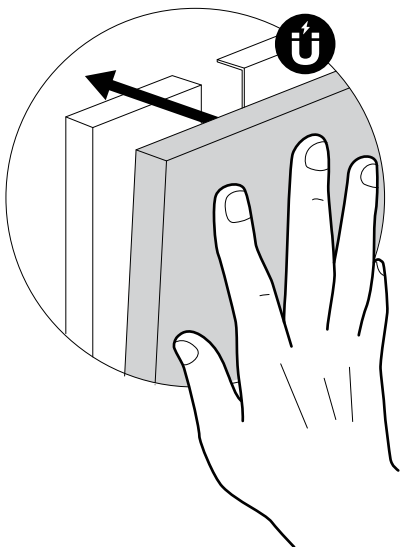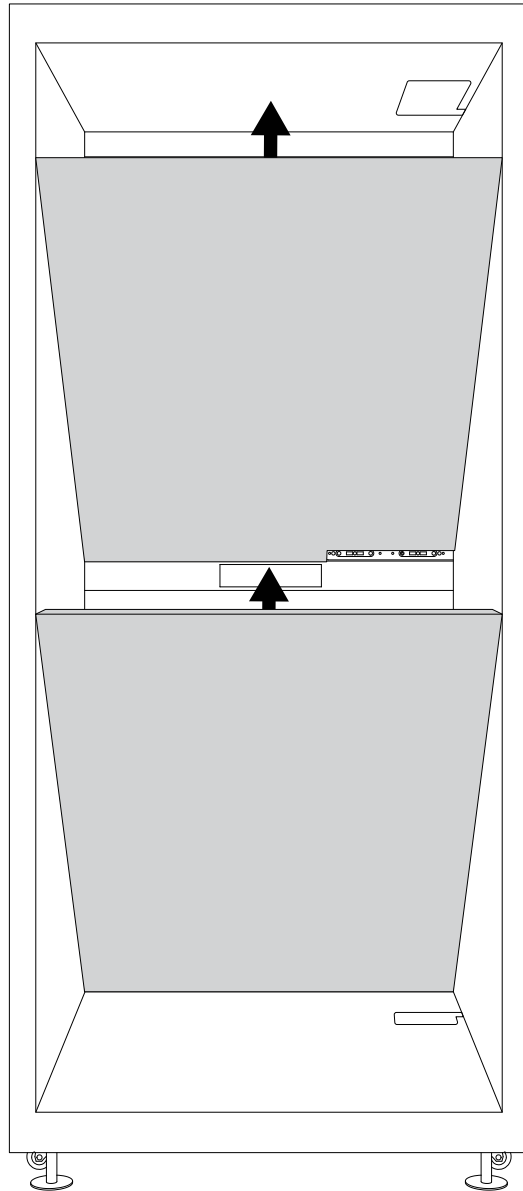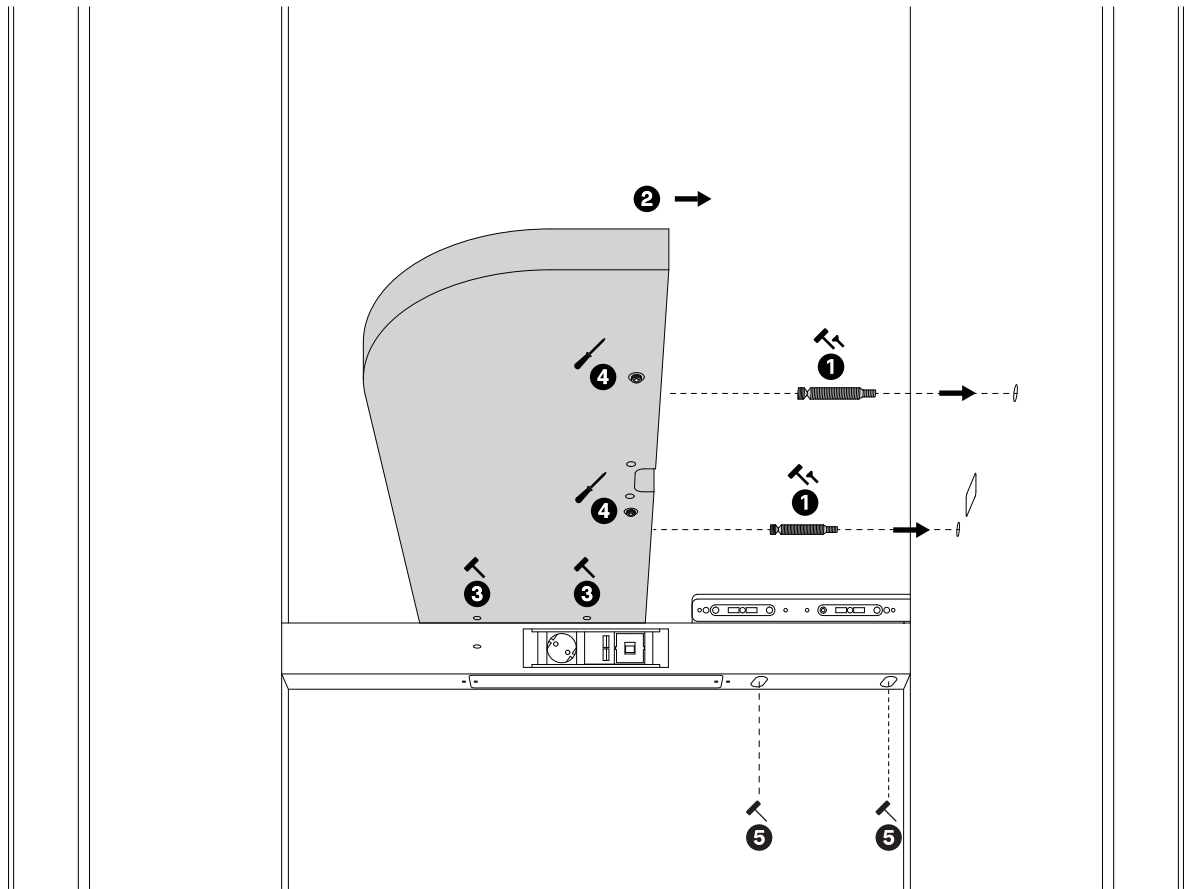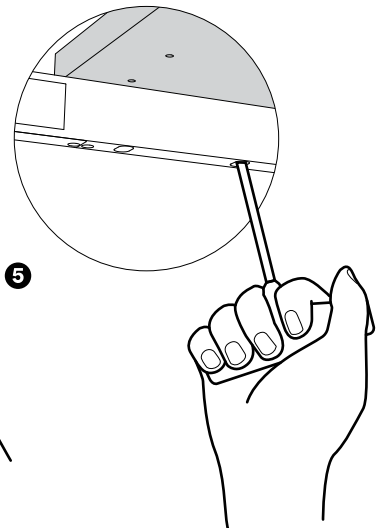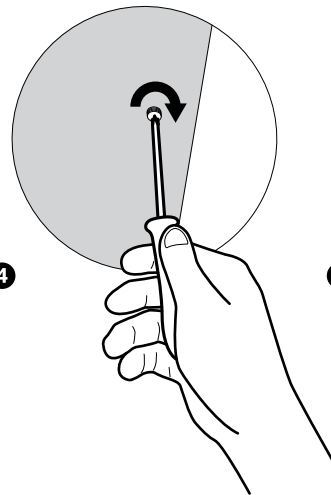How to remove or adjust the Acoustic Felt Ceiling Panels.

10

How to remove
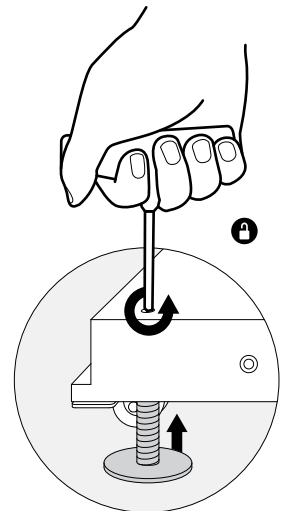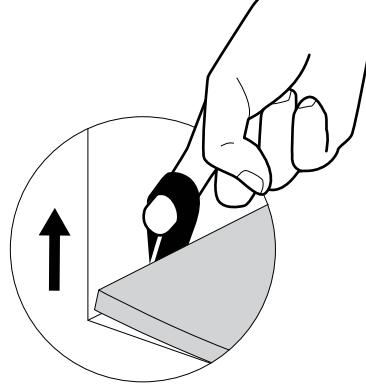the Interior Panel.

11

D x2 with
T-Handle Hex Key 5

T-Handle Hex Key 7
Screwdriver (Not Included)

12

13
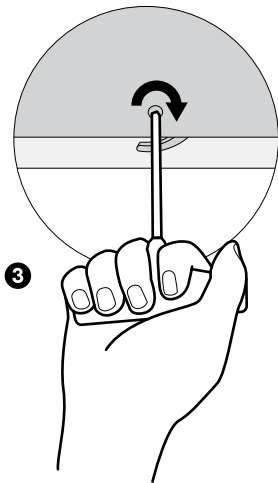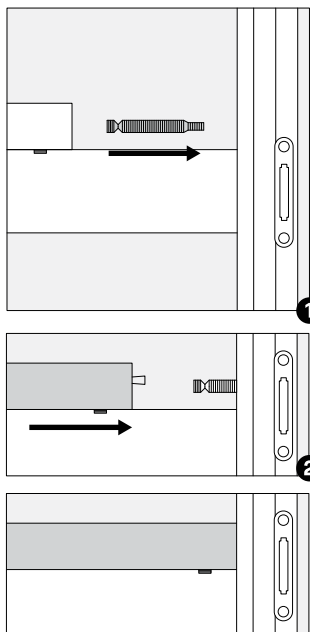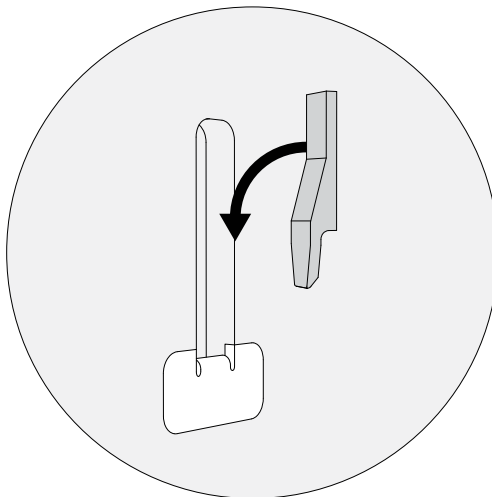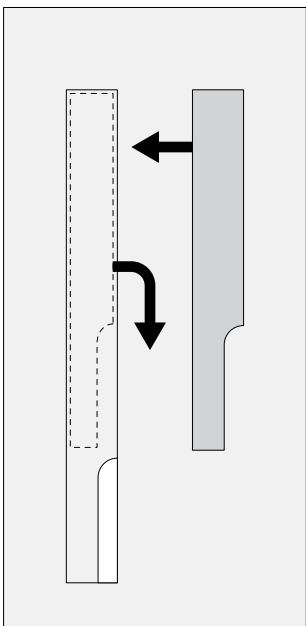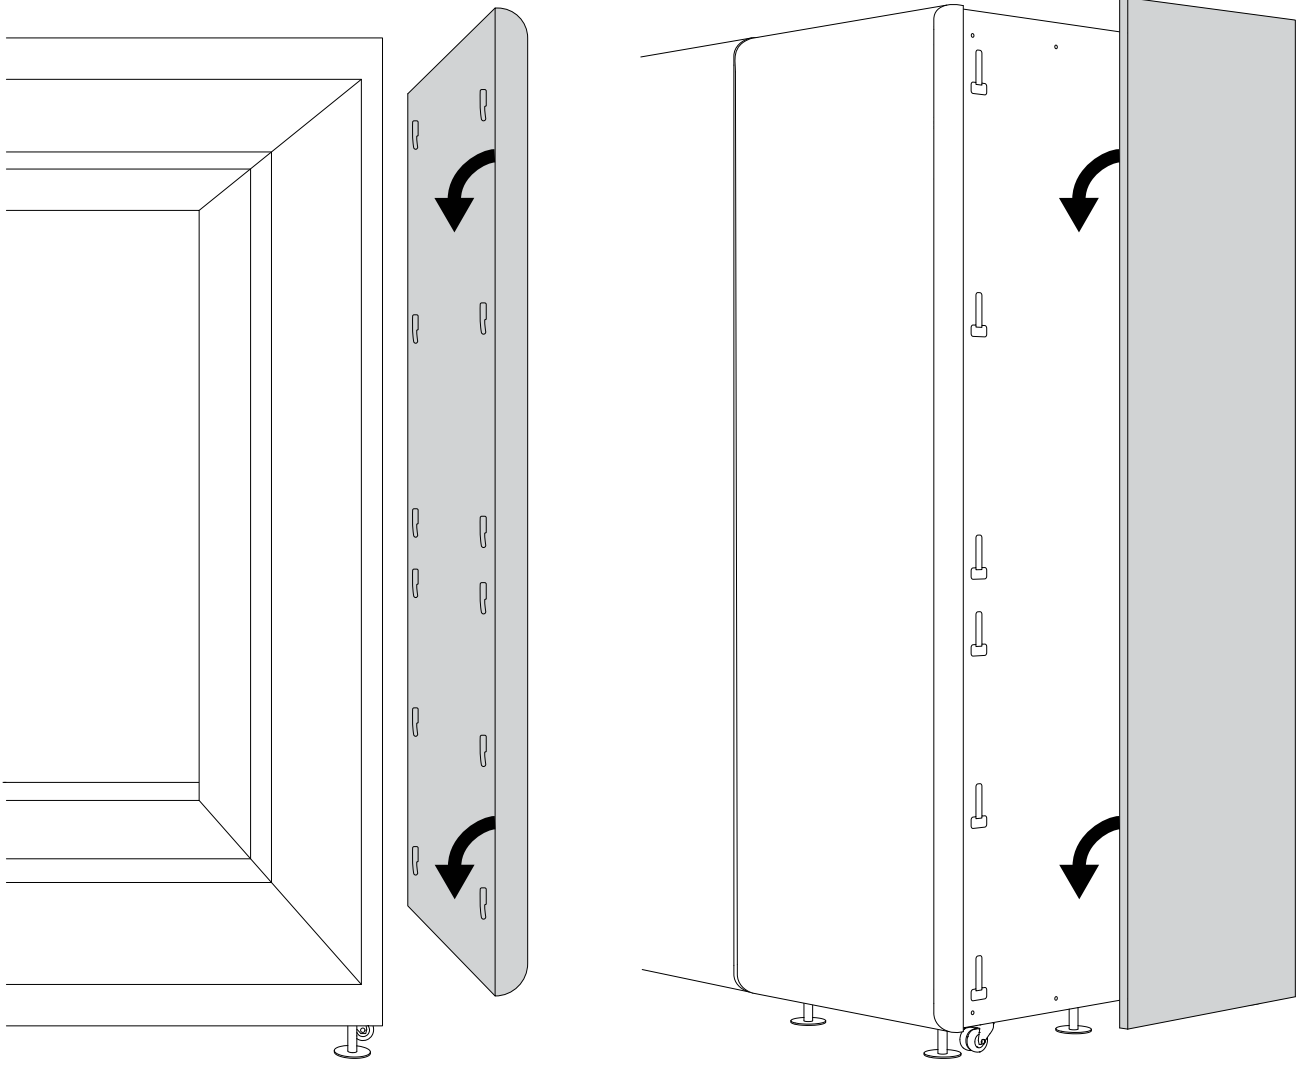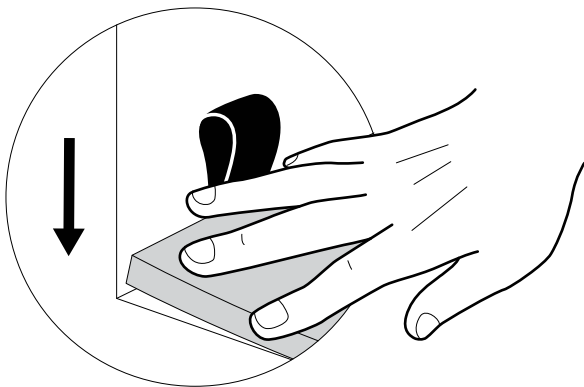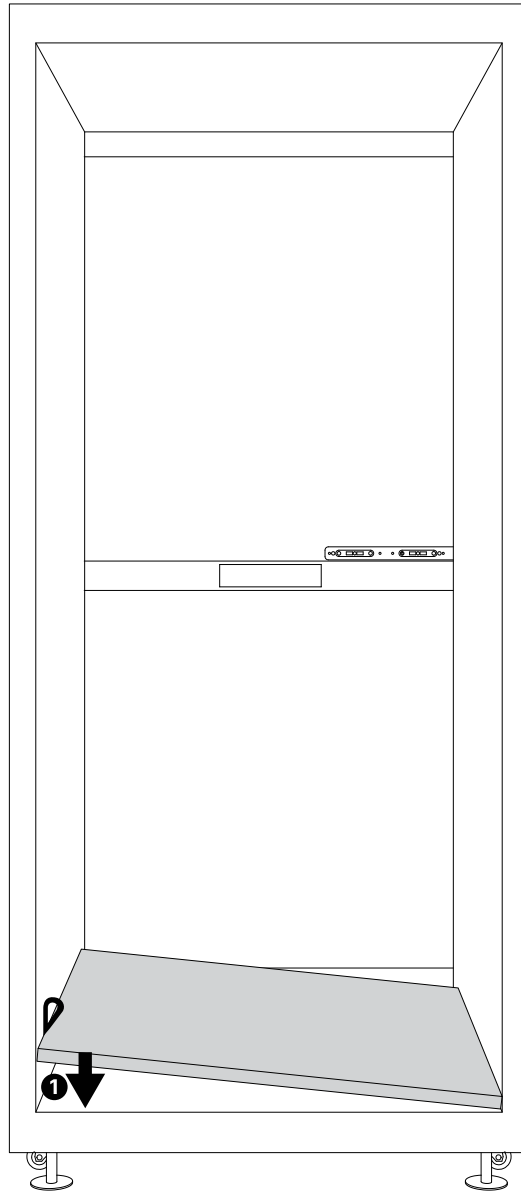
If you are satisfied with the pod's position, you can place the carpets.

If you want to reposition the pod, you have to remove the carpet, if needed, and unlock the legs. When you are satisfied with the pod's position, lock the legs and place the carpets.

Adjustable FAN and LED

FAN
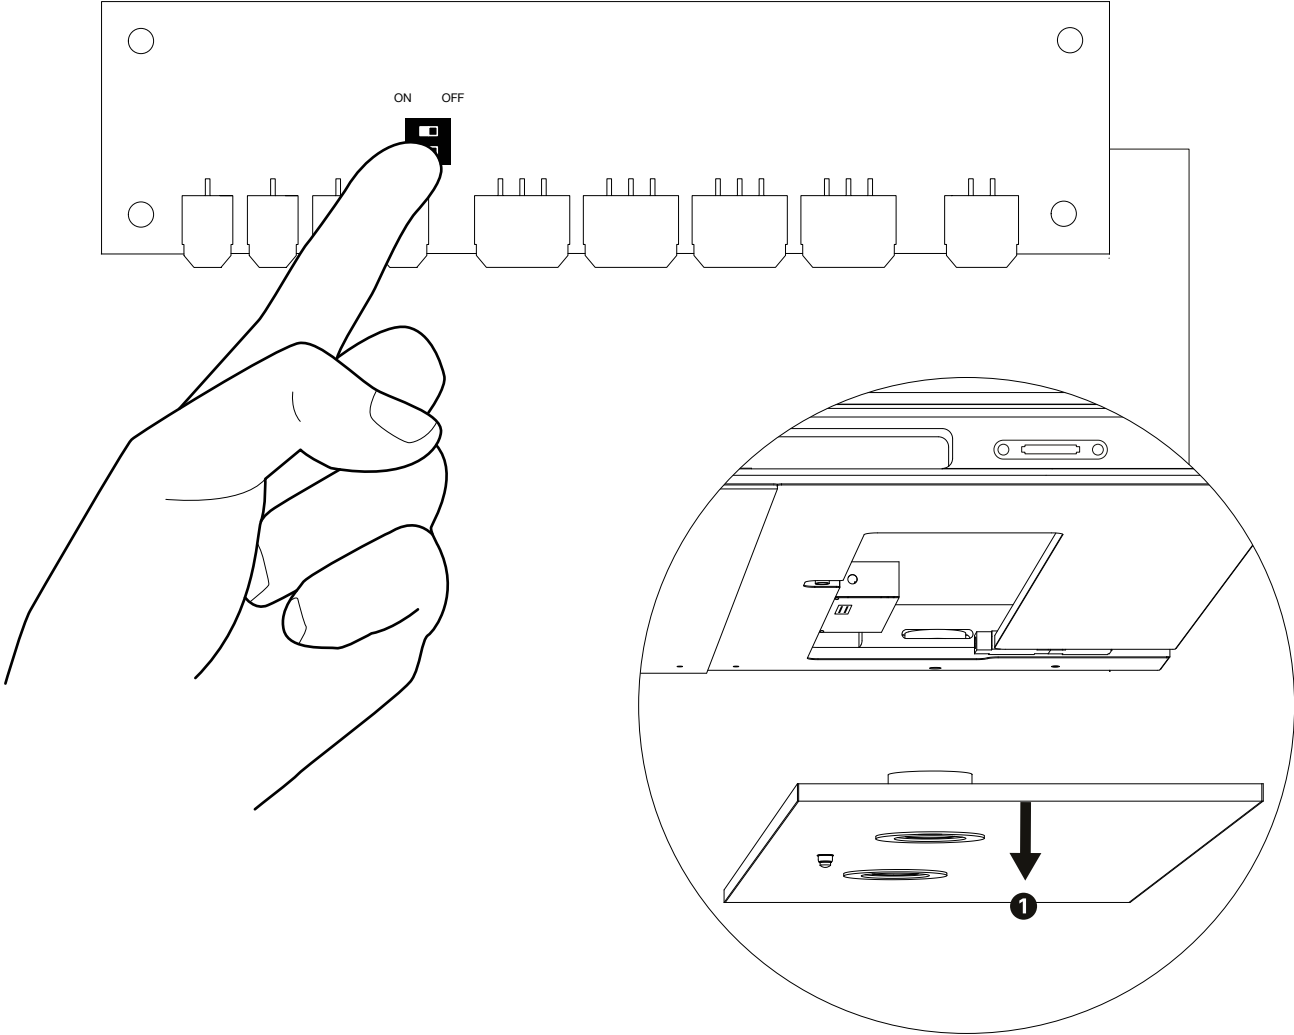
	ON	OFF		100%		80%		60%
1				☐ OFF		☐ OFF		ON ☐
2				☐ OFF		ON ☐		ON ☐

Scan

You can watch an instructional video of the K1 assembly process.
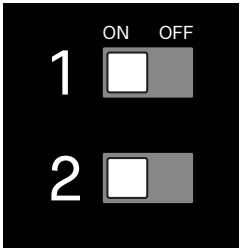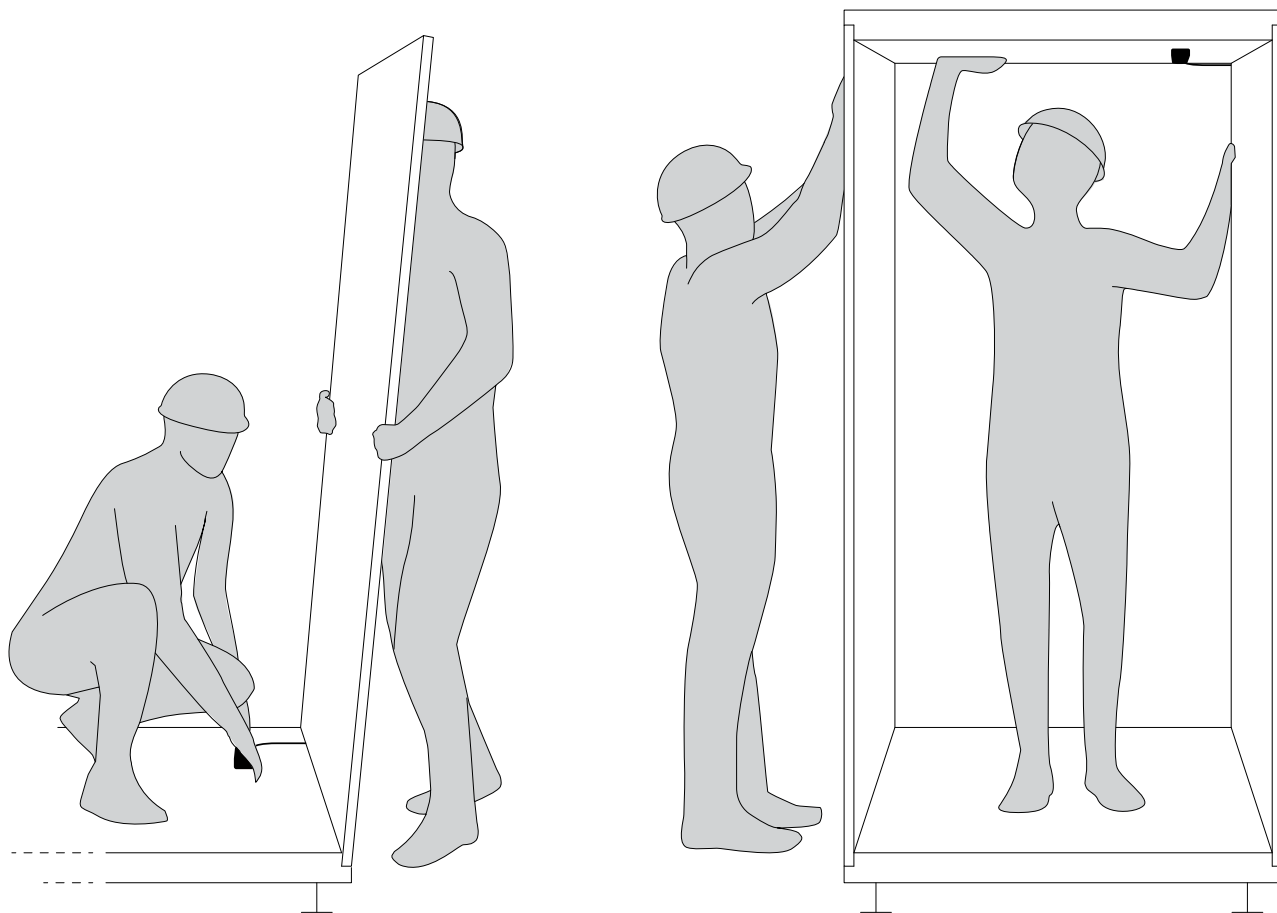Thanks to the modular design and limited number of components used
for each pod, many steps are similar between different Kameleon pods.
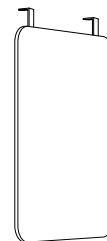
Optional

VESA Adapter

Coat Hanger

Exterior Hanging
Whiteboard or Pinboard

Interior Hanging
Whiteboard or Pinboard

There are multiple features that you can personalize your
pod with. You can view them for each Kameleon on our
website www.askiafurniture.ro

ASKÍA