

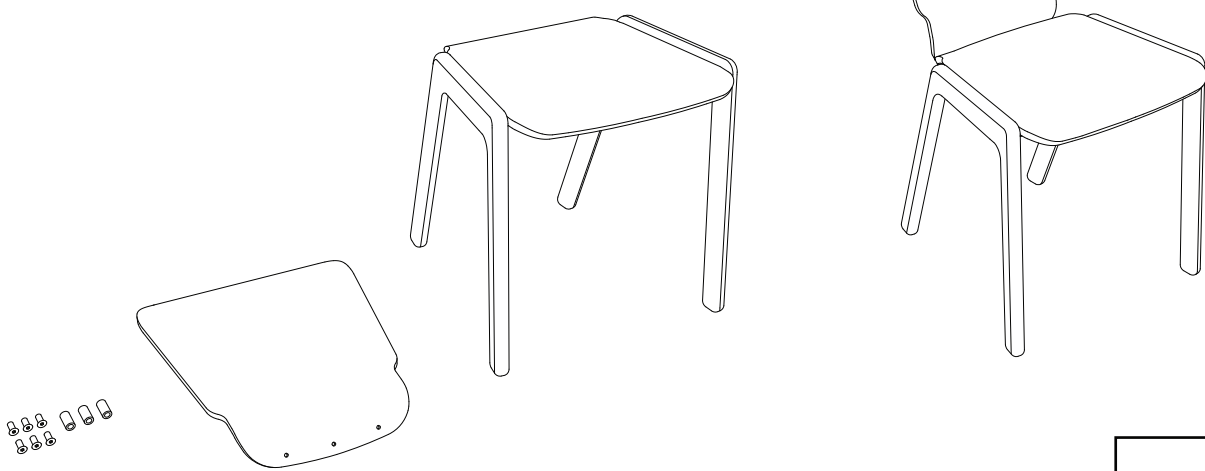


Assembly instructions TIPRO chair



① Remove the box cover

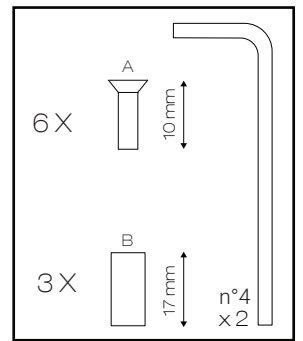

② Insert an A screw in each 3 metal 17 mm cylinder.



③ First, insert the screws with the metal cylinders underneath the seat. Then insert the rest of the screws to connect the seat and the back.

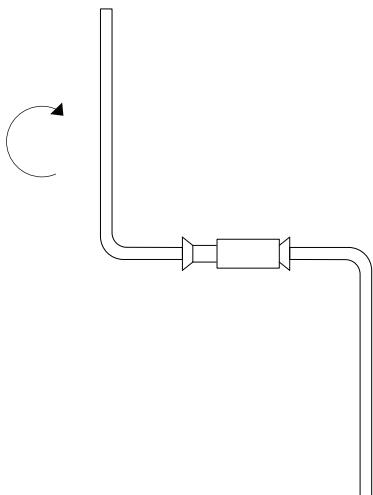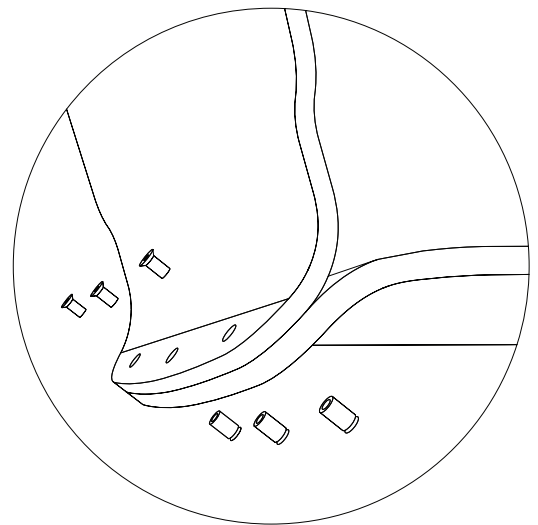

④ Tight all the screws with n°4 allen keys.