







Kameleon K1

ASSEMBLY INSTRUCTIONS

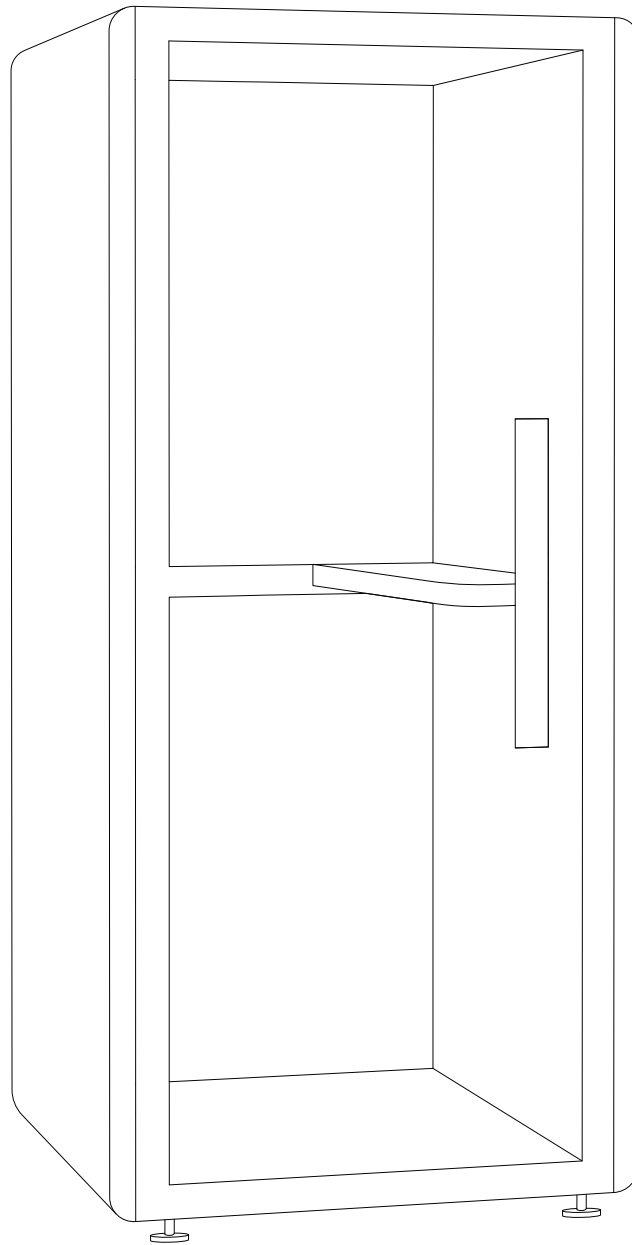


Assembly in 40 min. with 2 people

Included

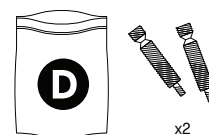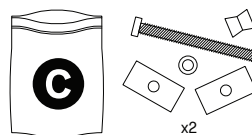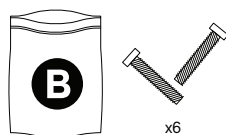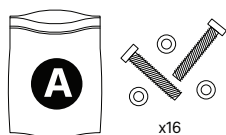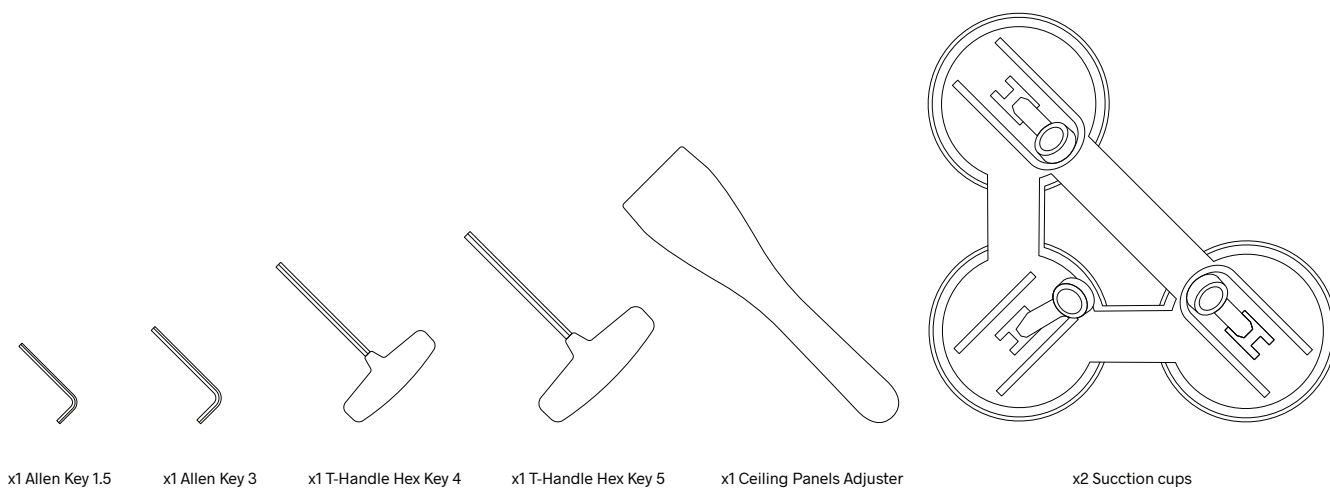


Not Included

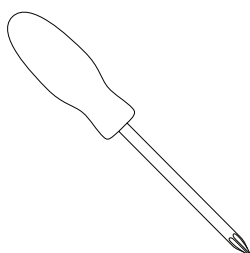


Screwdriver


Elements

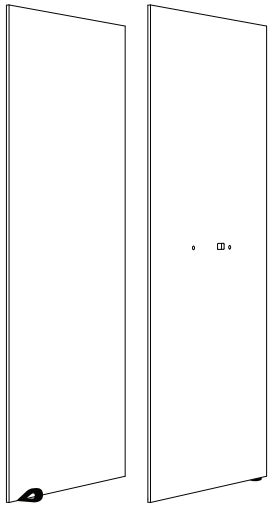


x1 Left & x1 Right Interior Panel

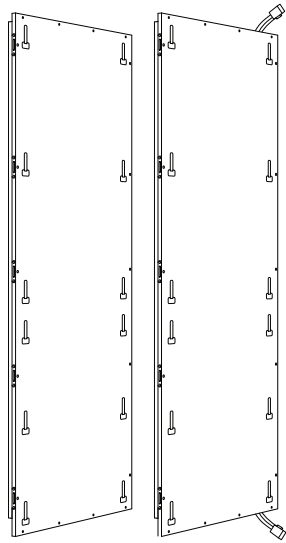


x1 Left & x1 Right Structure Panels

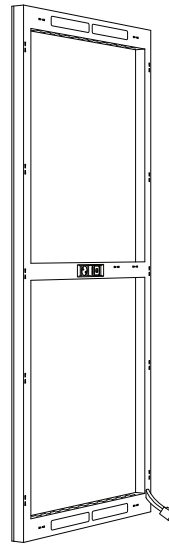


x1 Back Glass Wall

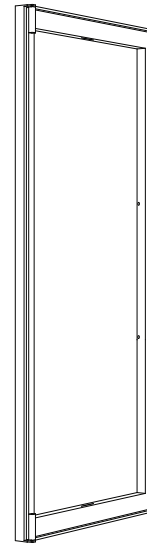


x1 Door Frame

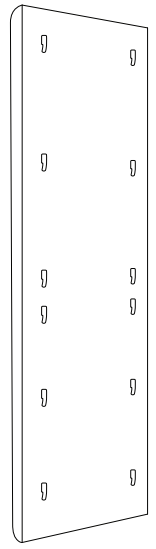

x2 Exterior Panel

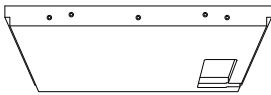


x1 Ceiling

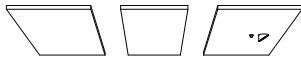

x3 Acoustic Felt Ceiling Panels



x1 Carpet

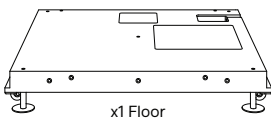

x1 Floor





x1 Door Handle





x1 Table



1

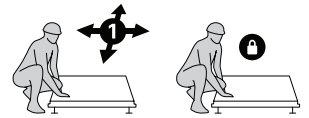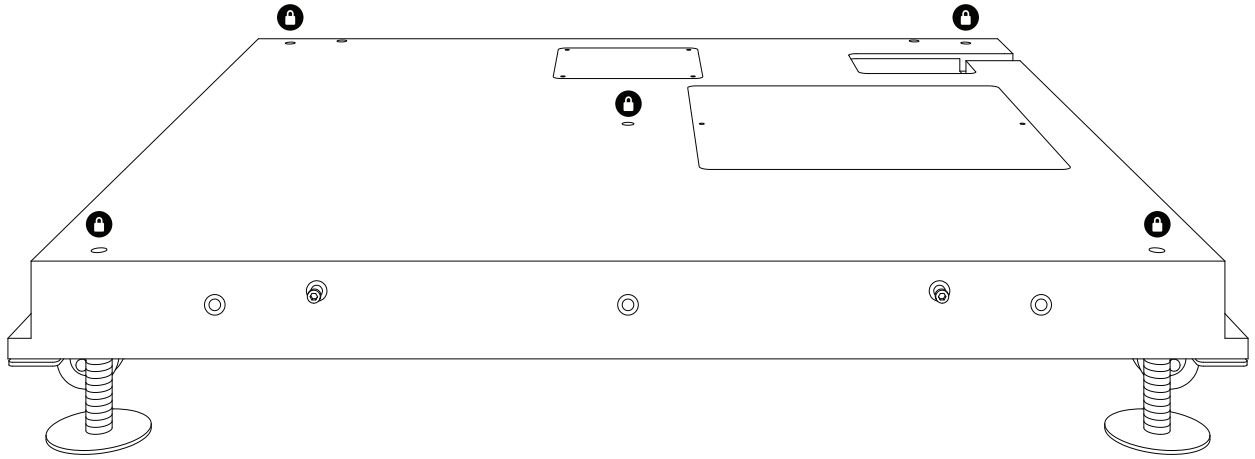





T-Handle Hex Key 5

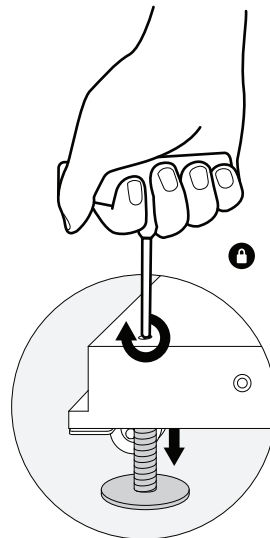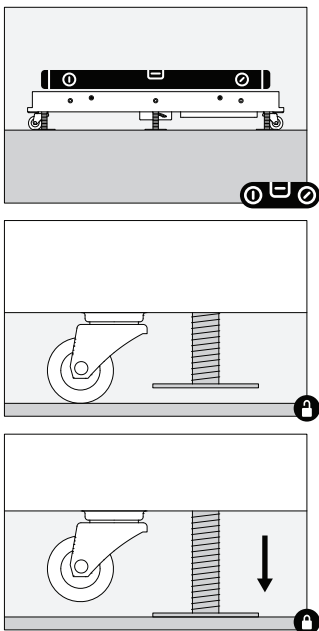



2

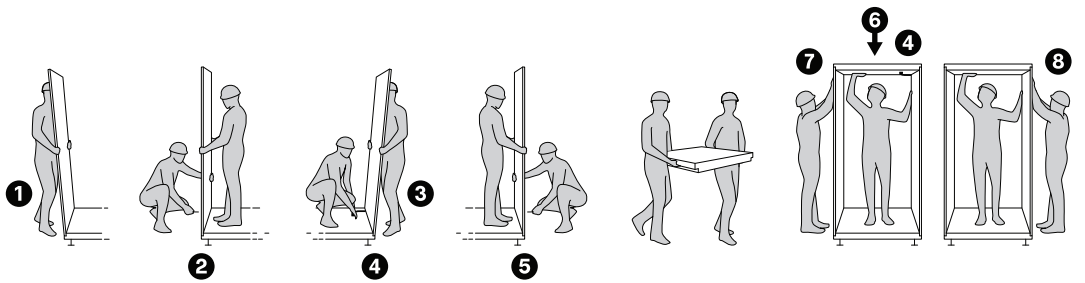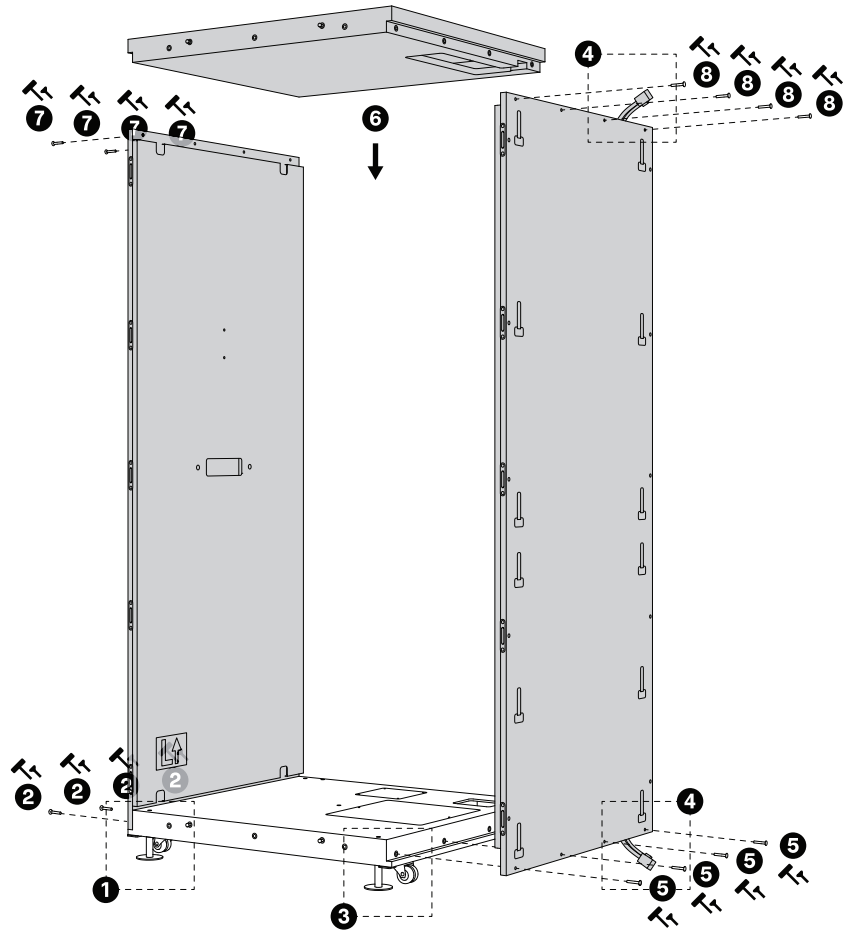




A x16 with
T-Handle Hex Key 4

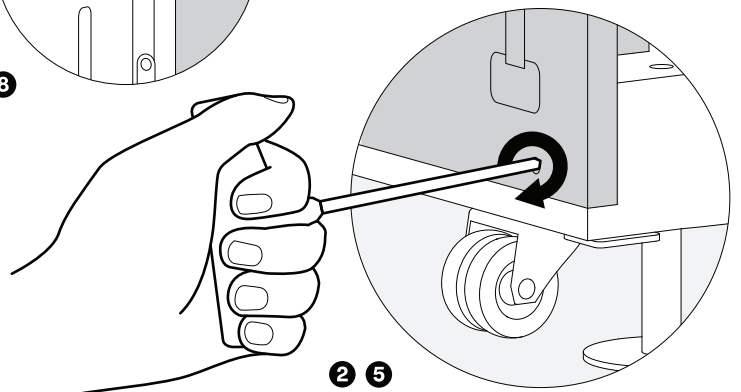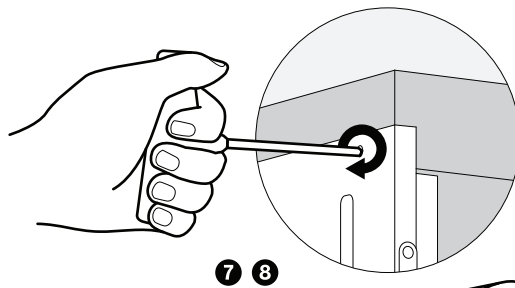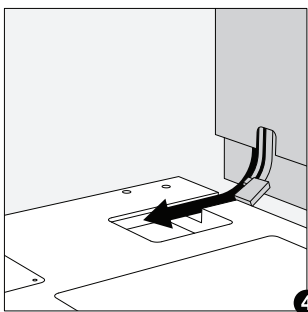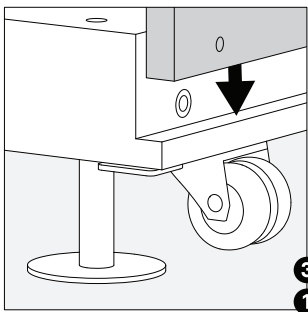

3

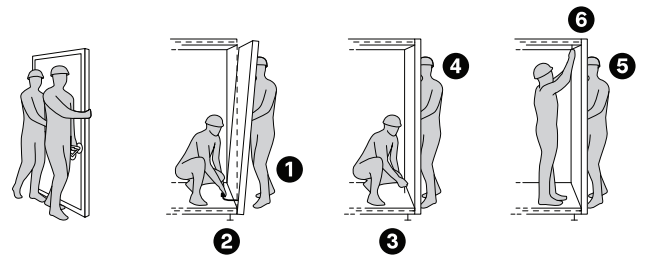
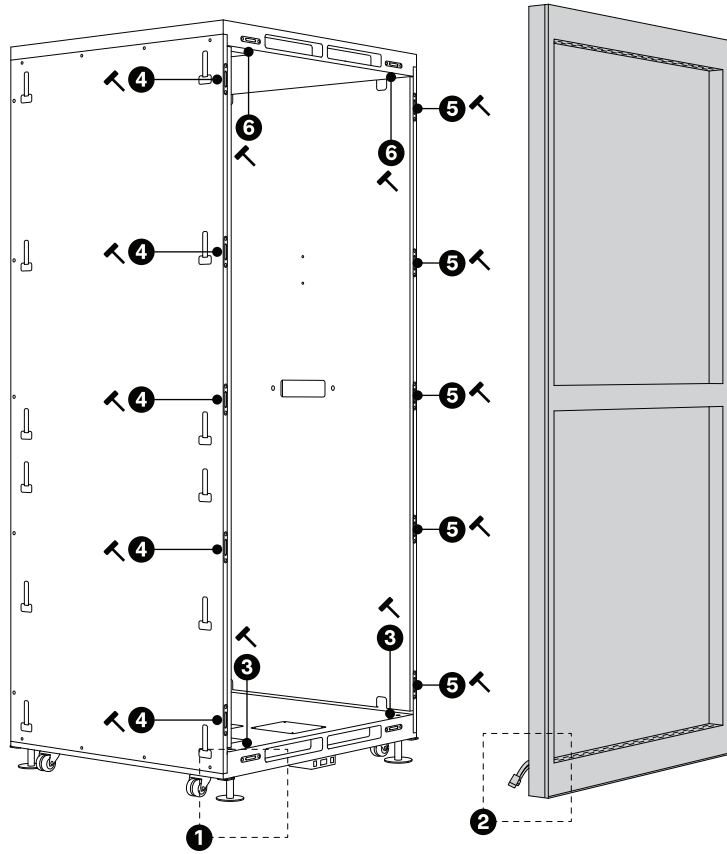


T-Handle Hex Key 4
Suction cup handles

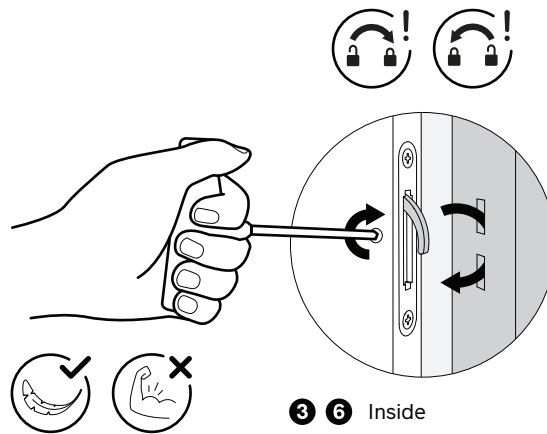
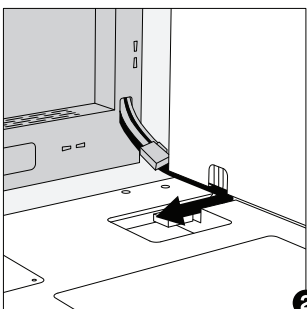
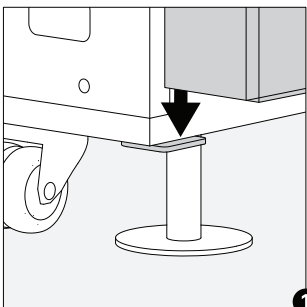


3 6 Inside
4 5 Outside


4

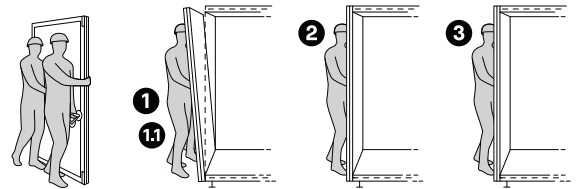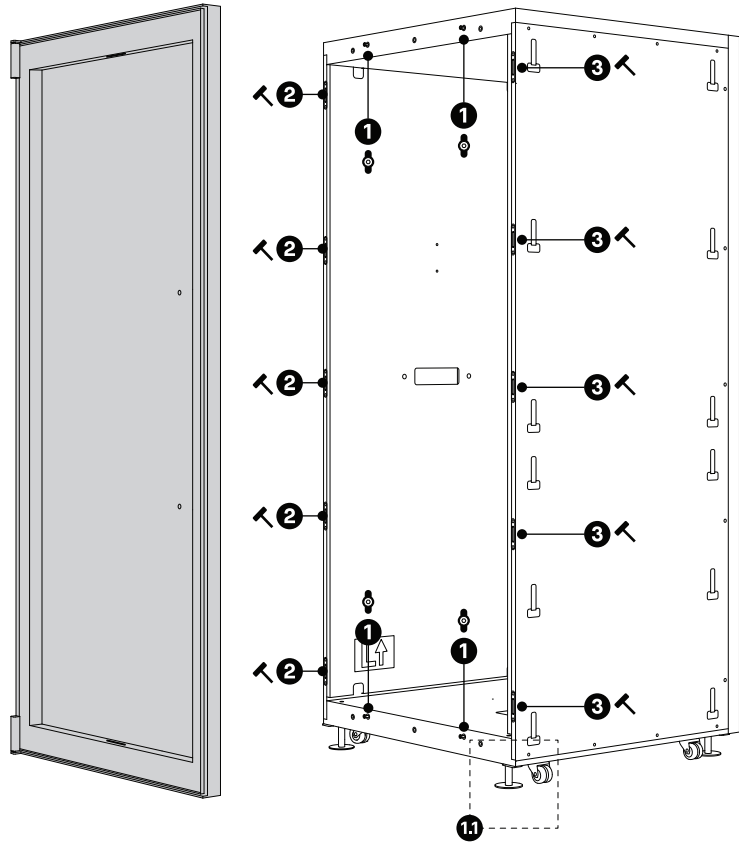

T-Handle Hex Key 4
Suction cup handles

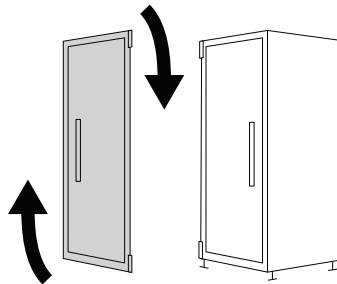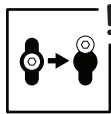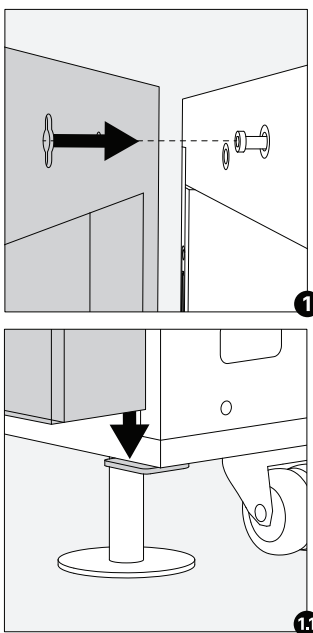



The door opening can be oriented **Left** or **Right** just by rotating the frame.

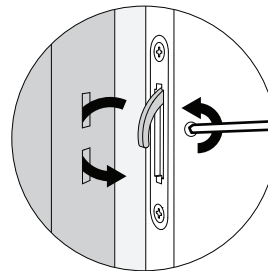

2 3 Outside








5

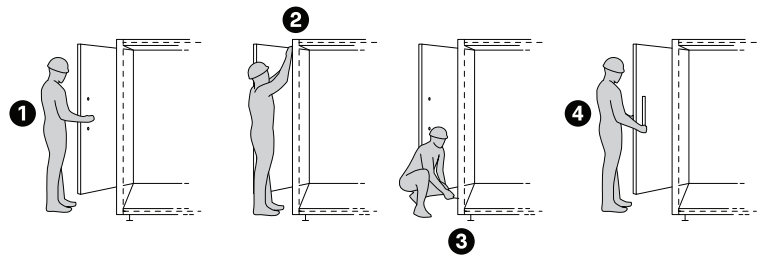
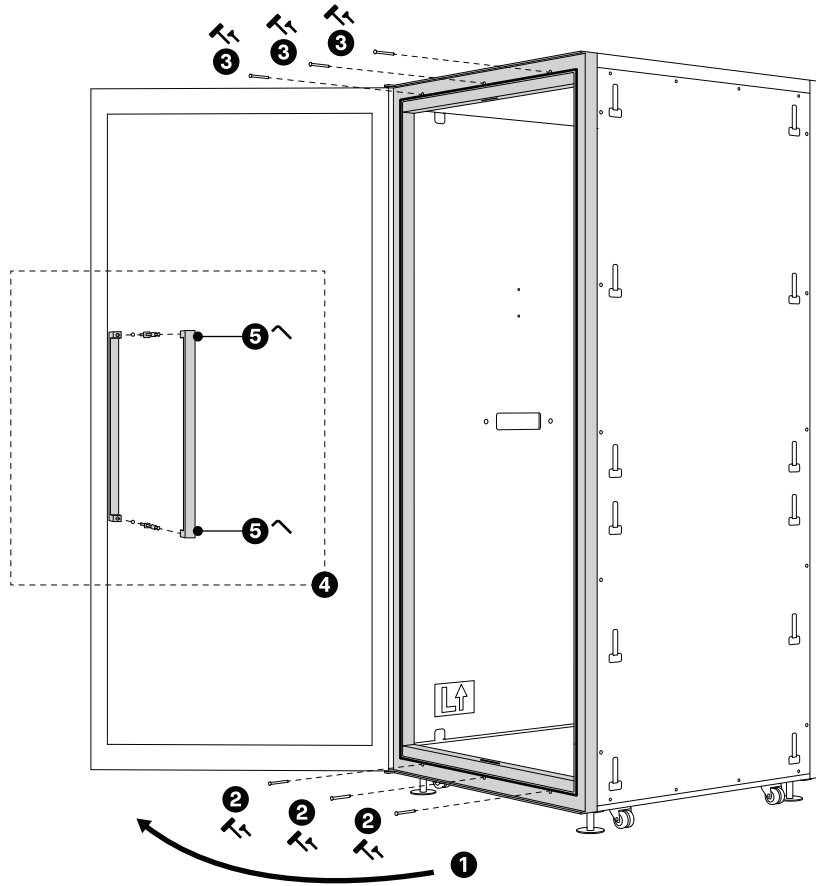


B x6 with
T-Handle Hex Key 4




C x2 with
Allen Key 3

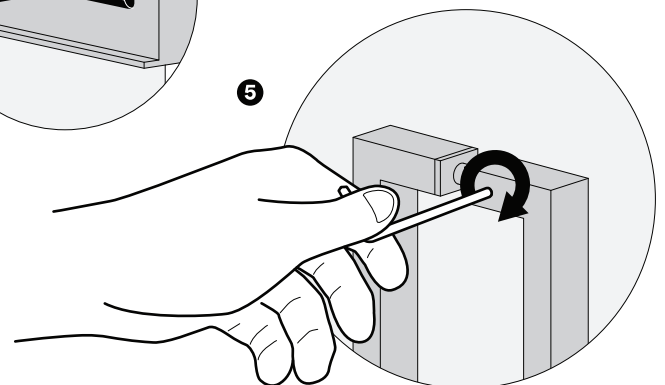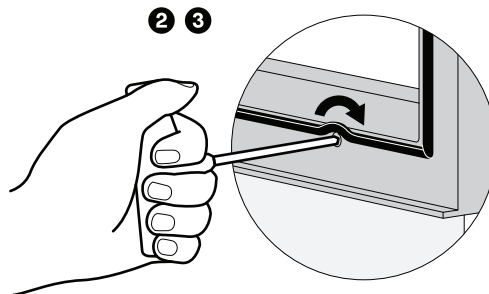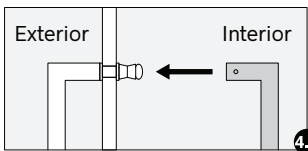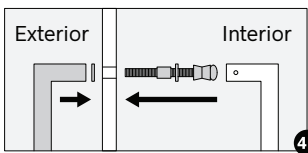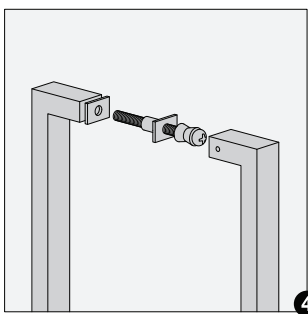

6

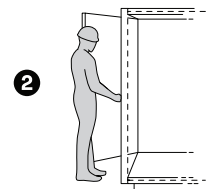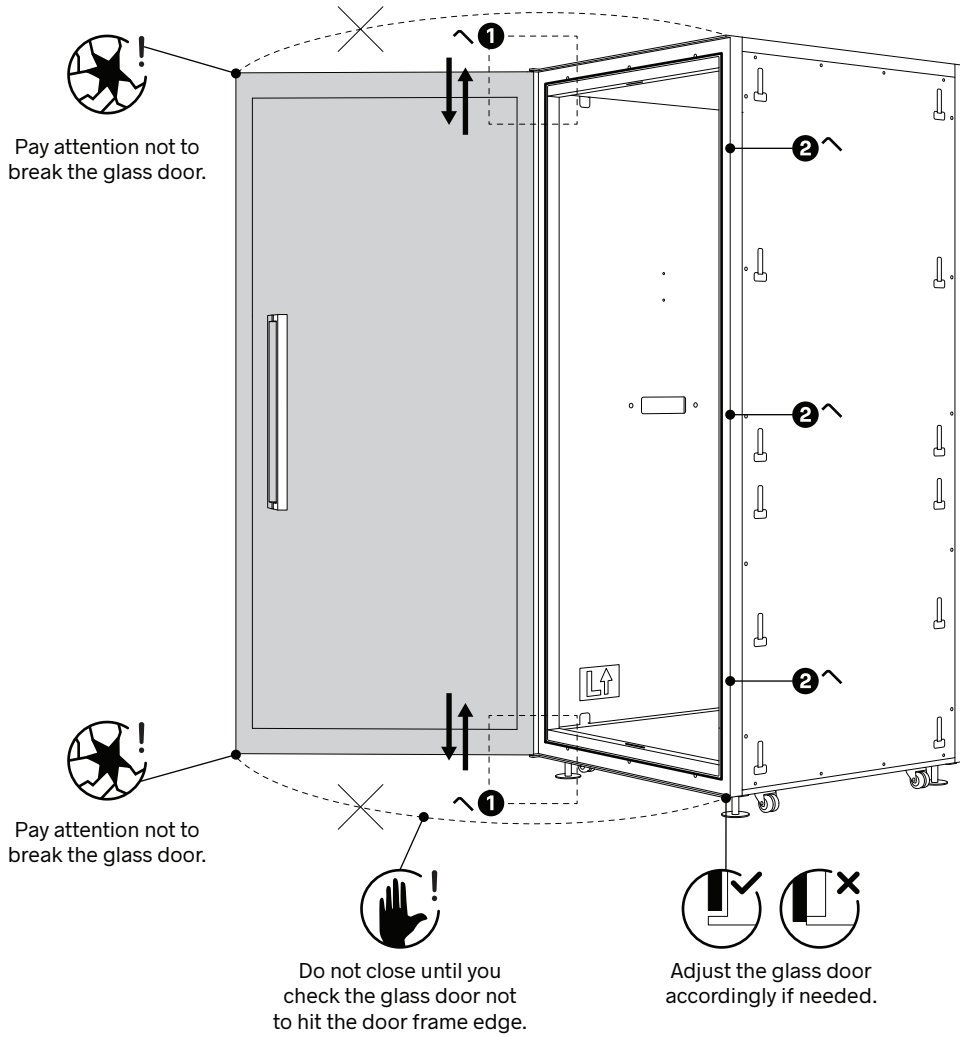

Allen Key 3
Allen Key 1.5

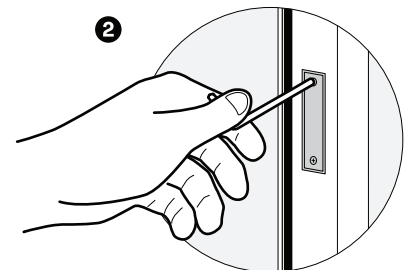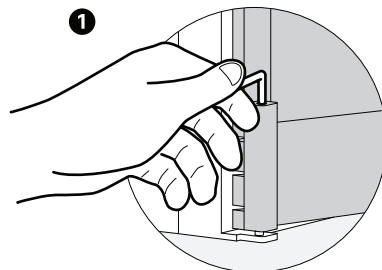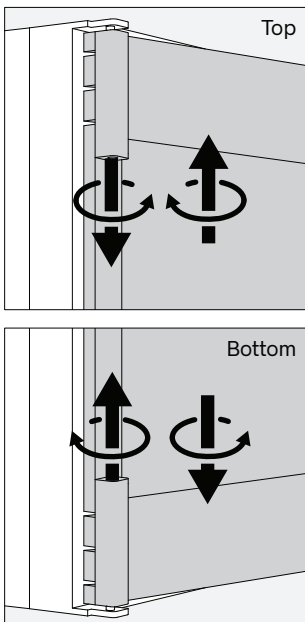

To adjust the glass door the height must be calibrated. If you need to raise the glass door, you loosen the top hinge and tighten the bottom hinge.



If you need to lower the glass door, you loosen the bottom hinge and tighten the top hinge.









Check if the door closes properly and adjust the door plates if needed.




Tighten or loosen the plates when needed.



7

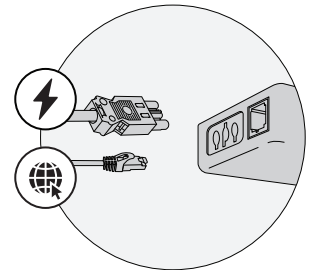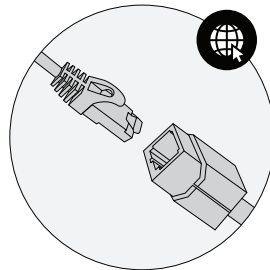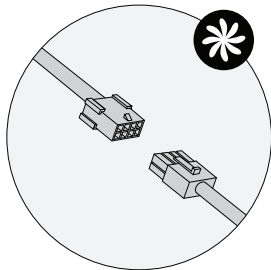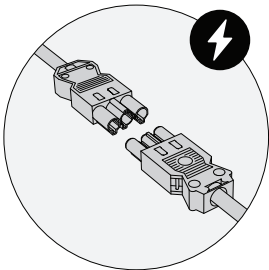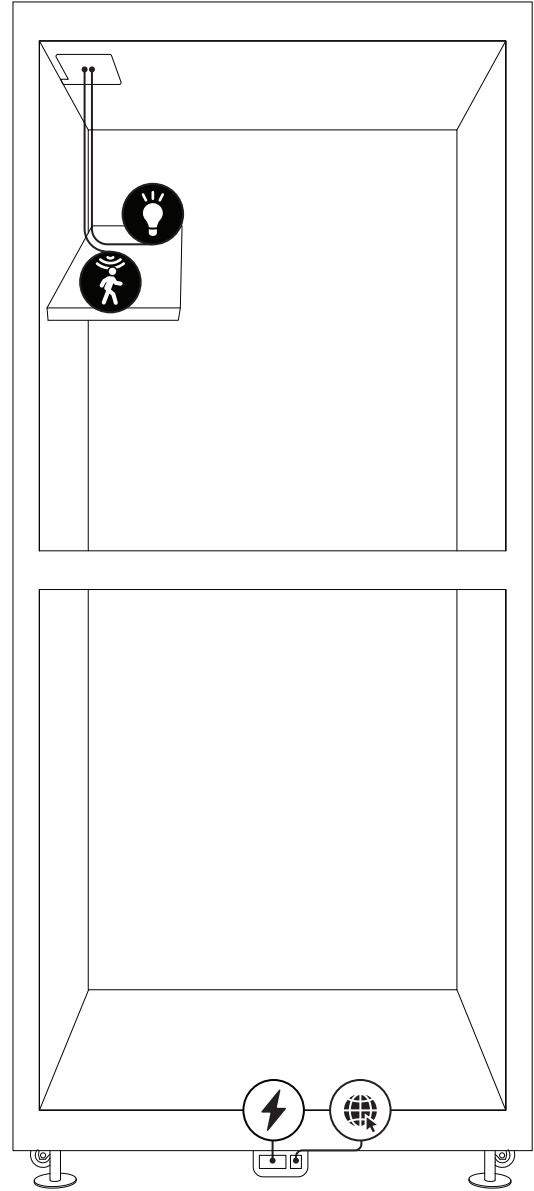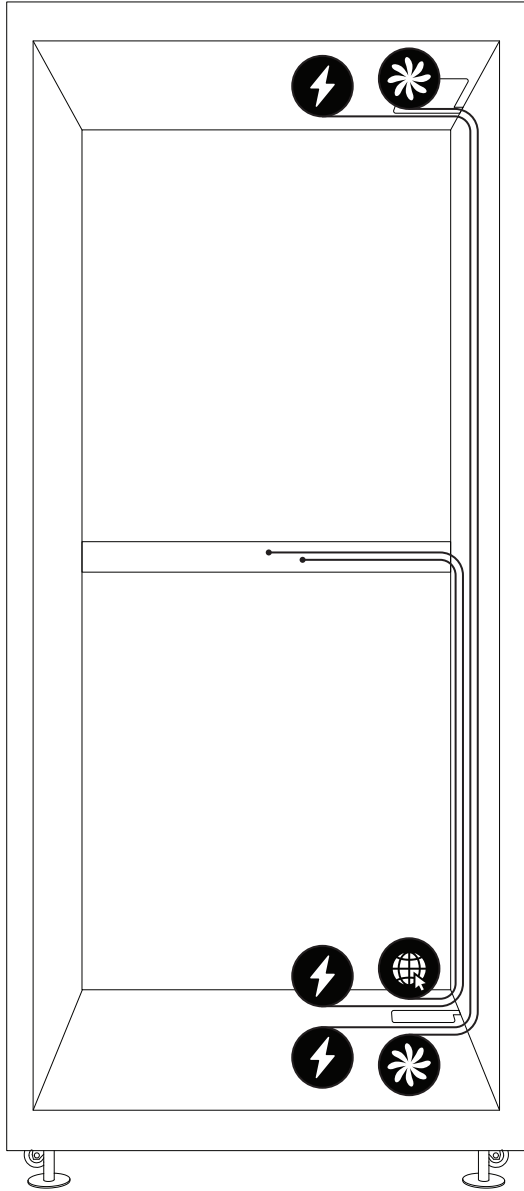

Orange



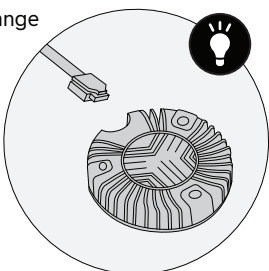











Black

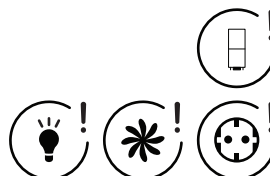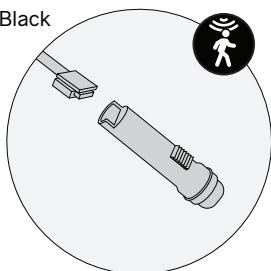


Main Power & Ethernet supply at the back of the pod.


Check if the lighting, ventilation and power sockets are connected properly.

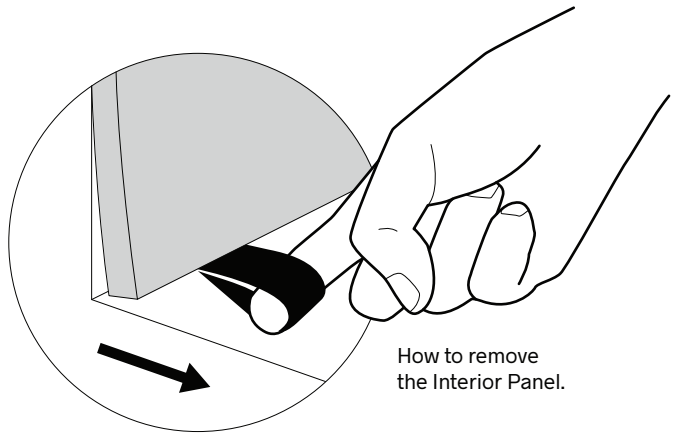
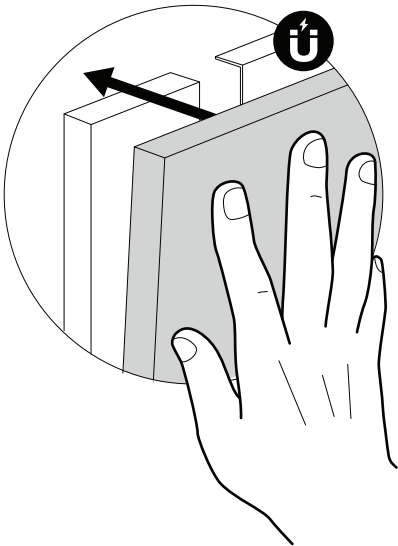
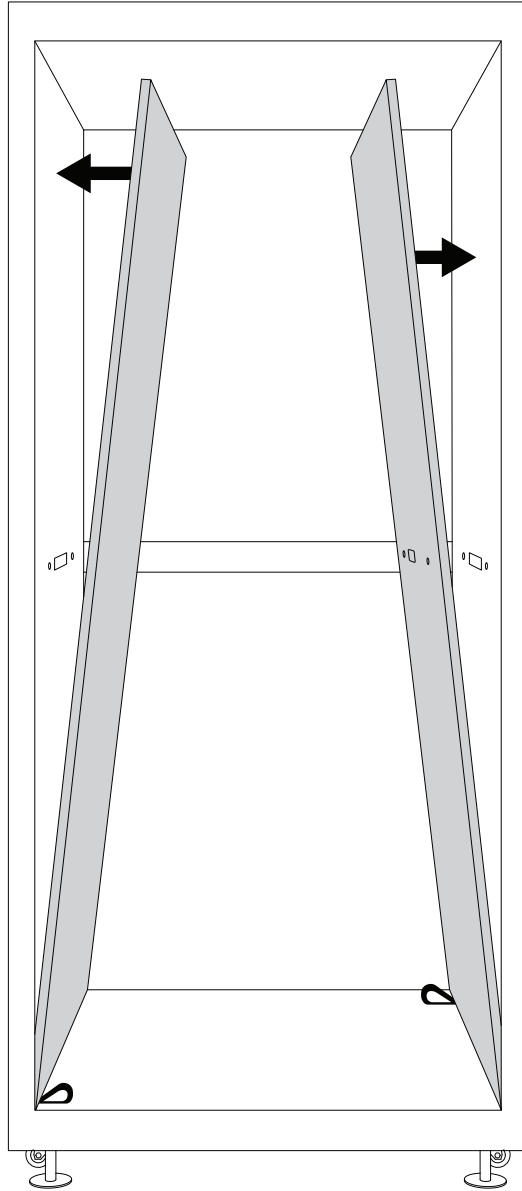


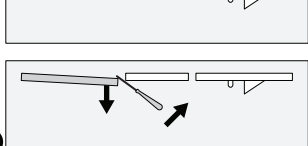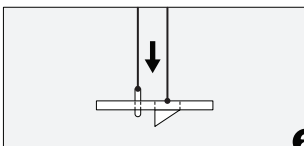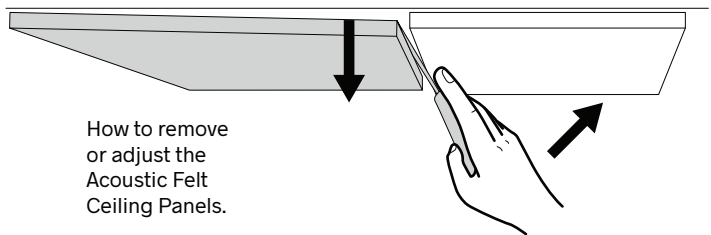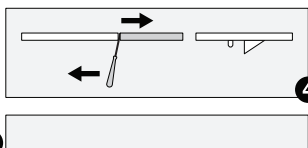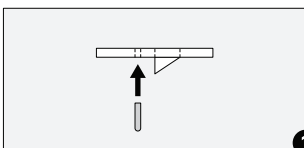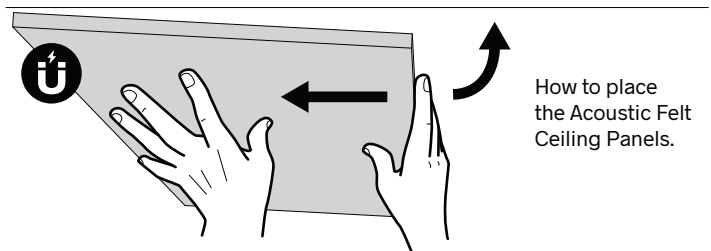
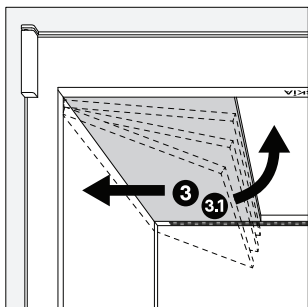
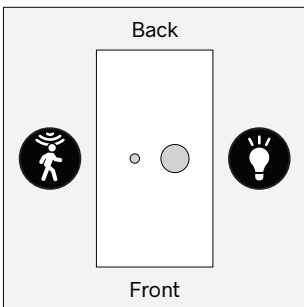
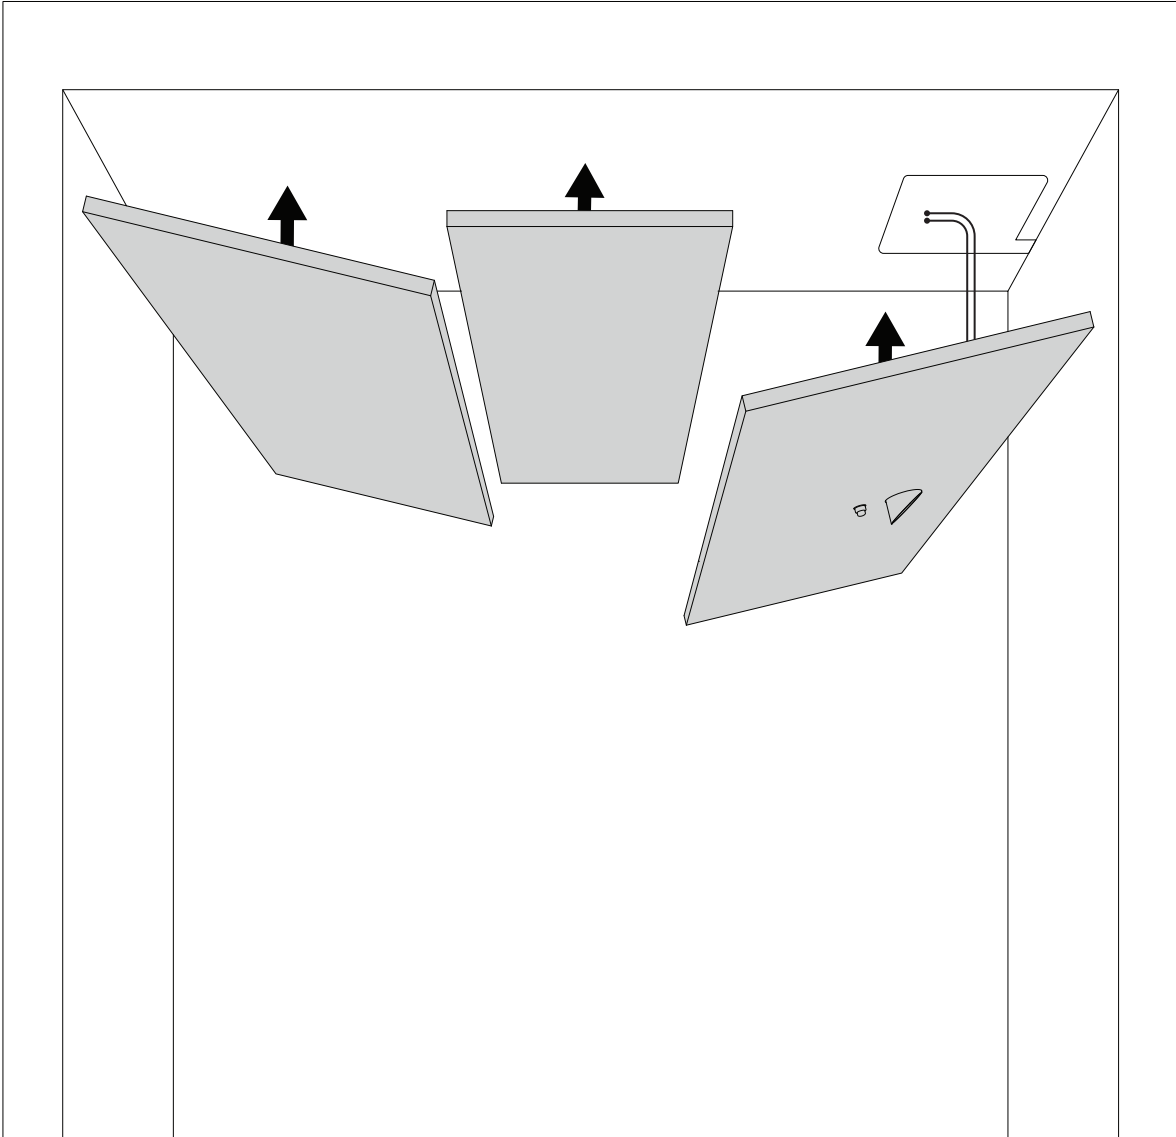


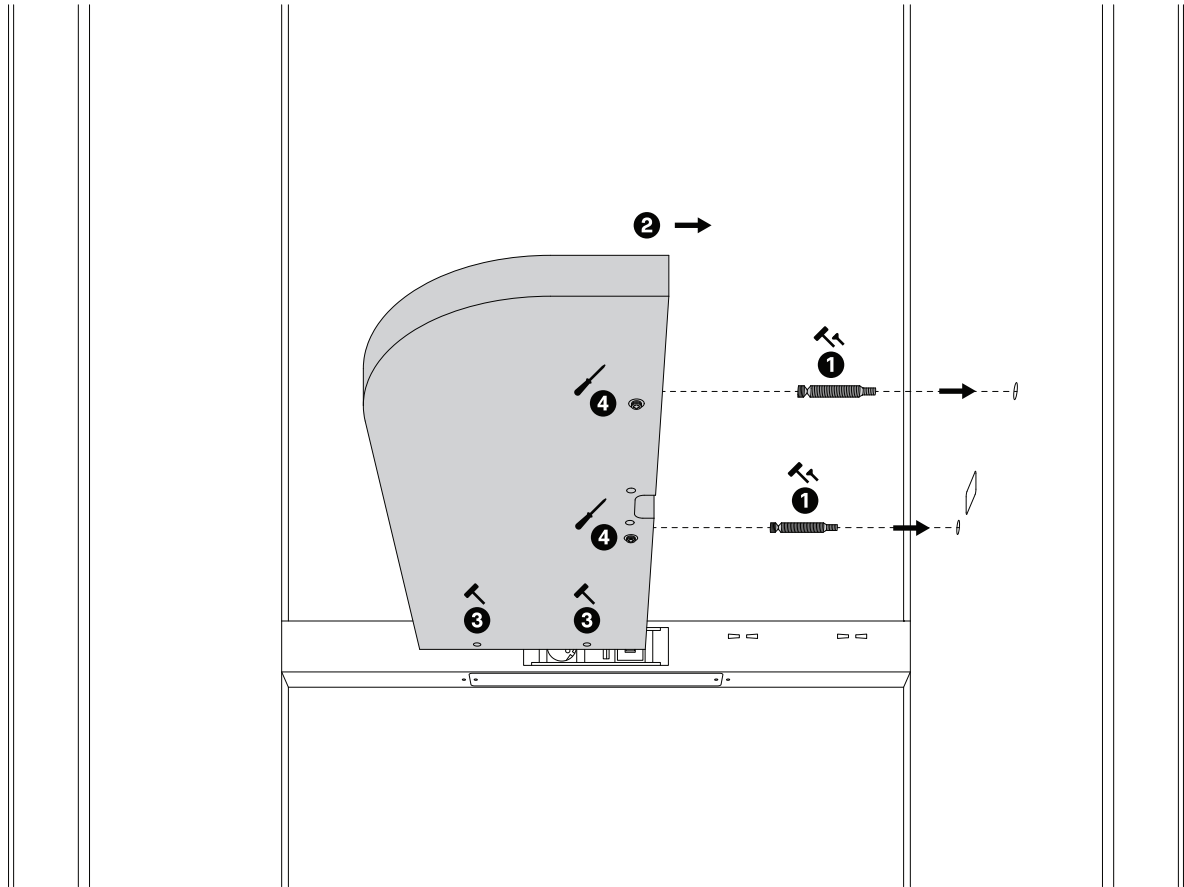

D x2 with
T-Handle Hex Key 5
T-Handle Hex Key 4
Screwdriver (Not Included)

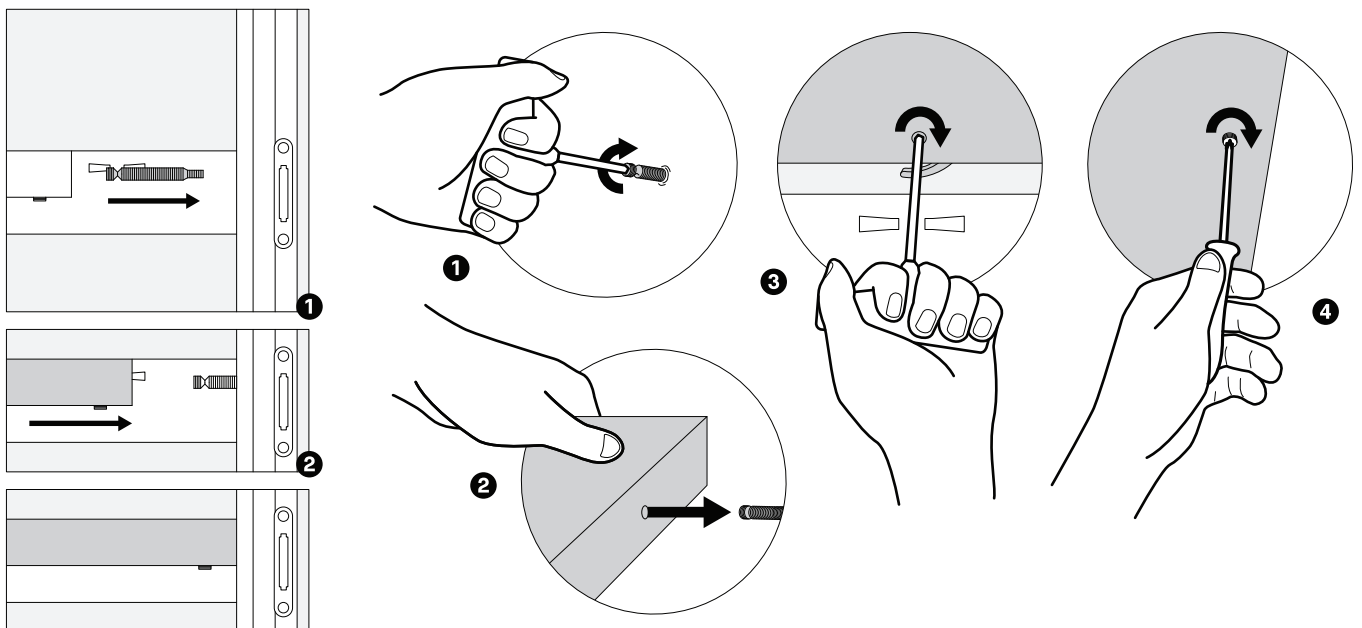

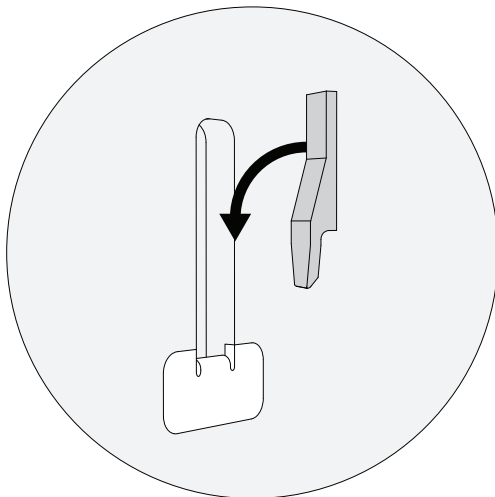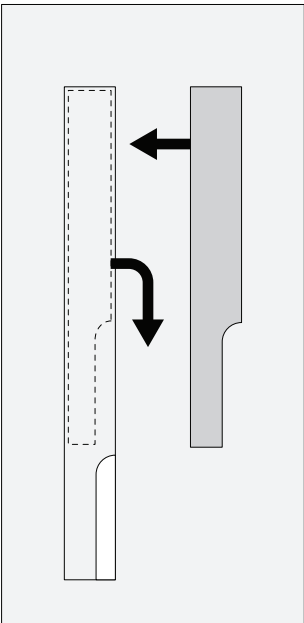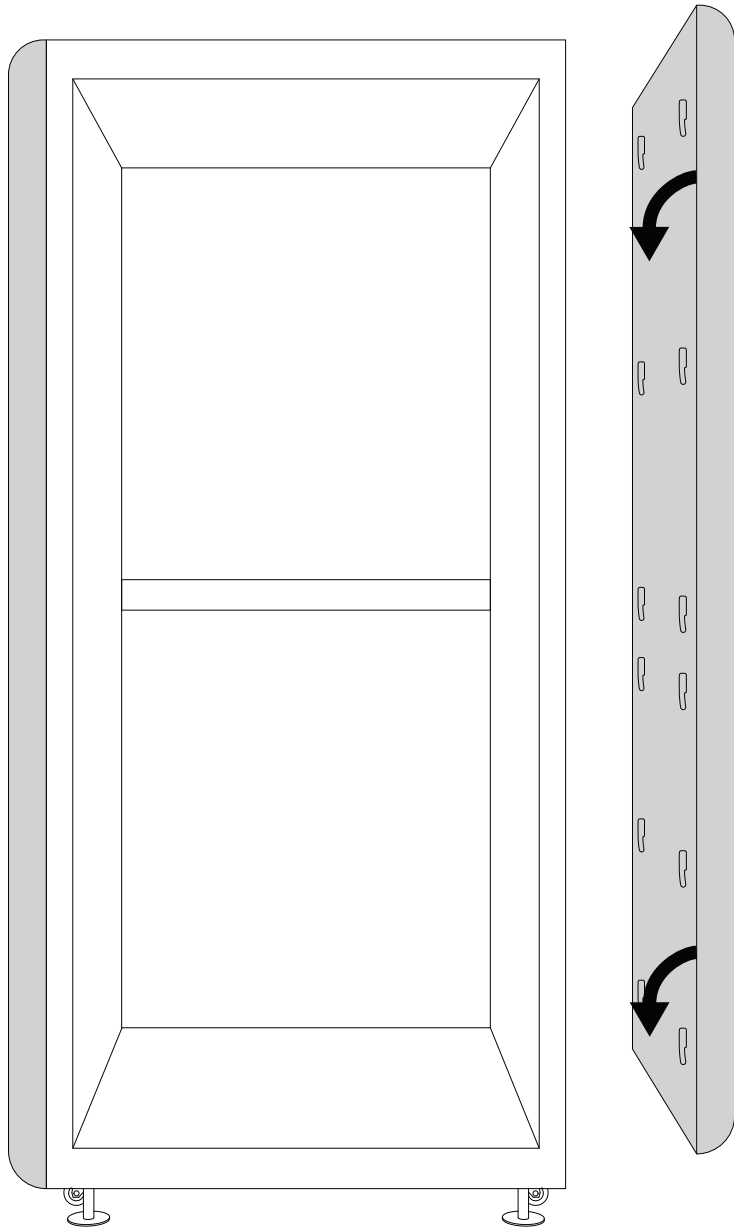

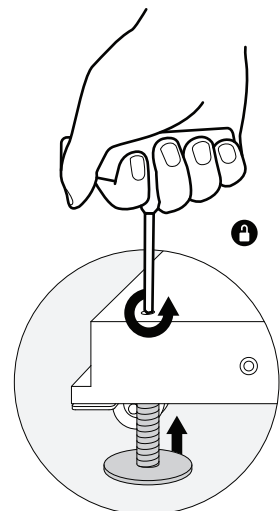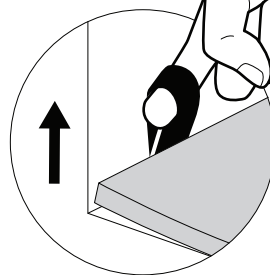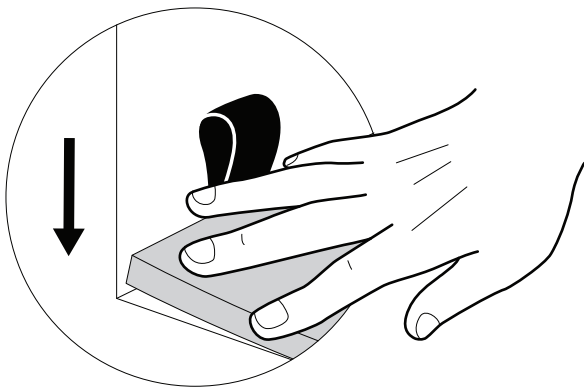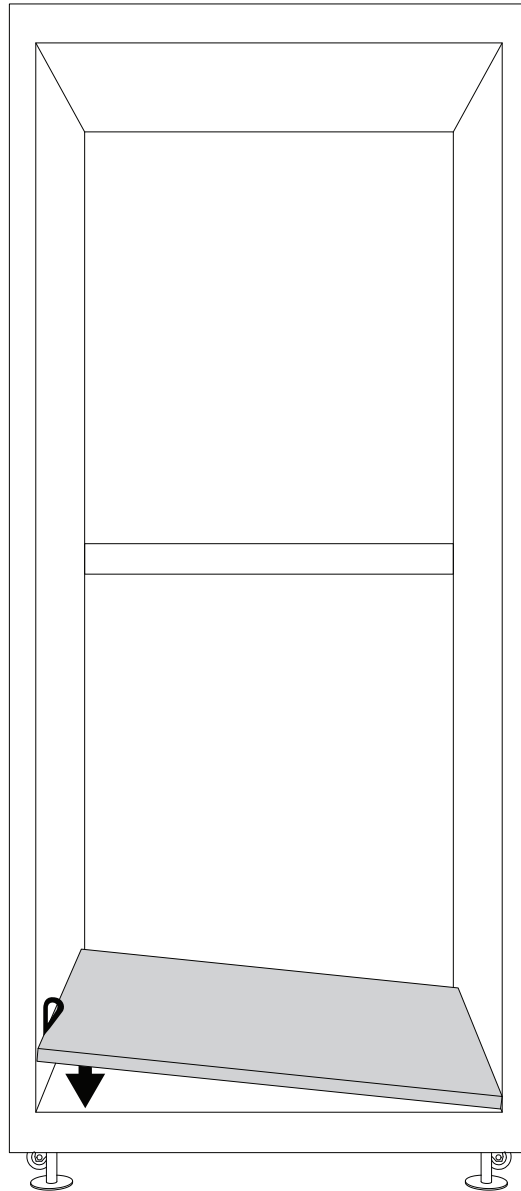

If you are satisfied with the pod's position, you can place the carpets.



If you want to reposition the pod, you have to remove the carpet, if needed, and unlock the legs. When you are satisfied with the pod's position, lock the legs and place the carpets.

Info.

ASSEMBLY INSTRUCTIONS

1 2 3 Steps.

A B C Bag with screws.

🔓 Unlocked.

🔒 Lock.

📏 Level check.

🔑 Allen key needed.

🔑 Allen key and screws needed.

🔑 T-Handle hex key needed.

🔑 T-Handle hex key and screws needed.

💡 Position the door on pins.

🔧 Screwdriver needed.

🔧 Powerrill needed.

🔄 Move in place.



Main Internet supply.



Main Power supply.



Ventilation coupling.



Power coupling.



Ethernet coupling.




Lighting coupling.



Motion sensor coupling.



Magnetic coupling element.



Pay attention to.



Pay attention to.



Do.



Don't.




Pay attention not to break the glass.



Ok.



Stop.

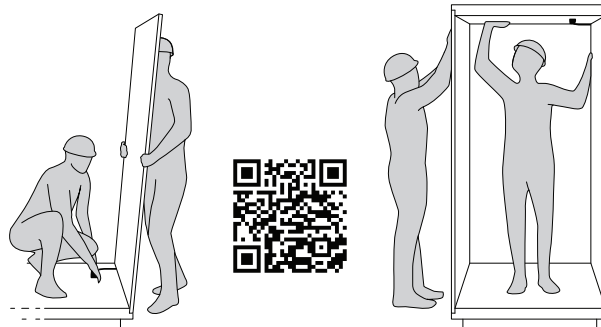

You can watch an instructional video of the K1 assembly process. Thanks to the modular design and limited number of components used for each pod, many steps are similar between different Kameleon pods.

ASKIA

Eliade Tower,
Mircea Eliade No.18
RO-Bucharest, 012015

T +40 212 121 381
contact@askiafurniture.ro

www.askiafurniture.ro
Last update: 12.11.2021