
Kameleon K1.5/K1.5+

ASSEMBLY INSTRUCTIONS

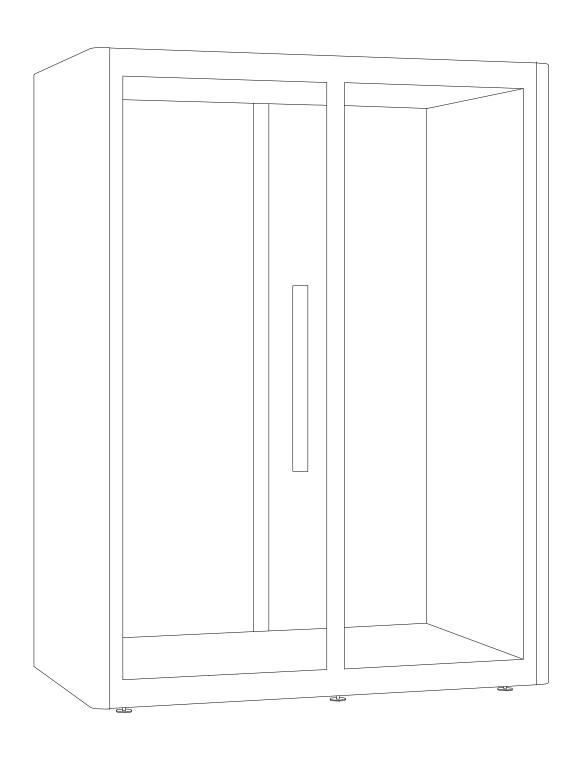



Info.

ASSEMBLY INSTRUCTIONS

1 2 3 Steps.

A B G Bag with screws.

0 Unlocked.

0 Lock.

Level check.

Allen key needed.

1 Allen key and screws needed.

< T-Handle hex key needed.

4 T-Handle hex key and screws needed.

ø Position the door on pins.

Screwdriver needed.

Power Drill needed.

Move in place.

Main Ethernet supply.



Main Power supply.



Ventilation coupling.



Power coupling.



Ethernet coupling.



Lighting coupling.



Motion sensor coupling.



Magnetic coupling element.



Ok.

Do.

Don't.

Pay attention to.

Pay attention to.

Pay attention not

to break the glass.



Stop.



Whiteboard.




Pinboard.



VESA Adapter.


Included

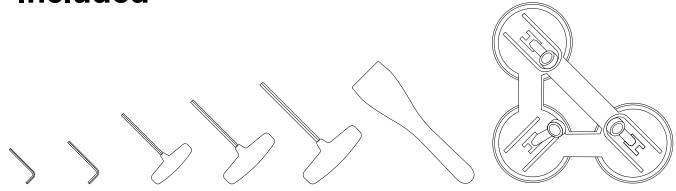

x1 Allen Key 2 x1 Allen Key 3 x1 T-Handle Hex Key 4 x1 T-Handle Hex Key 5 x1 T-Handle Hex Key 7

x1 Ceiling Panels Adjuster

x2 Sucction cups



















Assembly in 40 min. with 3 people

Elements

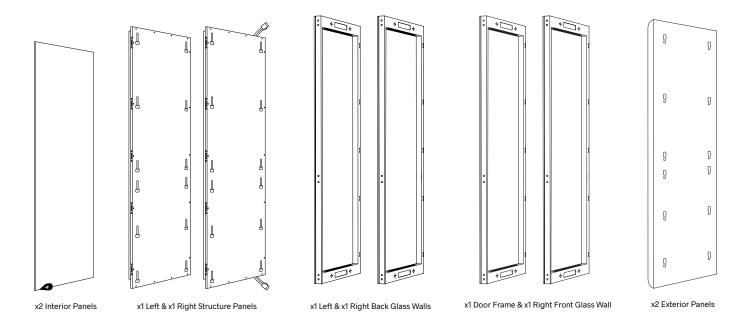

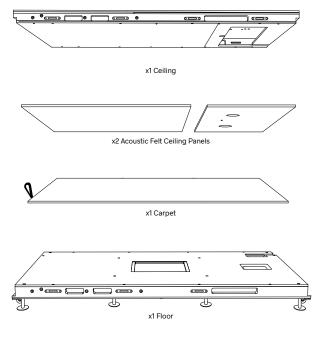





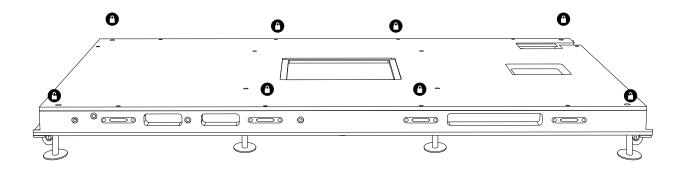




T-Handle Hex Key 4

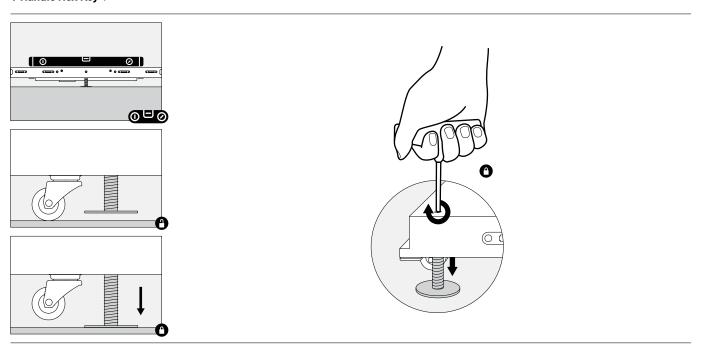


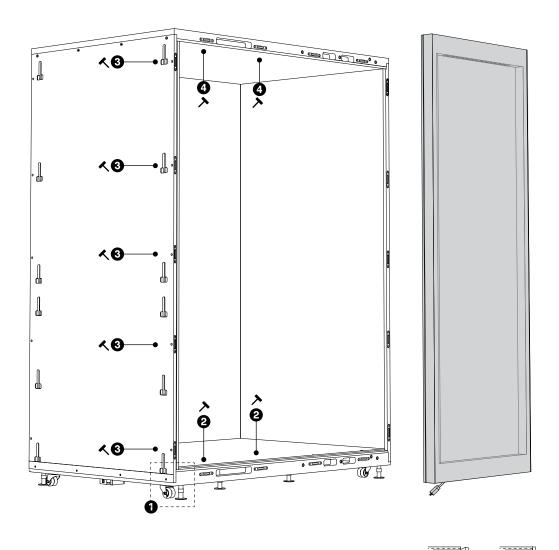


T-Handle Hex Key 7 Sucction cup handles

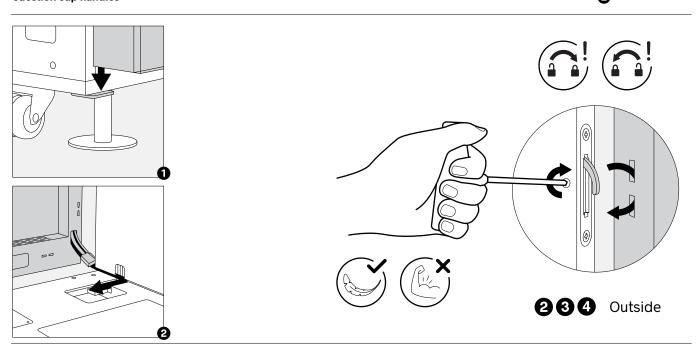


4

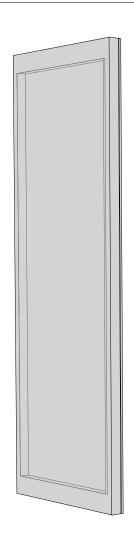

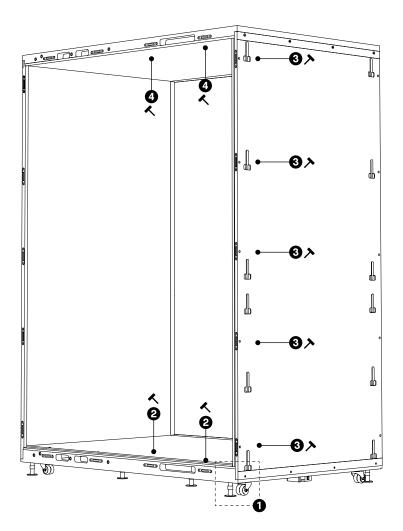










T-Handle Hex Key 7 Sucction cup handles

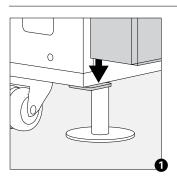


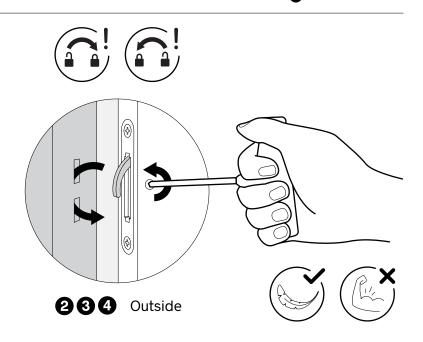



5

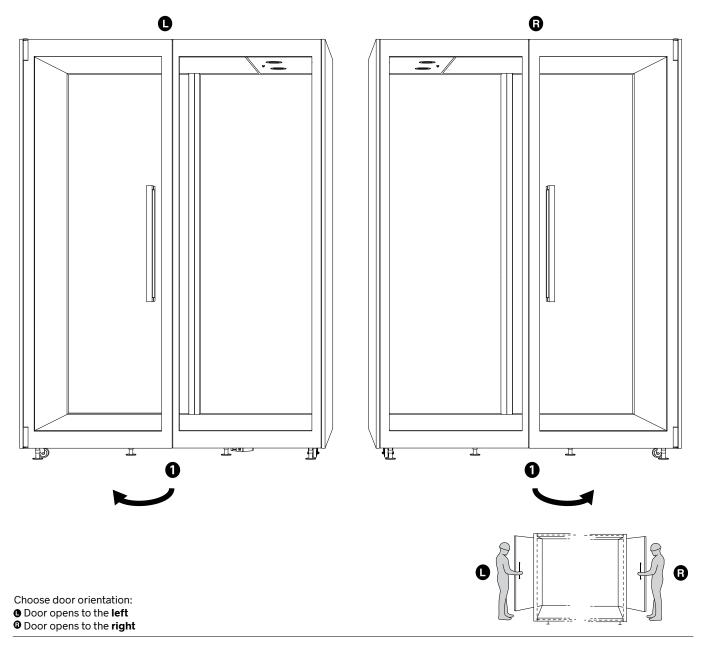


To swich from **L** to **R** see step **5.1**

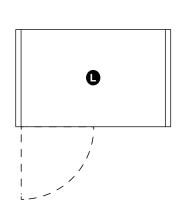


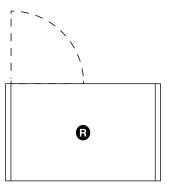


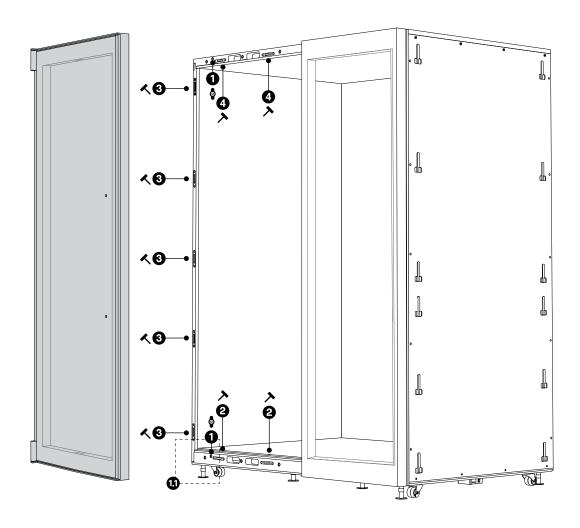



T-Handle Hex Key 7 Sucction cup handles

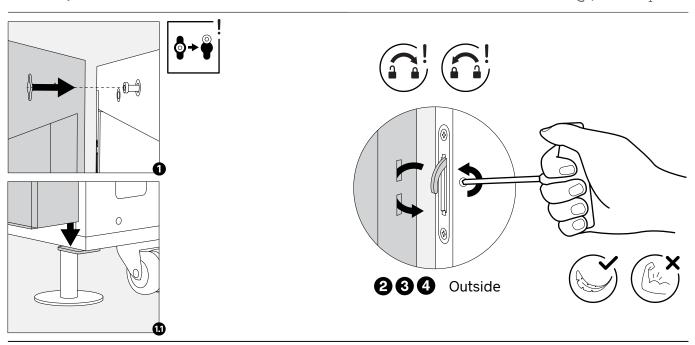


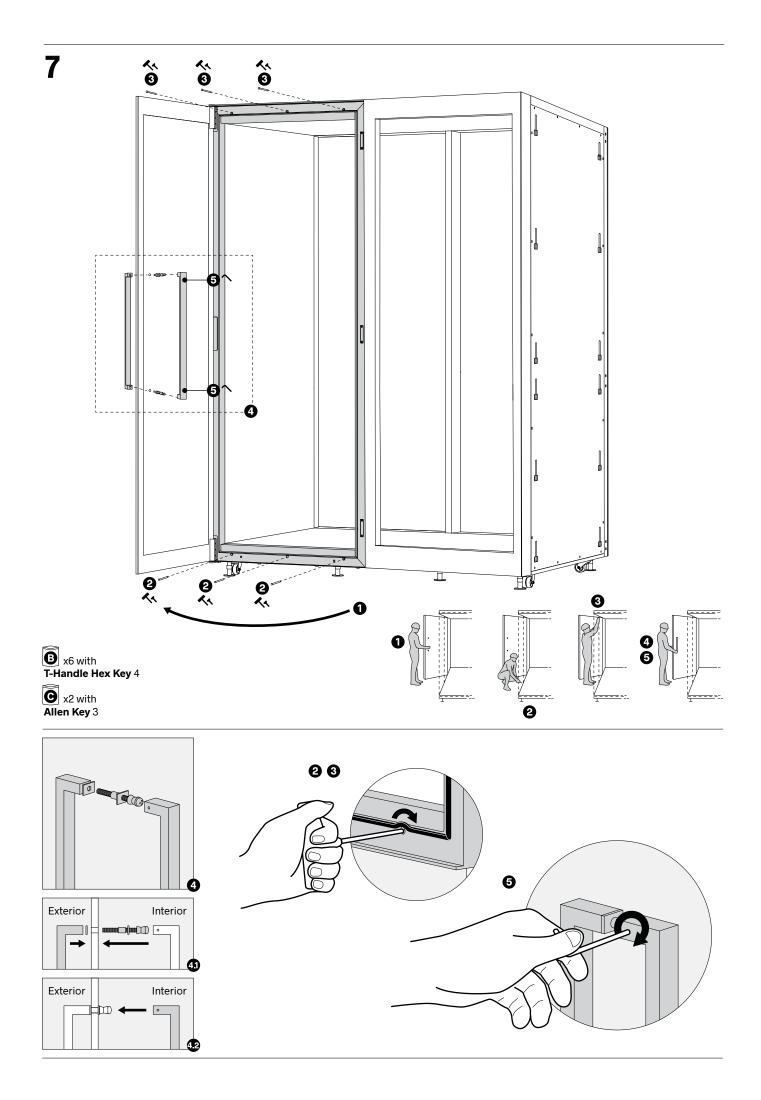

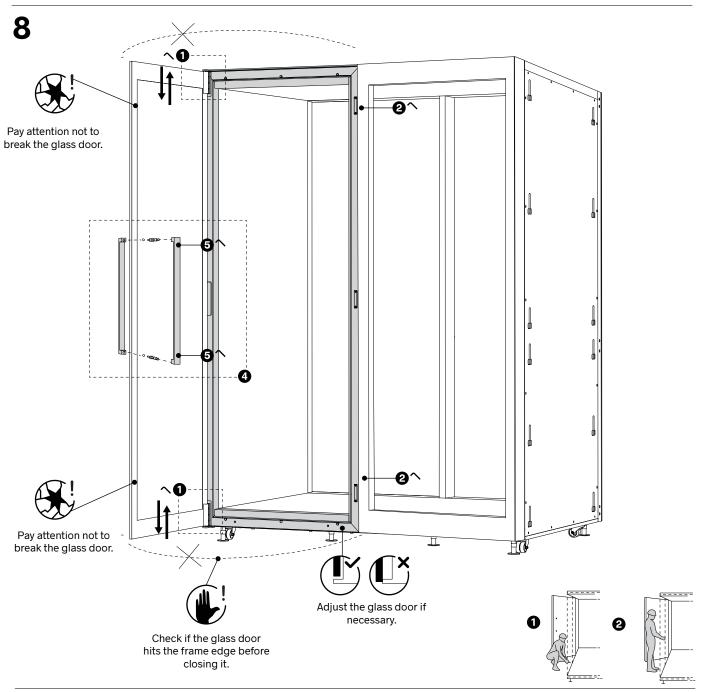

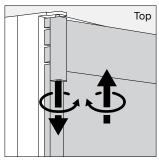

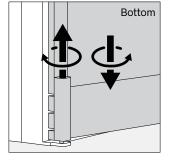

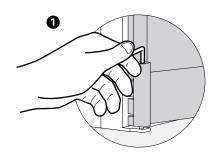

To adjust the glass door the height must be calibrated. If you need to raise the glass door, you loosen the top hinge and tighten the bottom hinge.





If you need to lower the glass door, you loosen the bottom hinge and tighten the top hinge.






Check if the door closes properly and adjust the door plates if needed.








Tighten or loosen the plates when needed.

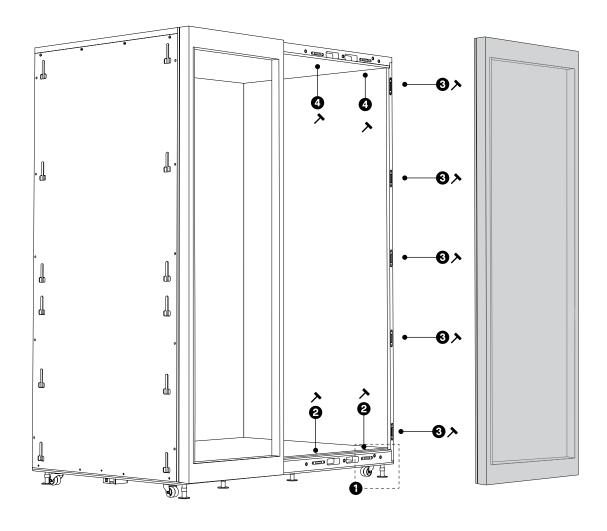



T-Handle Hex Key 7 Sucction cup handles

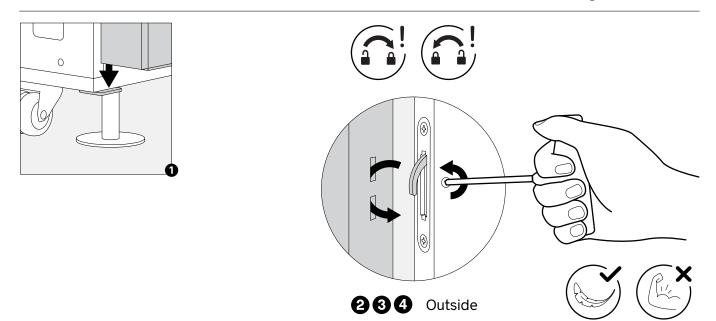


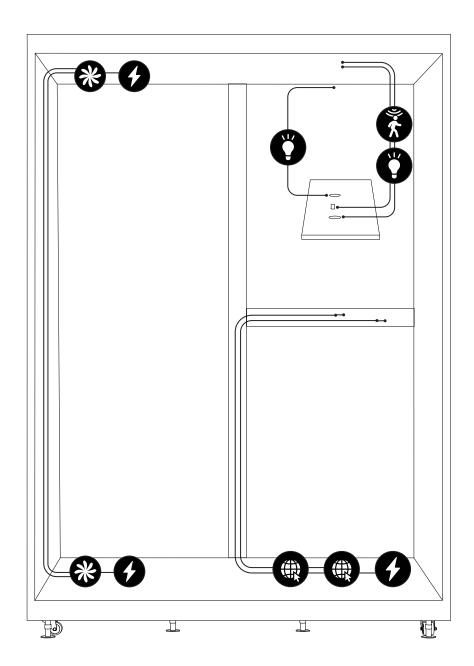

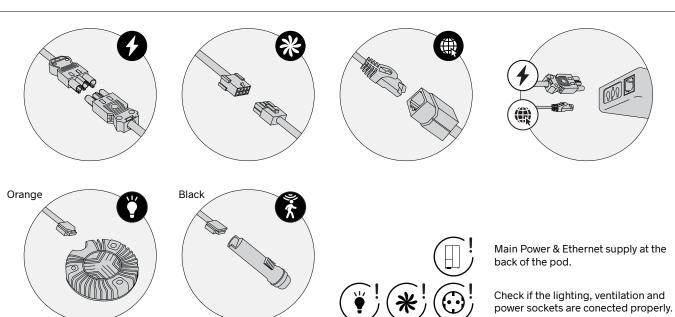


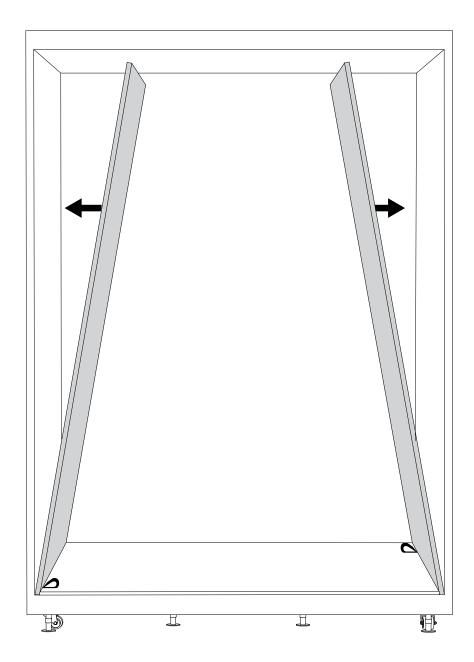

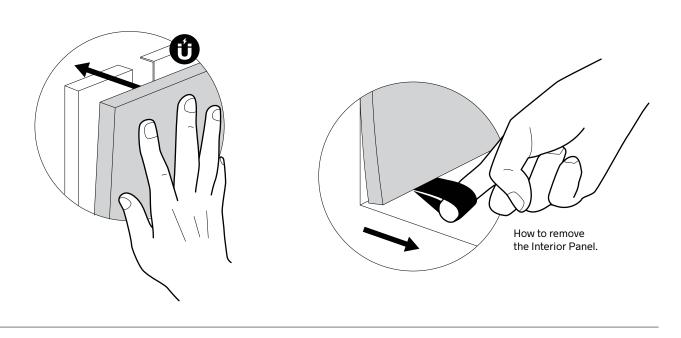


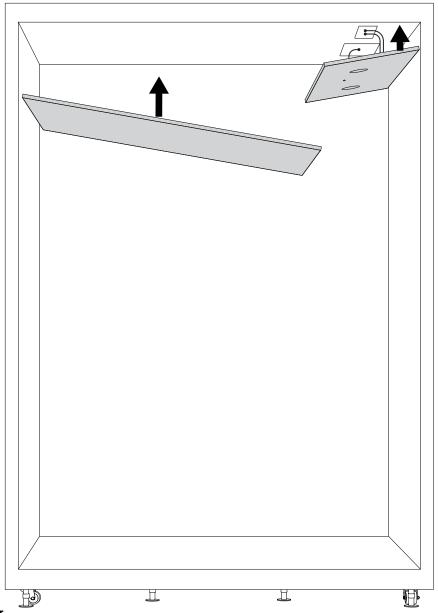


Ceiling Panels Adjuster

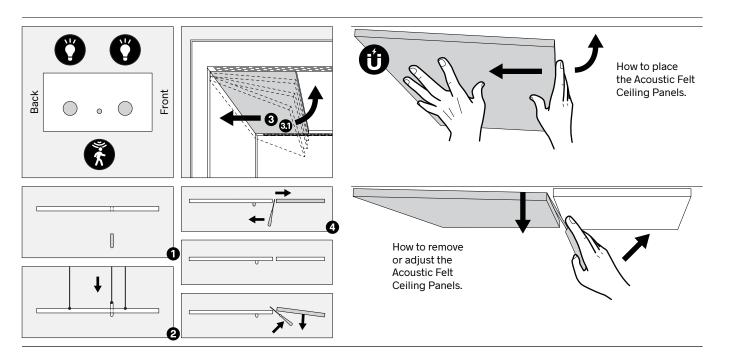



13 A

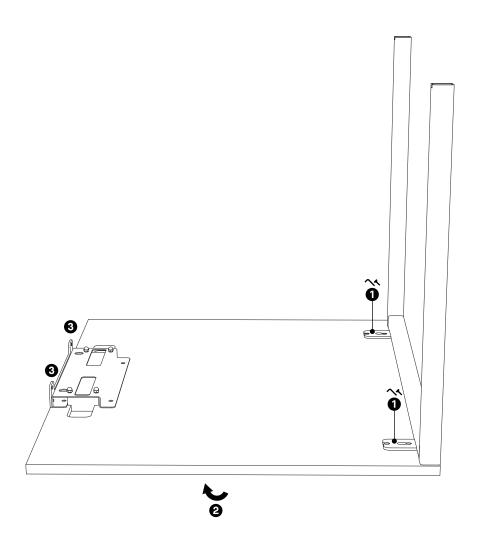


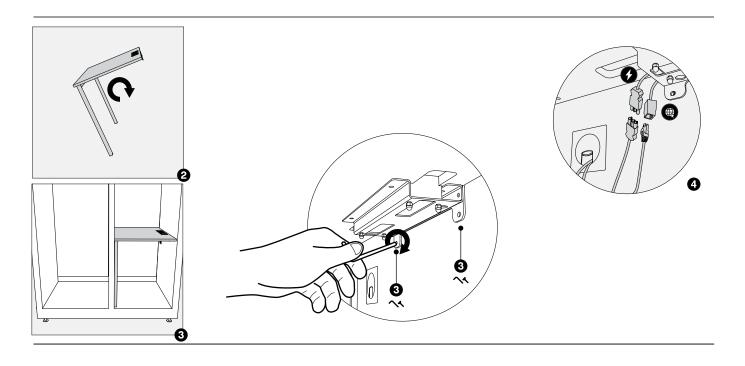



14 B

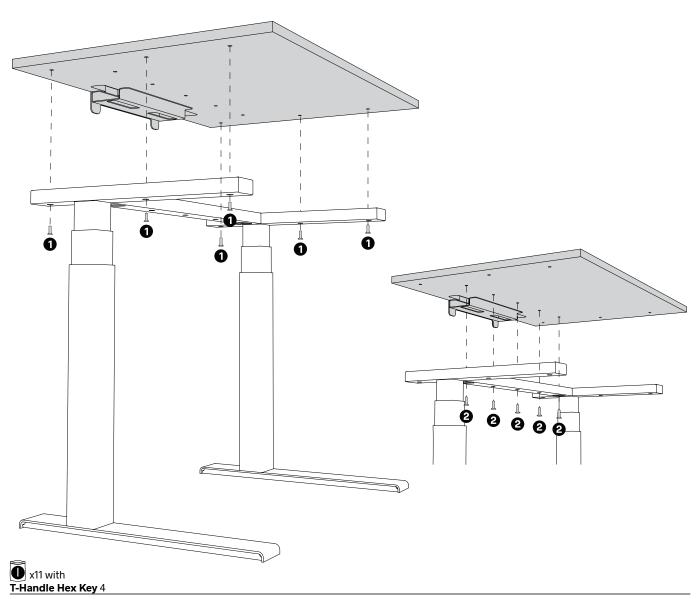


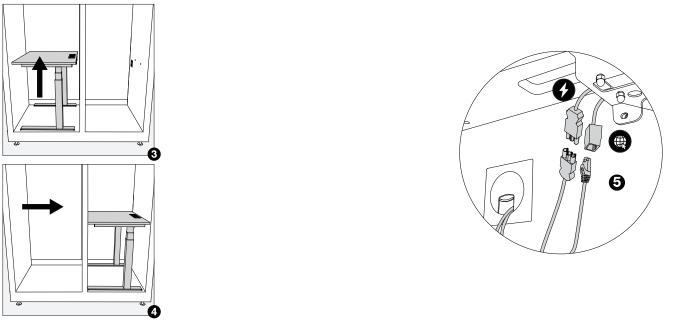

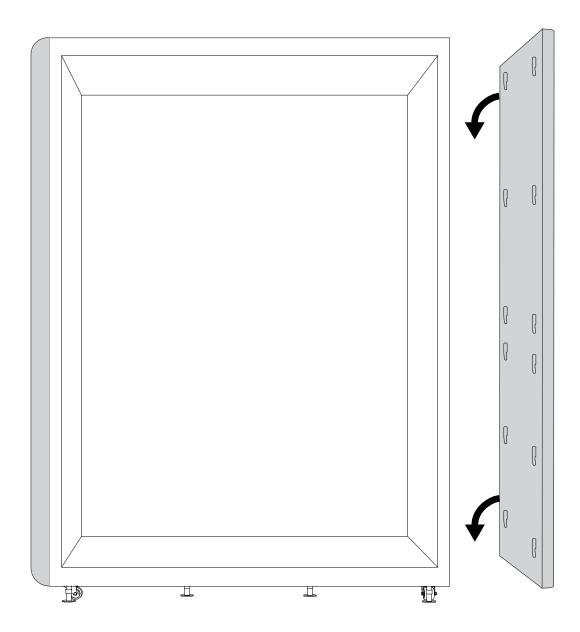

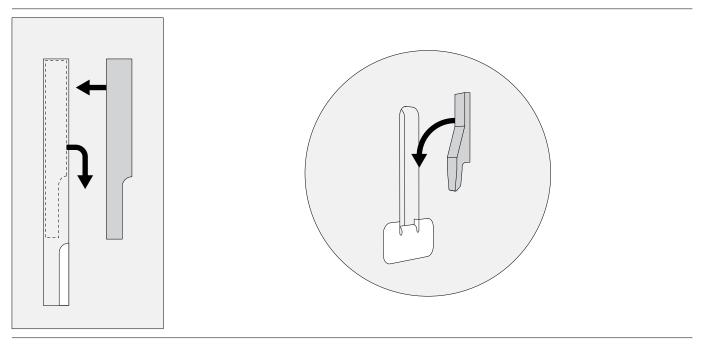


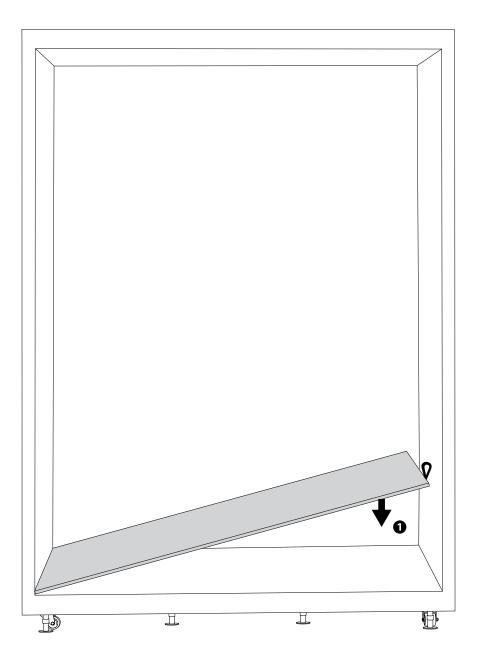

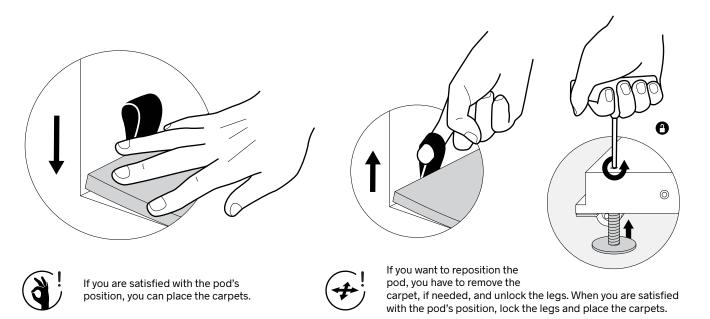


position, you can place the carpets.


Adjustable FAN and LED

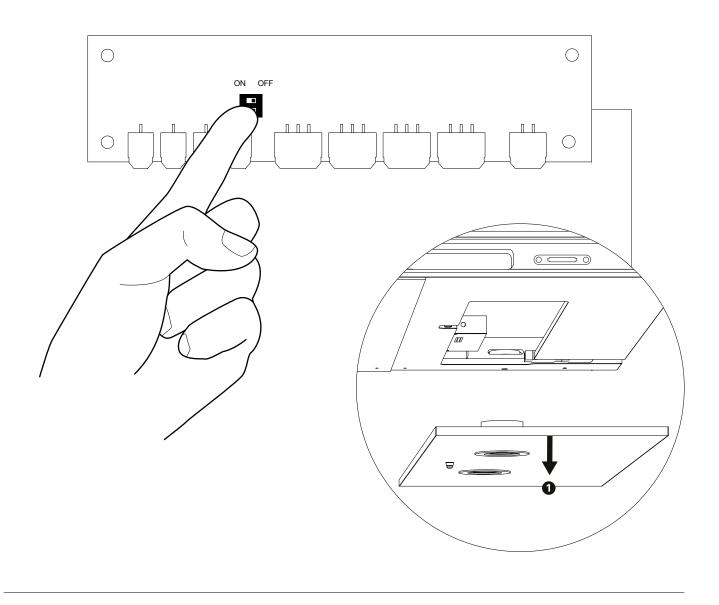




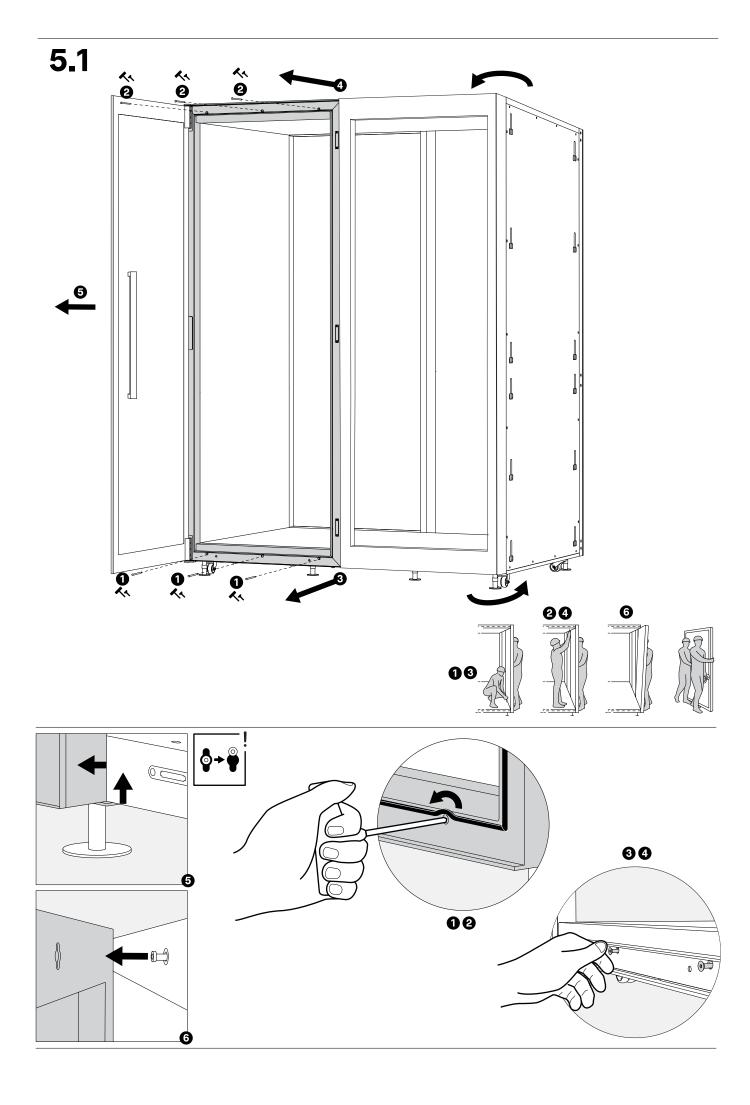



5.2

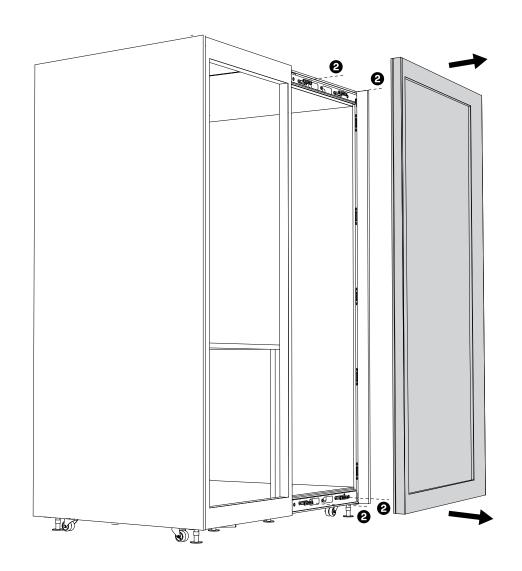





To finish assembly go back to step $6\,$

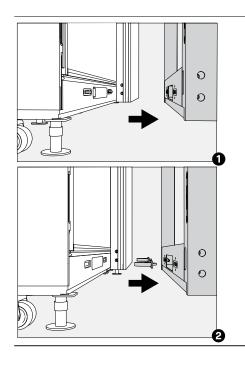

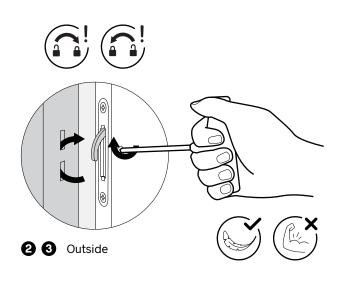

Scan

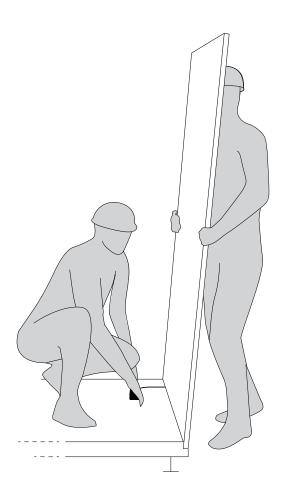

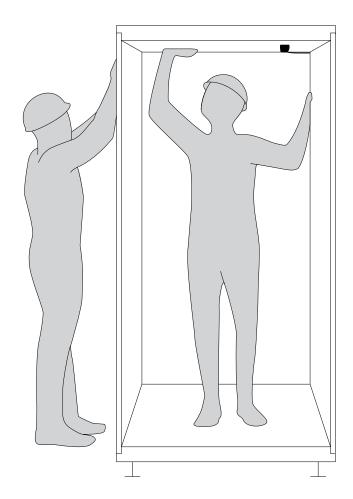




You can watch an instructional video of the K2 assembly process. Thanks to the modular design and limited number of components used for each pod, many steps are similar between different Kameleon pods.



Optional

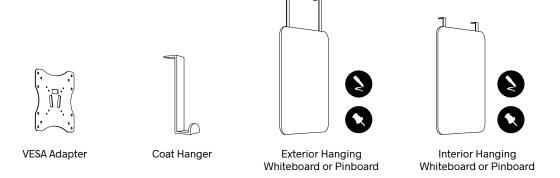



There are multiple features that you can personalize your pod with. You can view them for each Kameleon on our website www.askiafurniture.ro



Eliade Tower, Mircea Eliade No.18 RO-Bucharest, 012015

T +40 212 121 381 contact@askiafurniture.ro

www.askiafurniture.ro Last update: 06.02.2023