


Kameleon K7







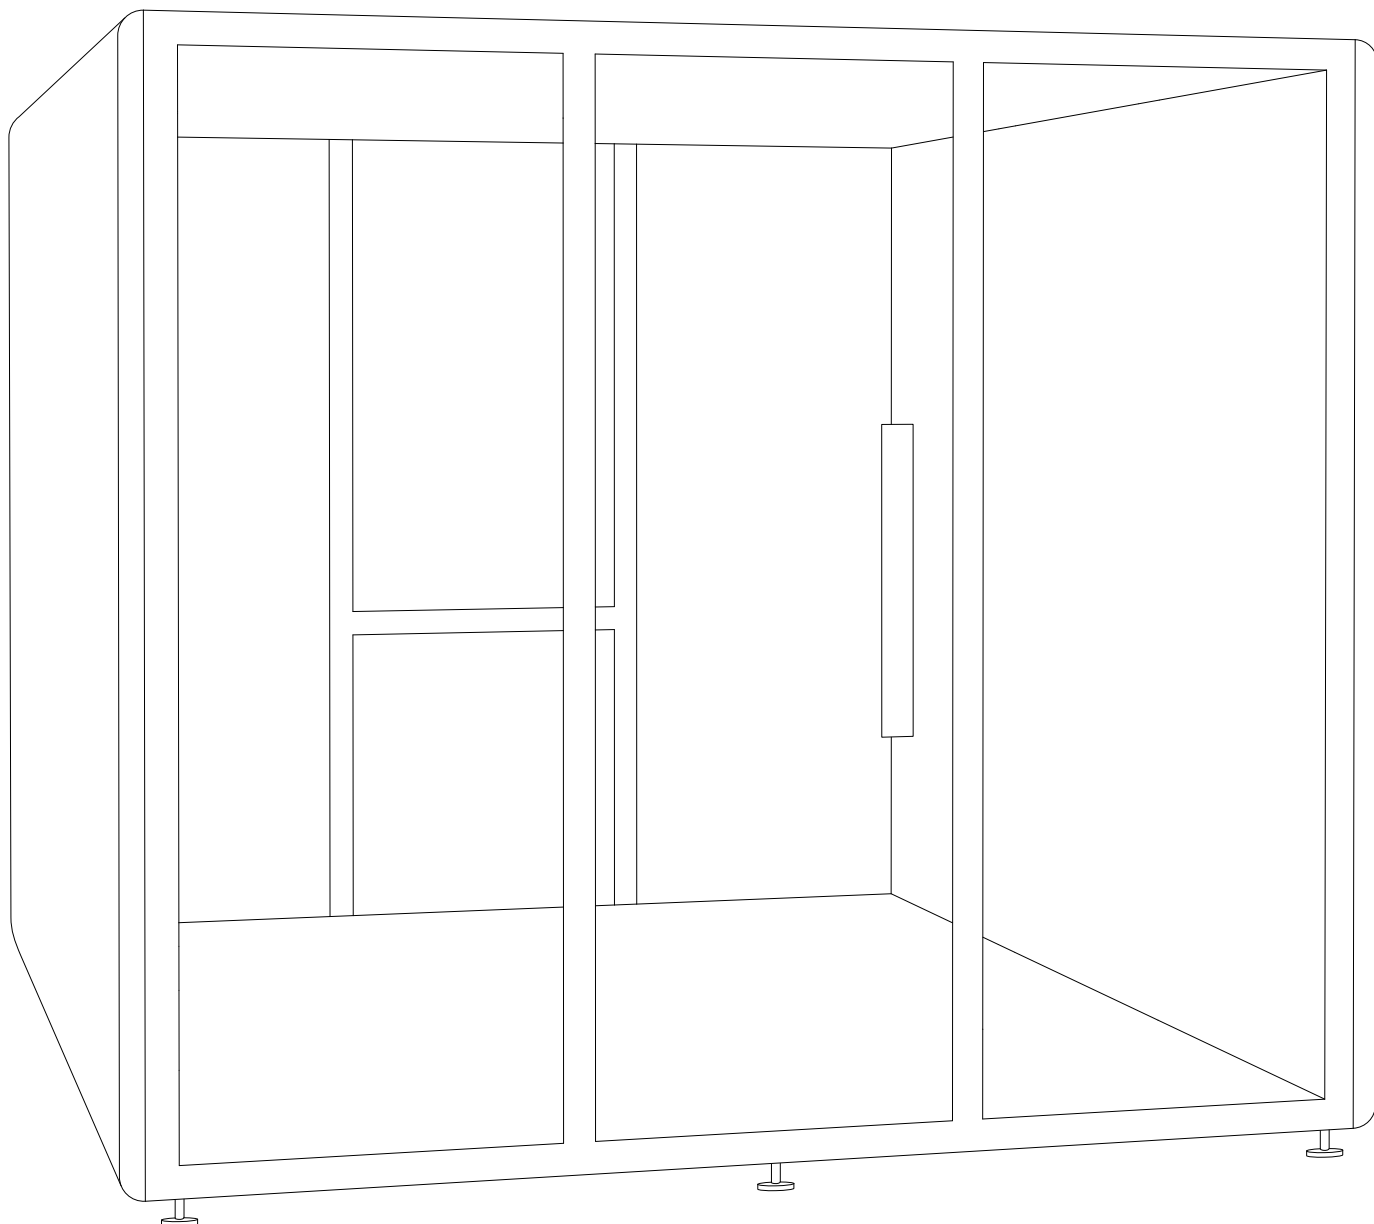
























ASSEMBLY INSTRUCTIONS



ASKÍA
ACOUSTIC PODS






Info.

ASSEMBLY INSTRUCTIONS



	Steps.		Main Ethernet supply.		Pay attention to.
	Bag with screws.		Main Power supply.		Pay attention to.
	Unlocked.		Ventilation coupling.		Do.
	Lock.		Power coupling.		Don't.
	Level check.		Ethernet coupling.		Pay attention not to break the glass.
	Allen key needed.		Lighting coupling.		Ok.
	Allen key and screws needed.		Motion sensor coupling.		Stop.
	T-Handle hex key needed.		Magnetic coupling element.		
	T-Handle hex key and screws needed.				
	Position the door on pins.				
	Screwdriver needed.				
	Power Drill needed.				
	Move in place.				
	Whiteboard.				
	Pinboard.				
	VESA Adapter.				

Assembly in 225 min. with 2 people



Included

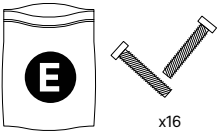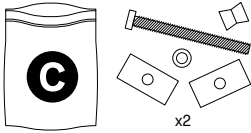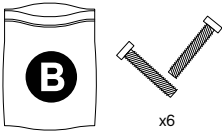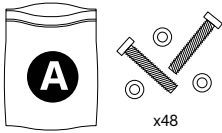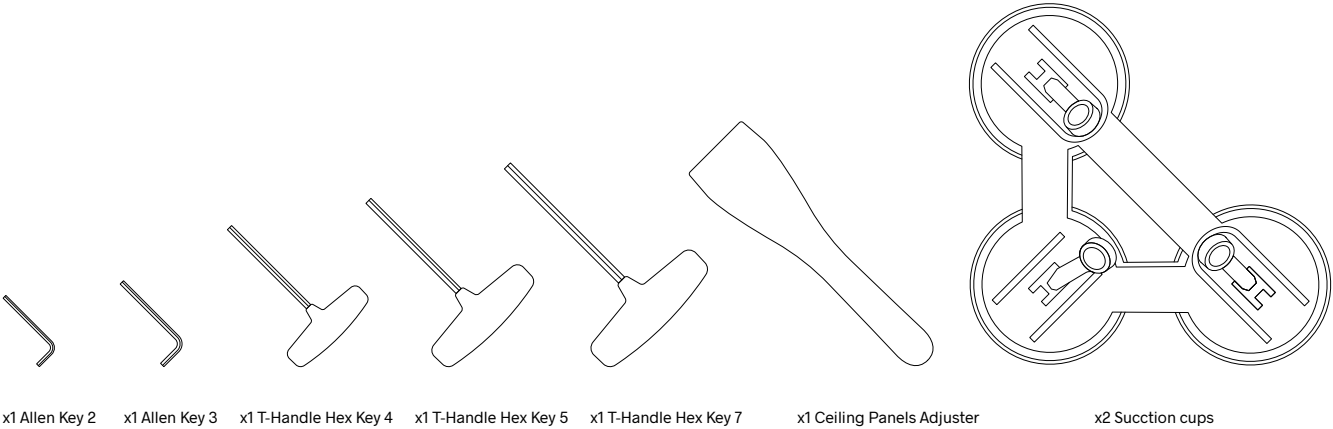



Elements

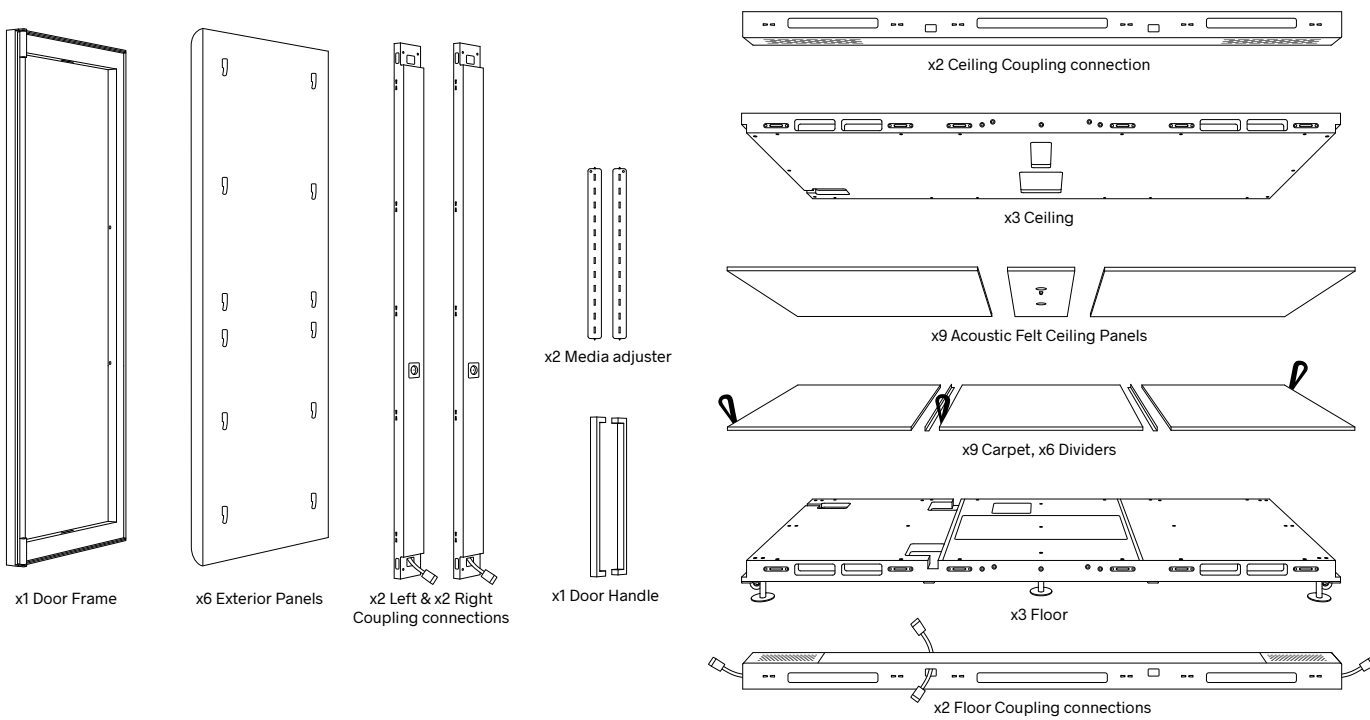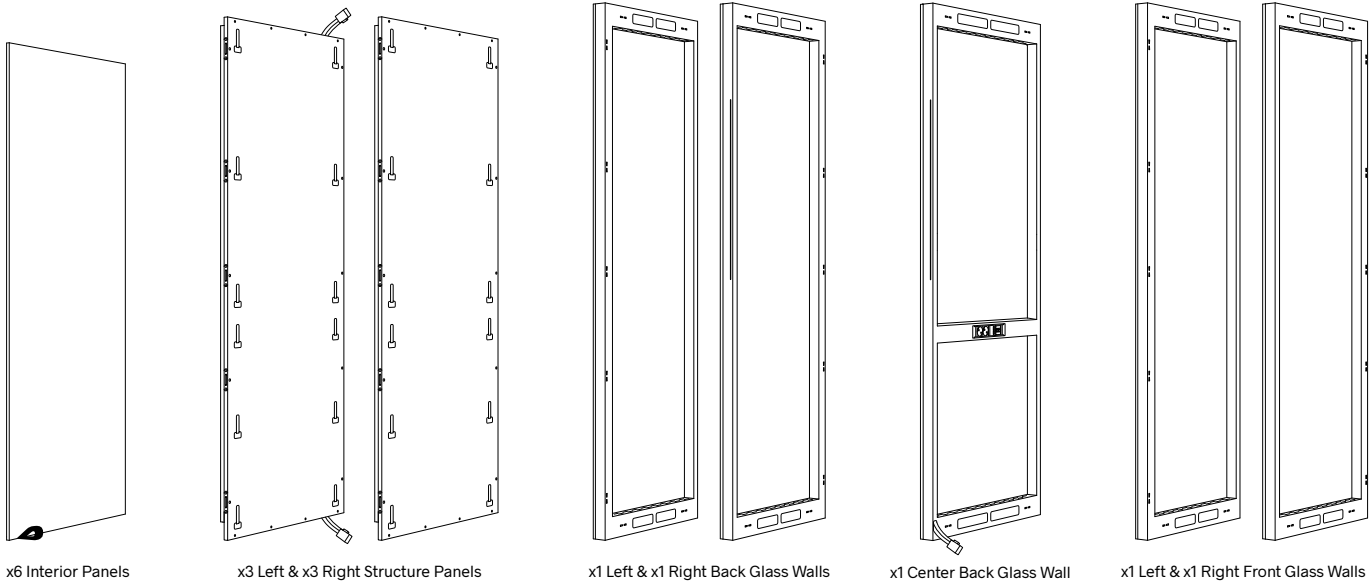



1

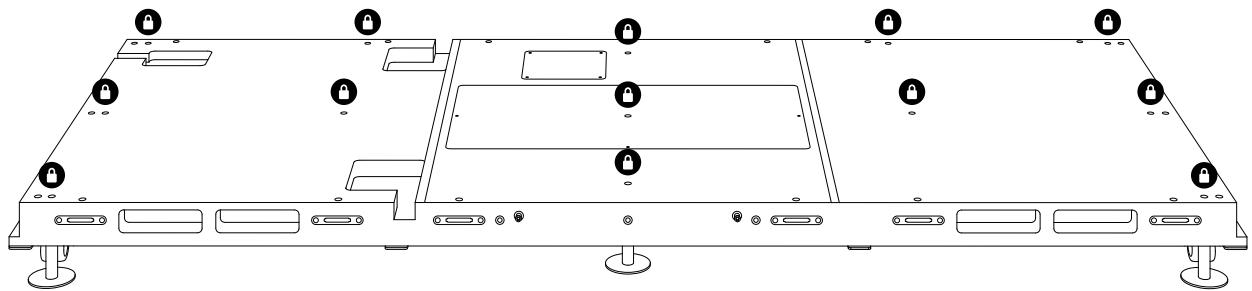





T-Handle Hex Key 4

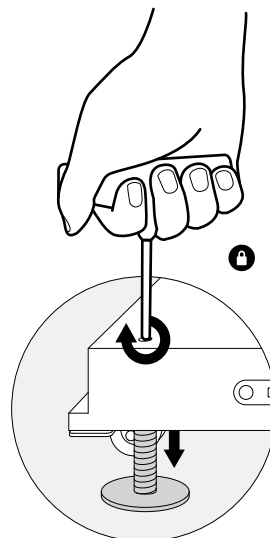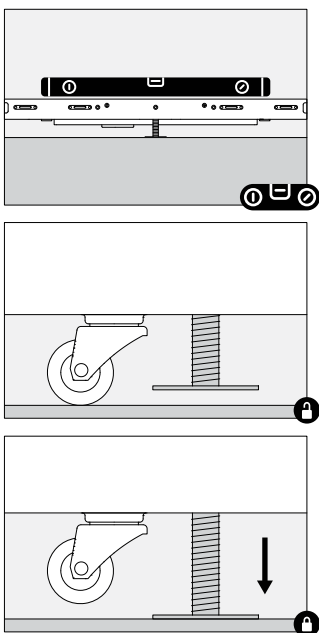



2

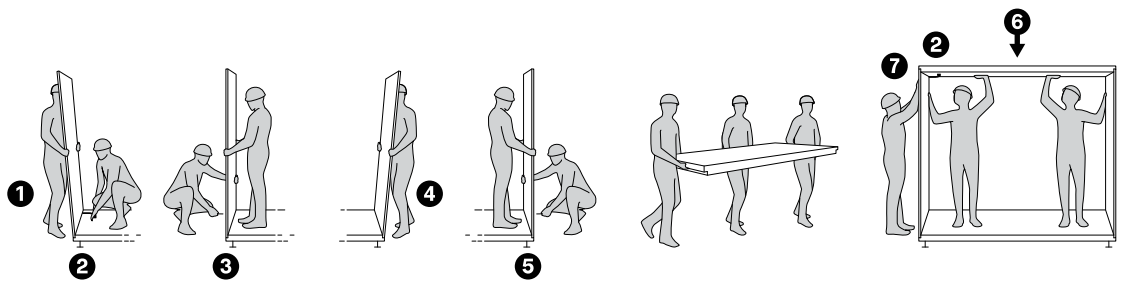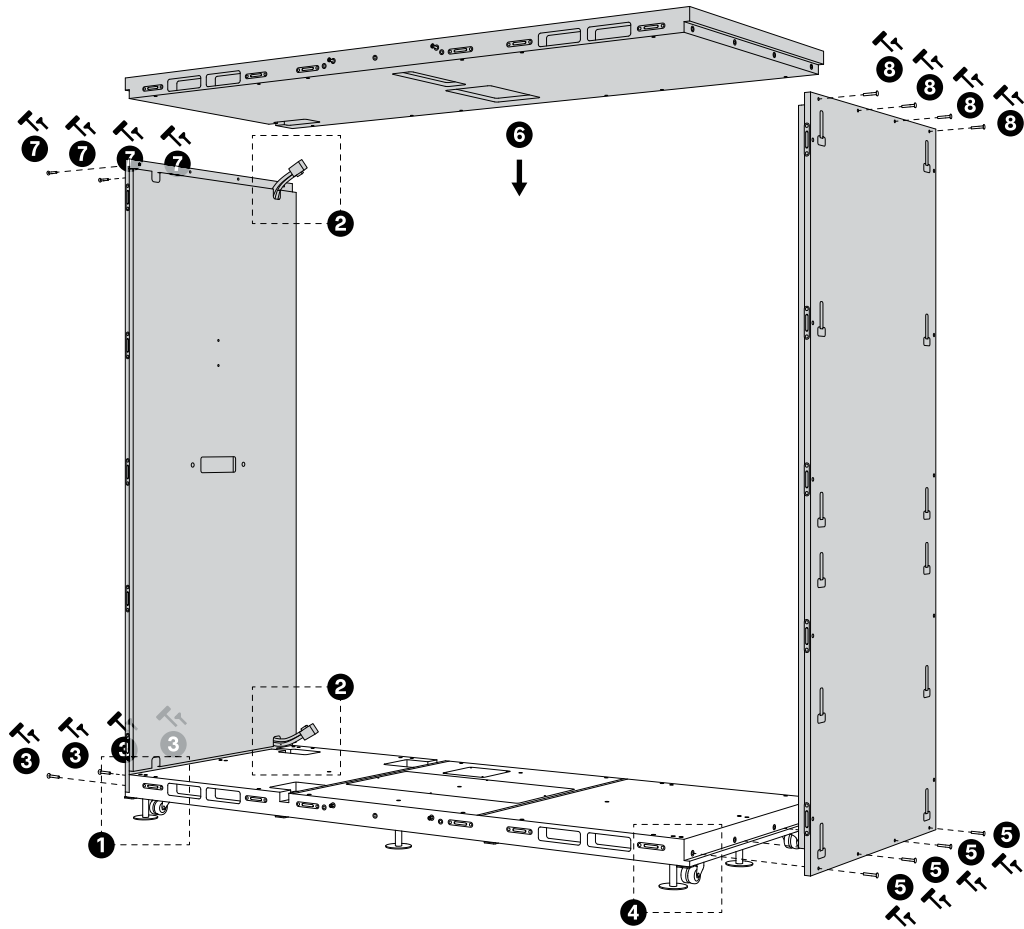



A x16 with
T-Handle Hex Key 4

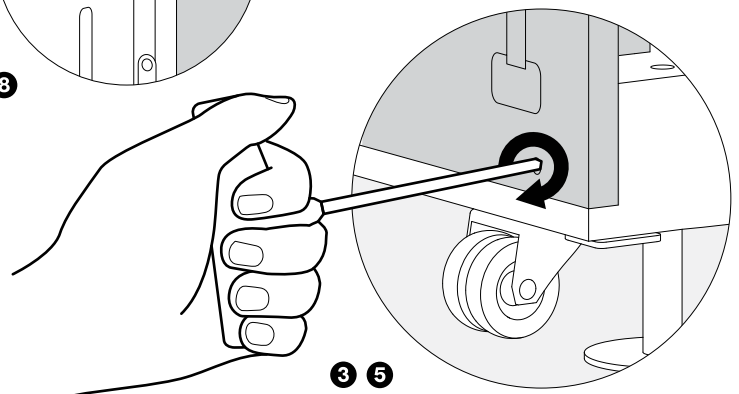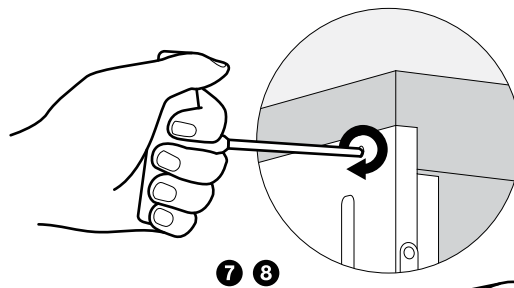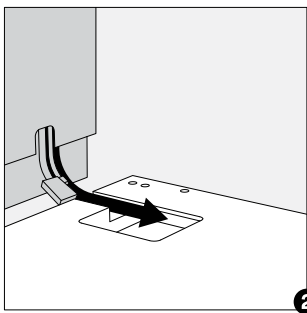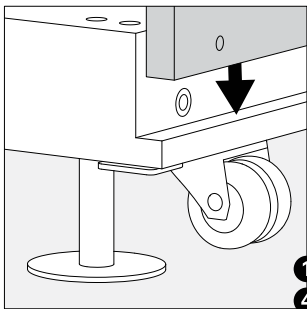



3

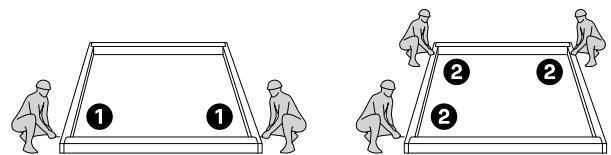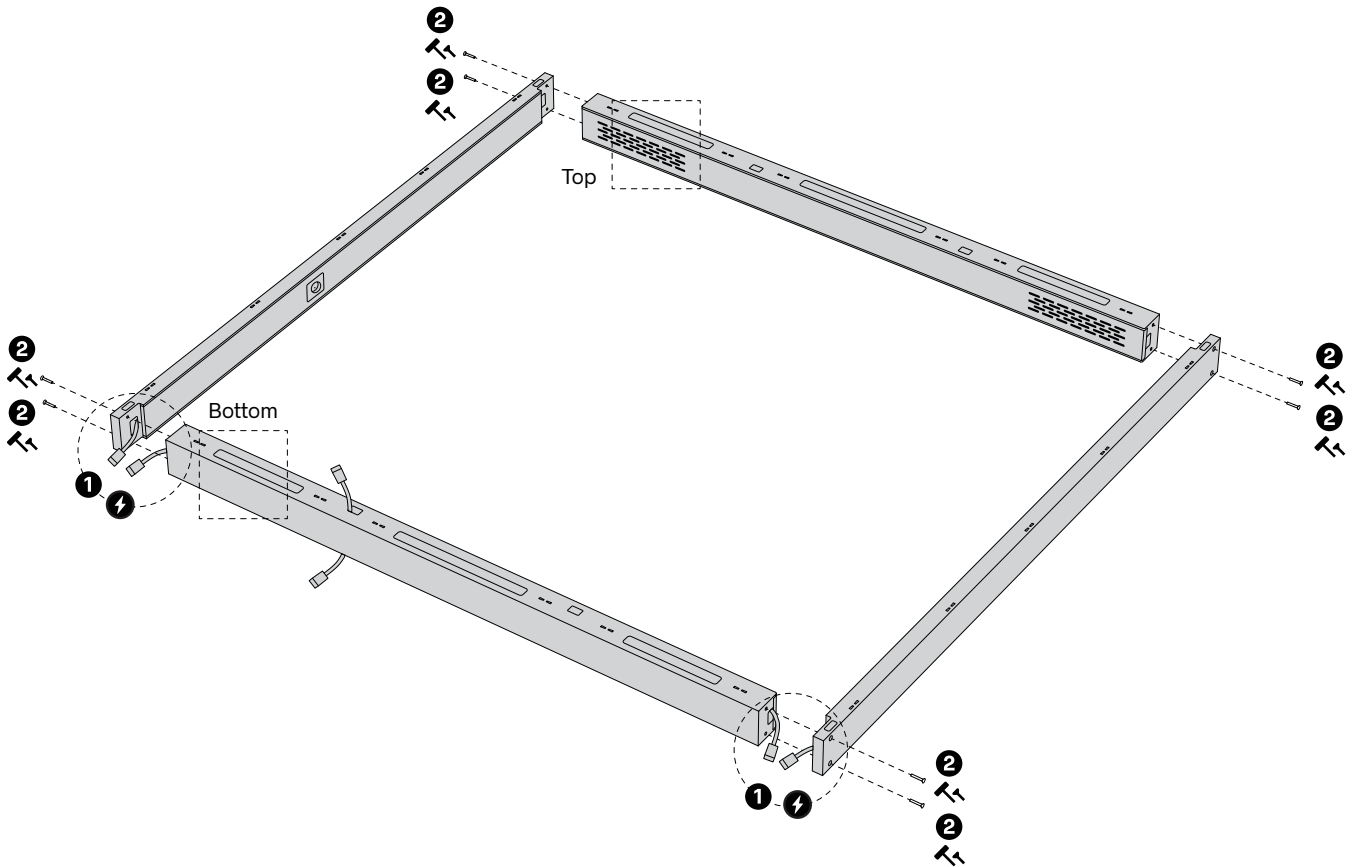







E x8 with
T-Handle Hex Key 4

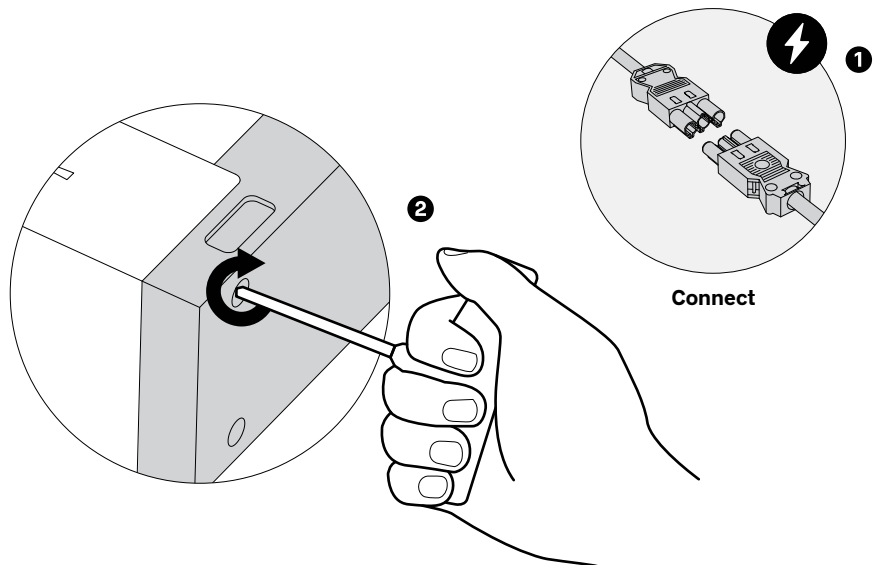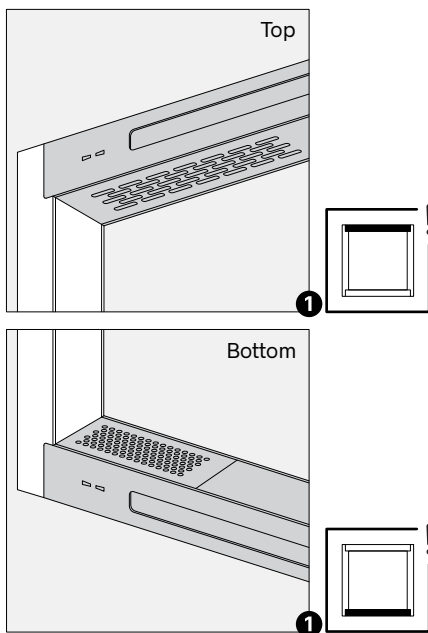



4

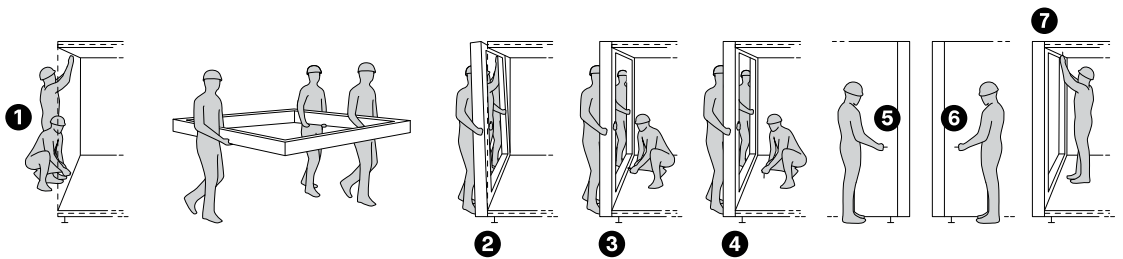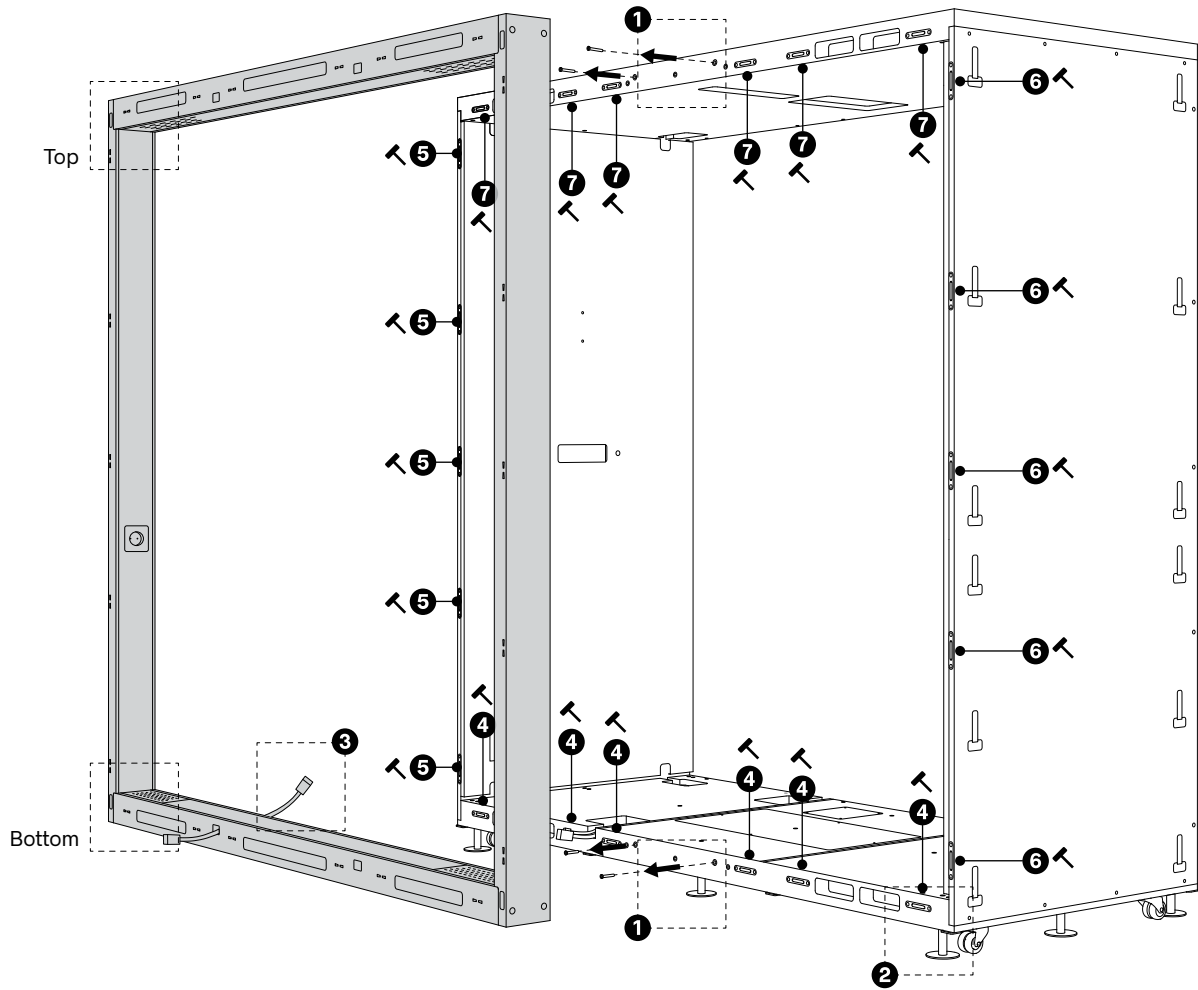




T-Handle Hex Key 7

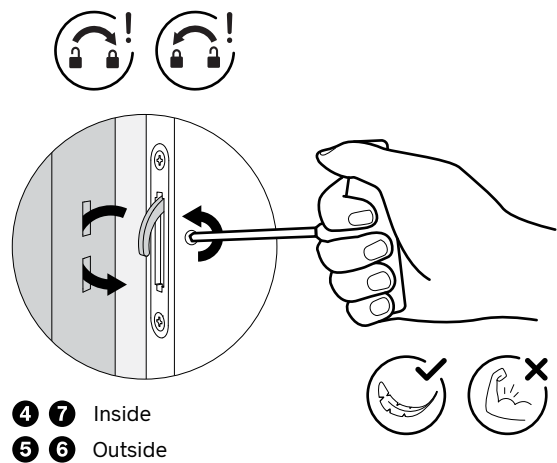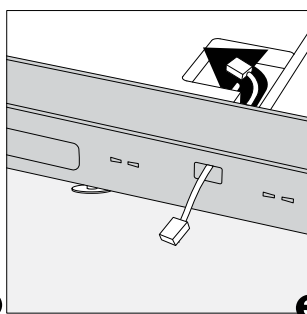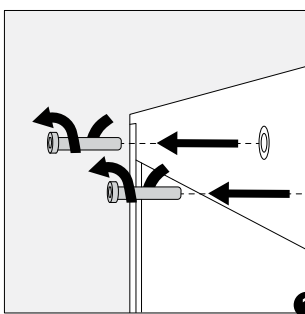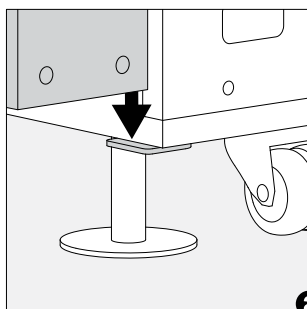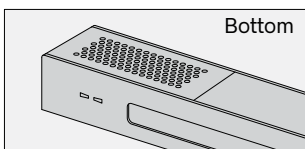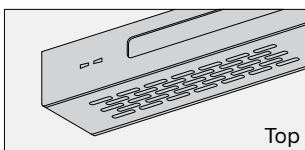

5

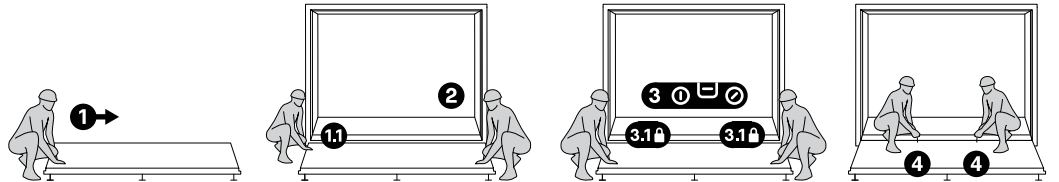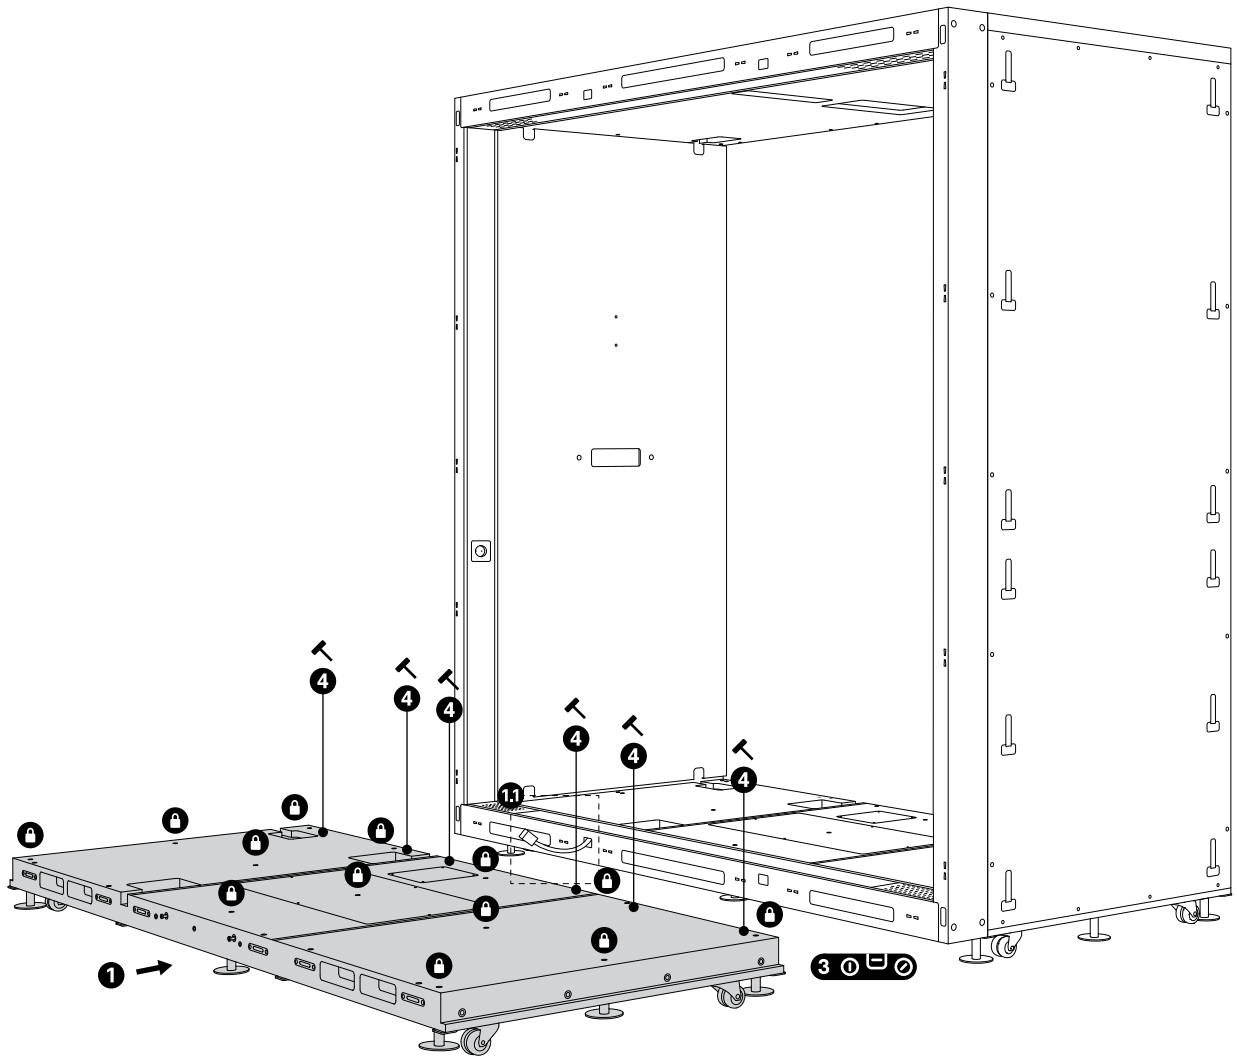


T-Handle Hex Key 4
T-Handle Hex Key 7

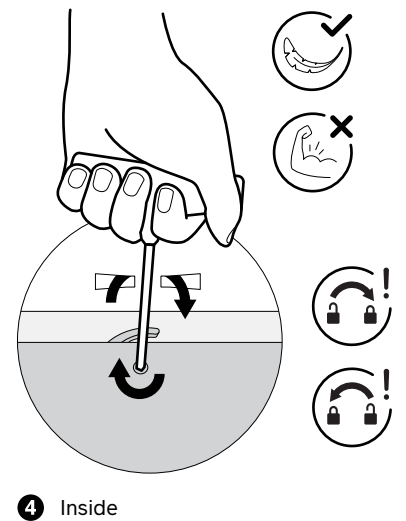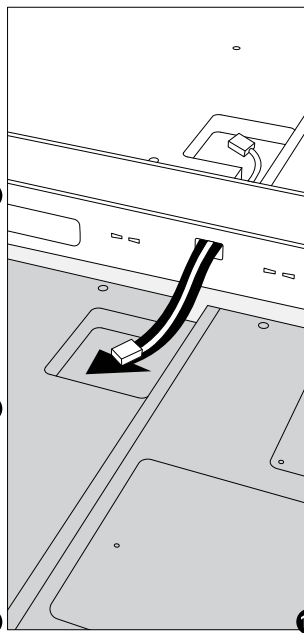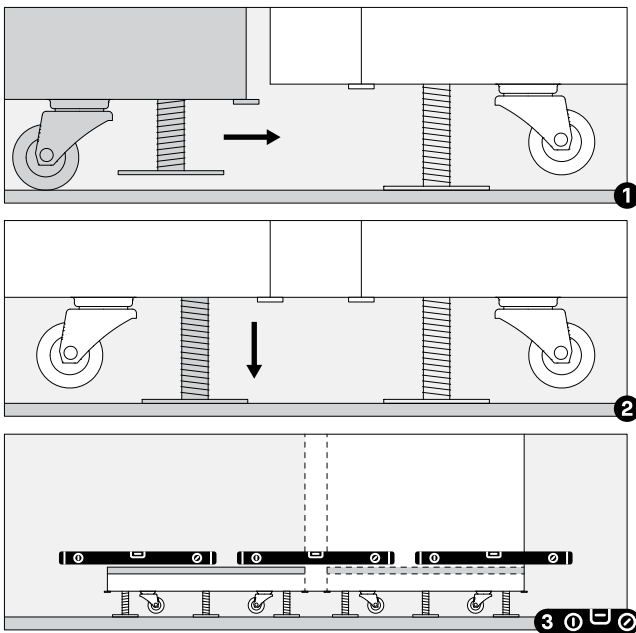






4 Inside



6

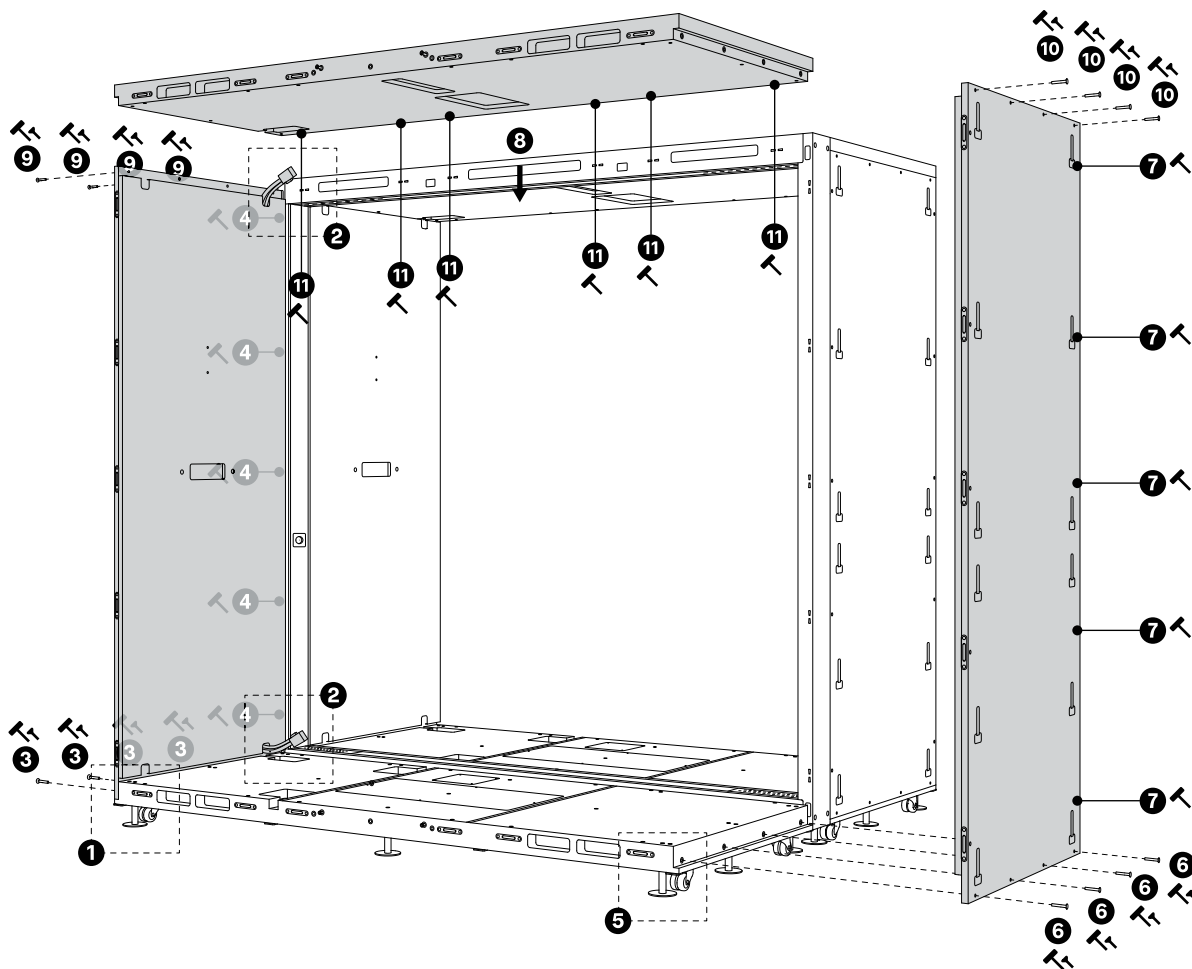







A x16 with
T-Handle Hex Key 4



T-Handle Hex Key 7

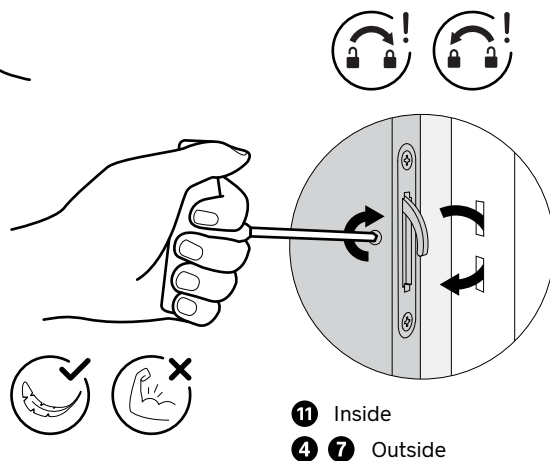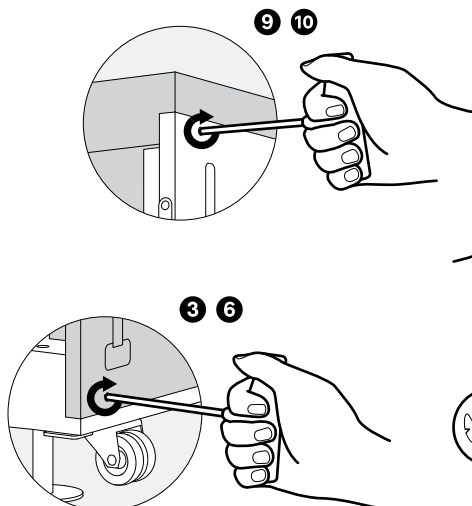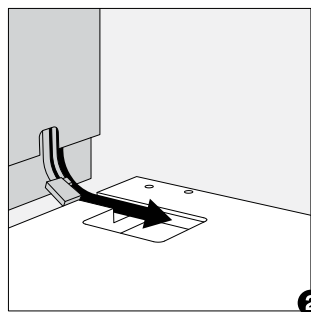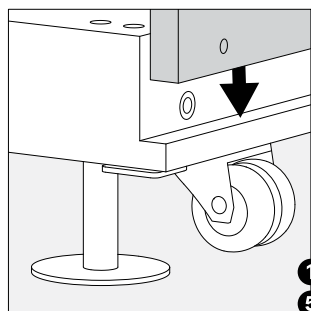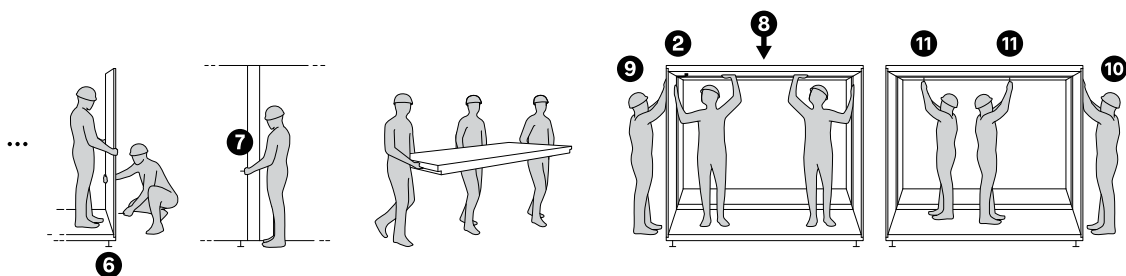

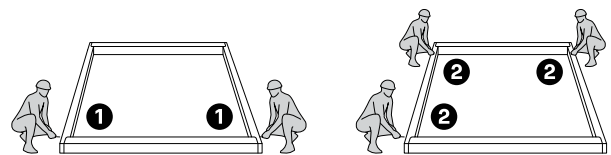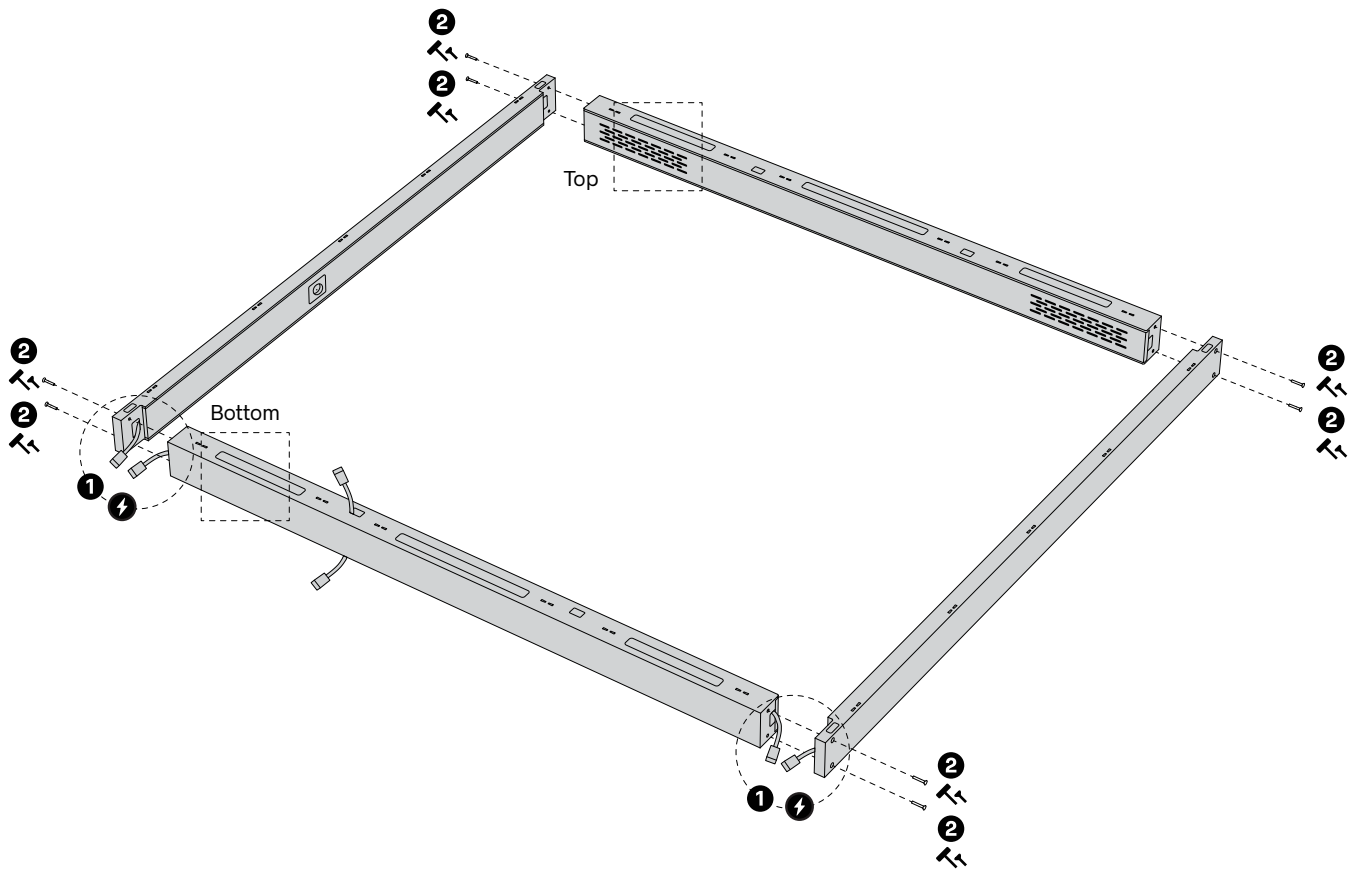


E x8 with
T-Handle Hex Key 4

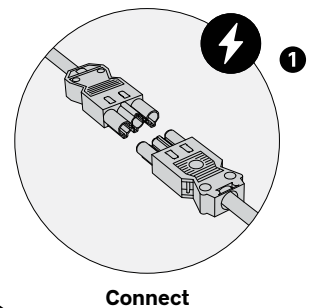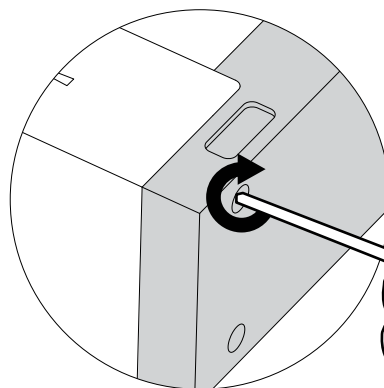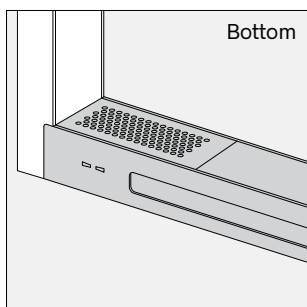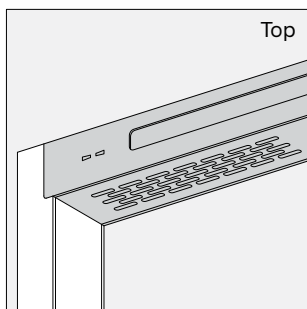


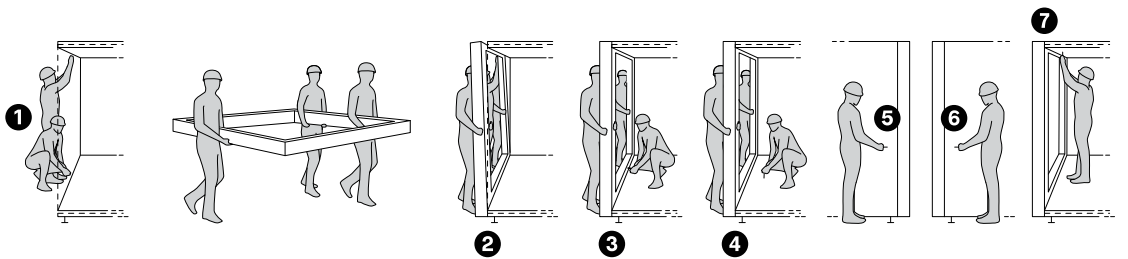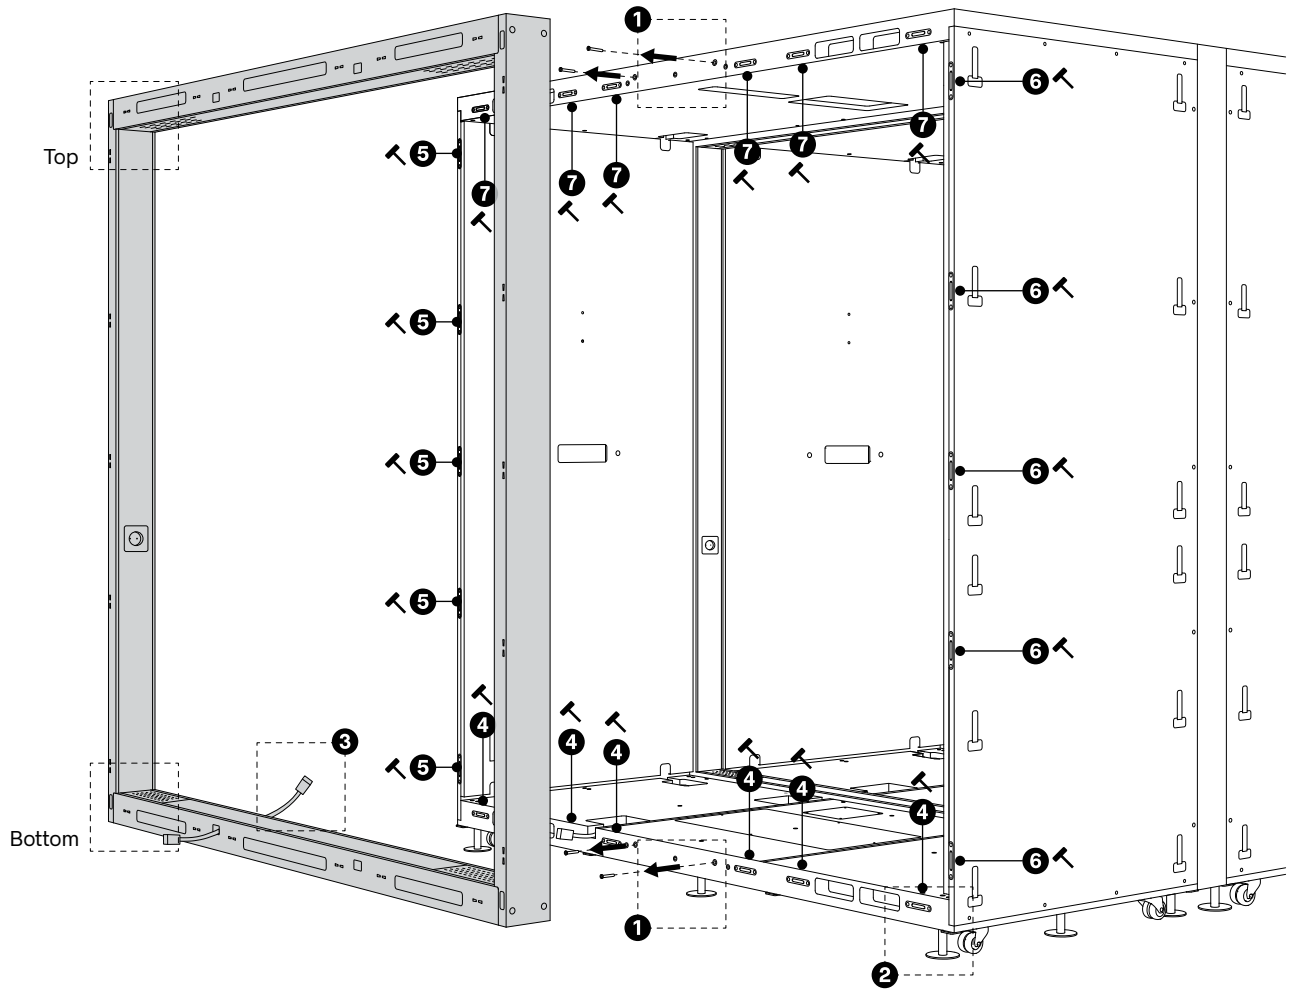


T-Handle Hex Key 7

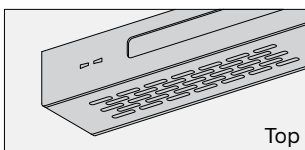


Top

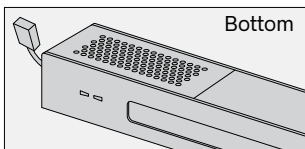


Bottom

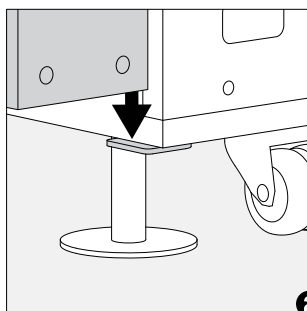


2


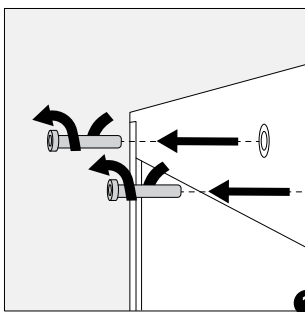


1



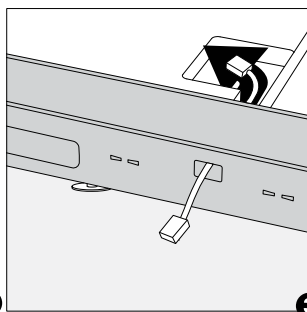


3

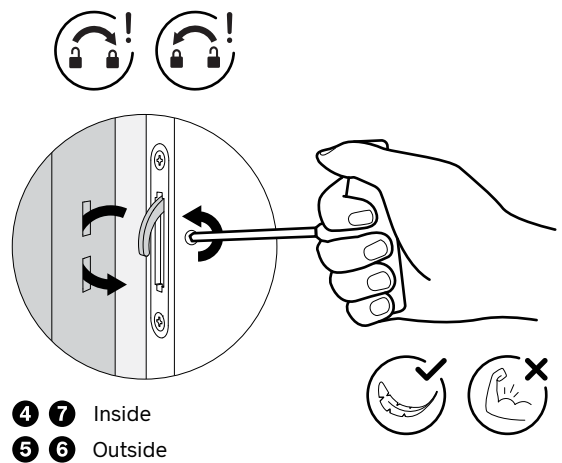


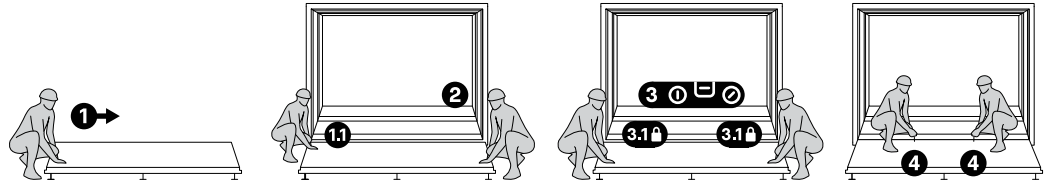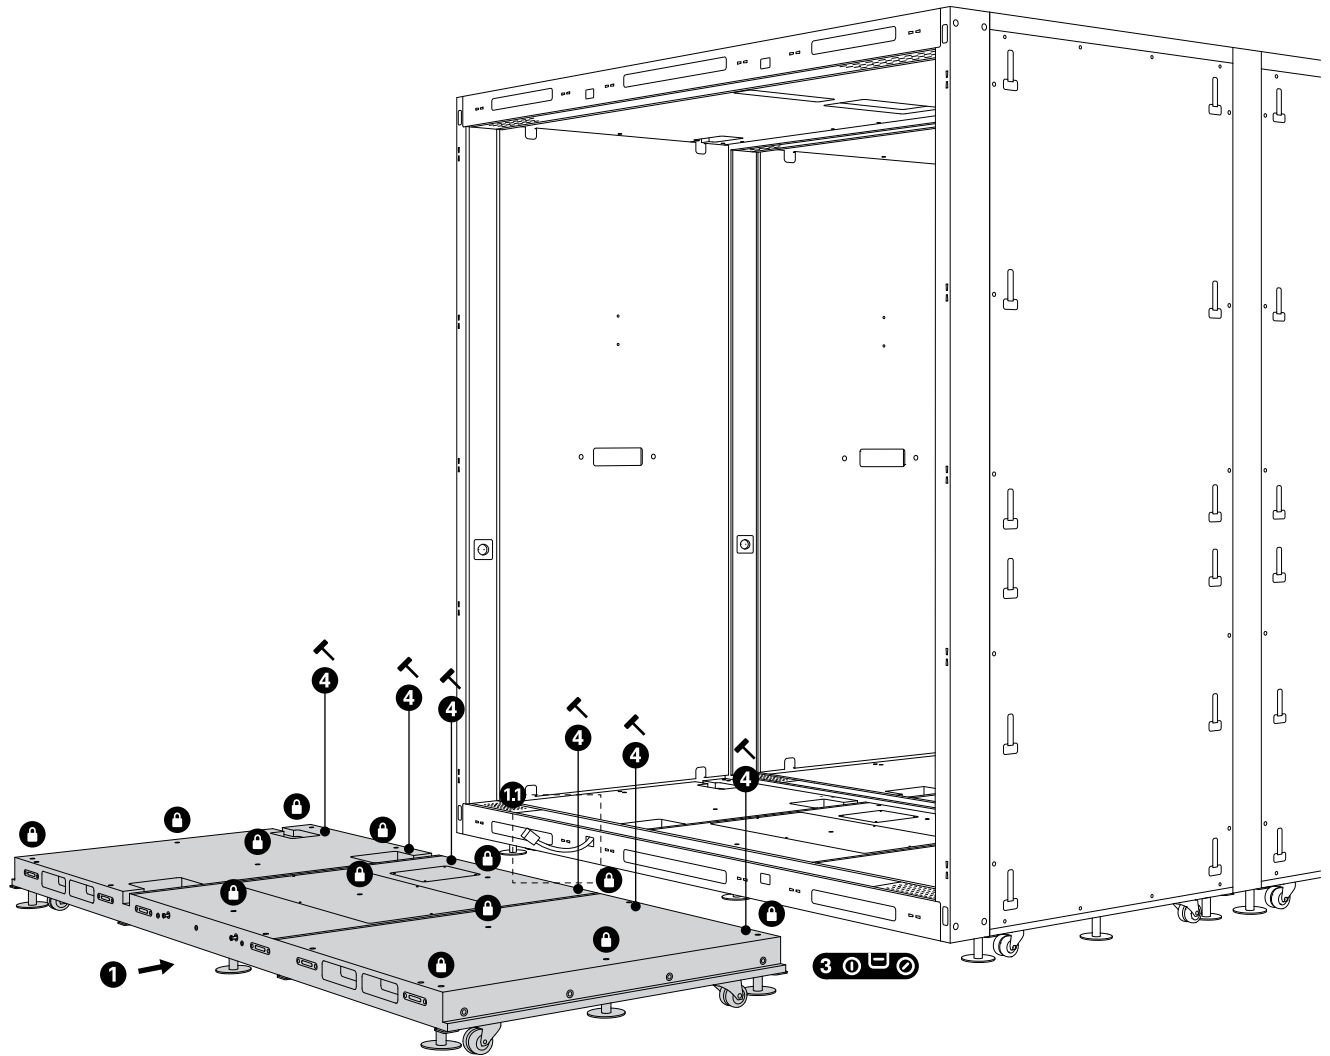

T-Handle Hex Key 4
T-Handle Hex Key 7




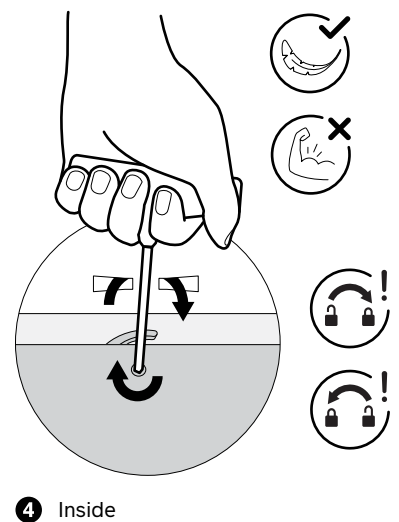
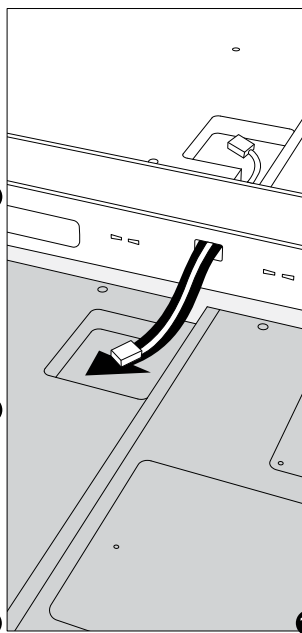
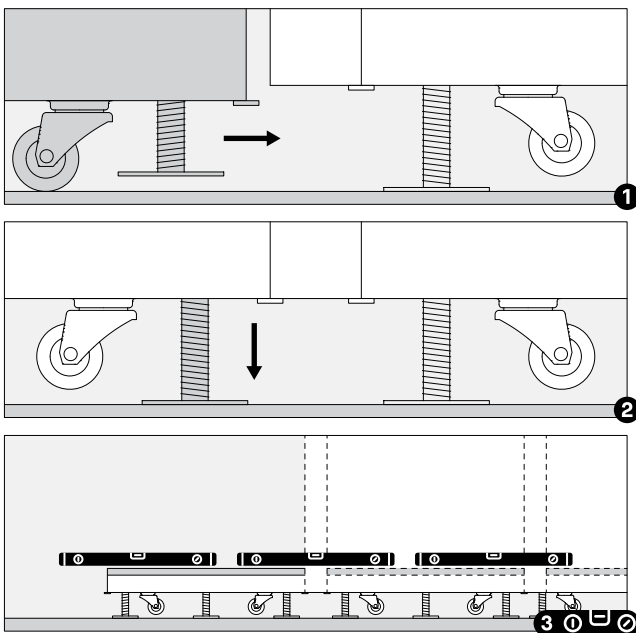


4 Inside

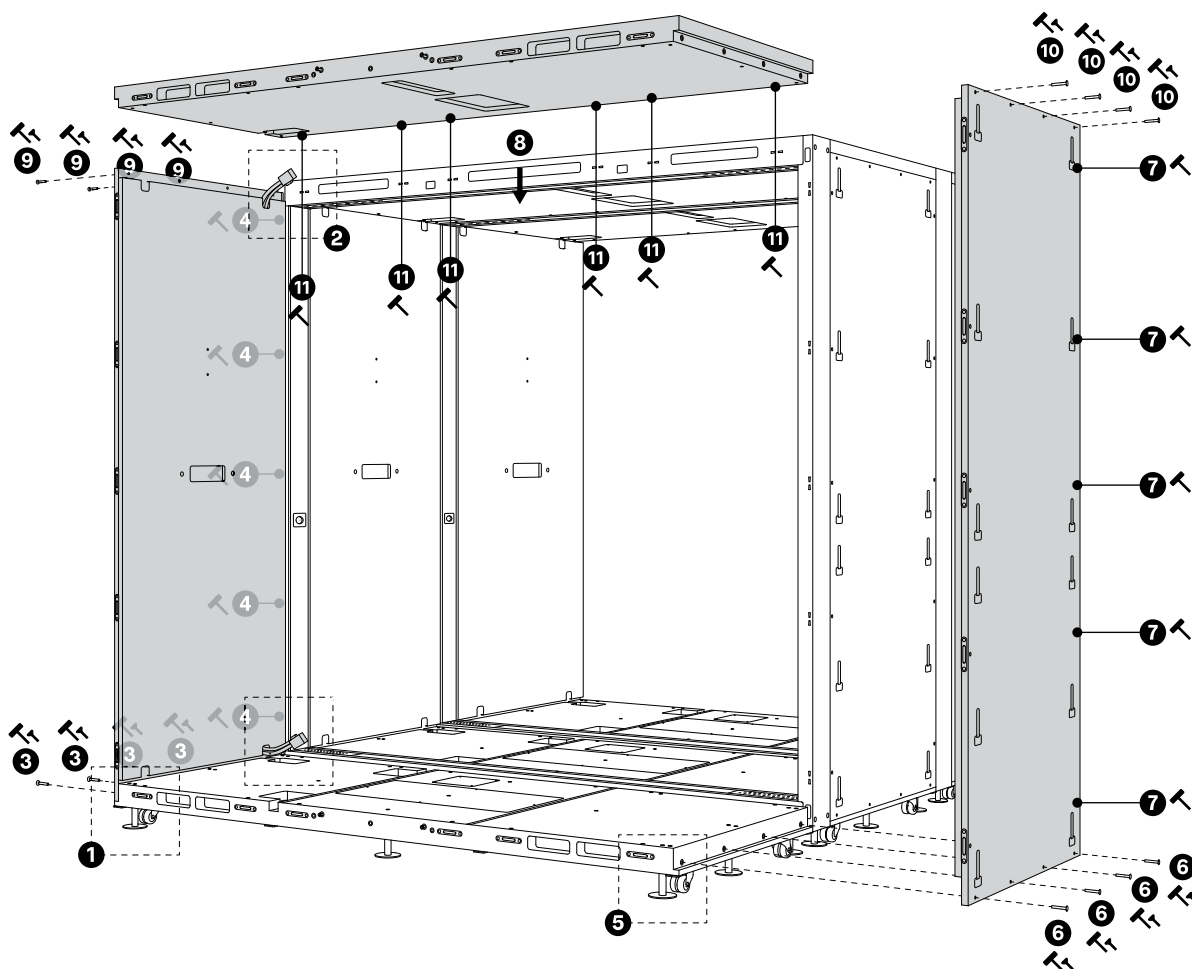


A x16 with
T-Handle Hex Key 4

T-Handle Hex Key 7

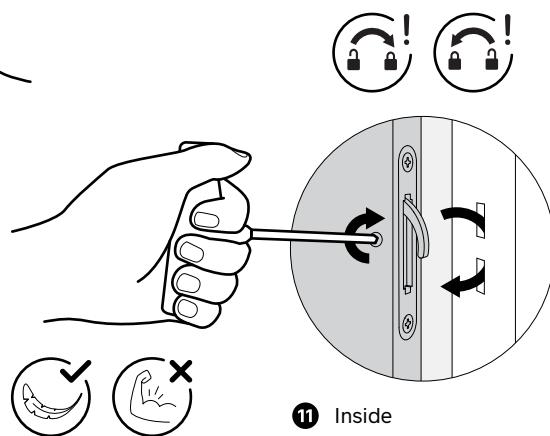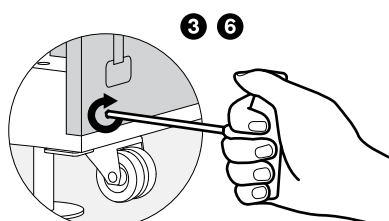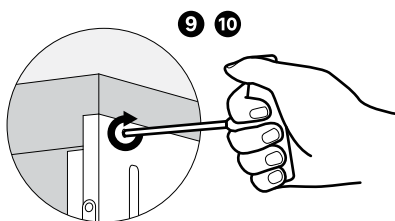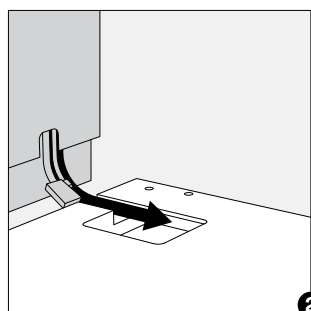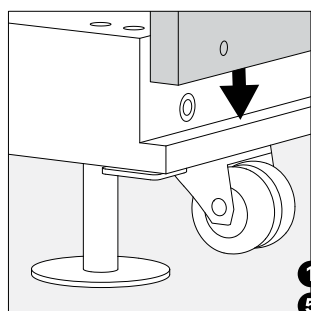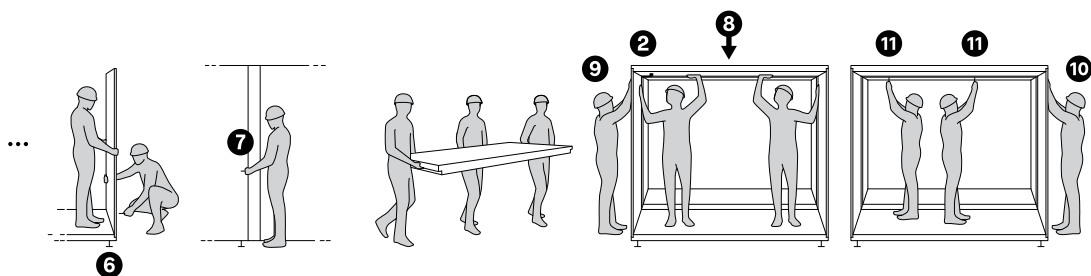




11 Inside
4 7 Outside

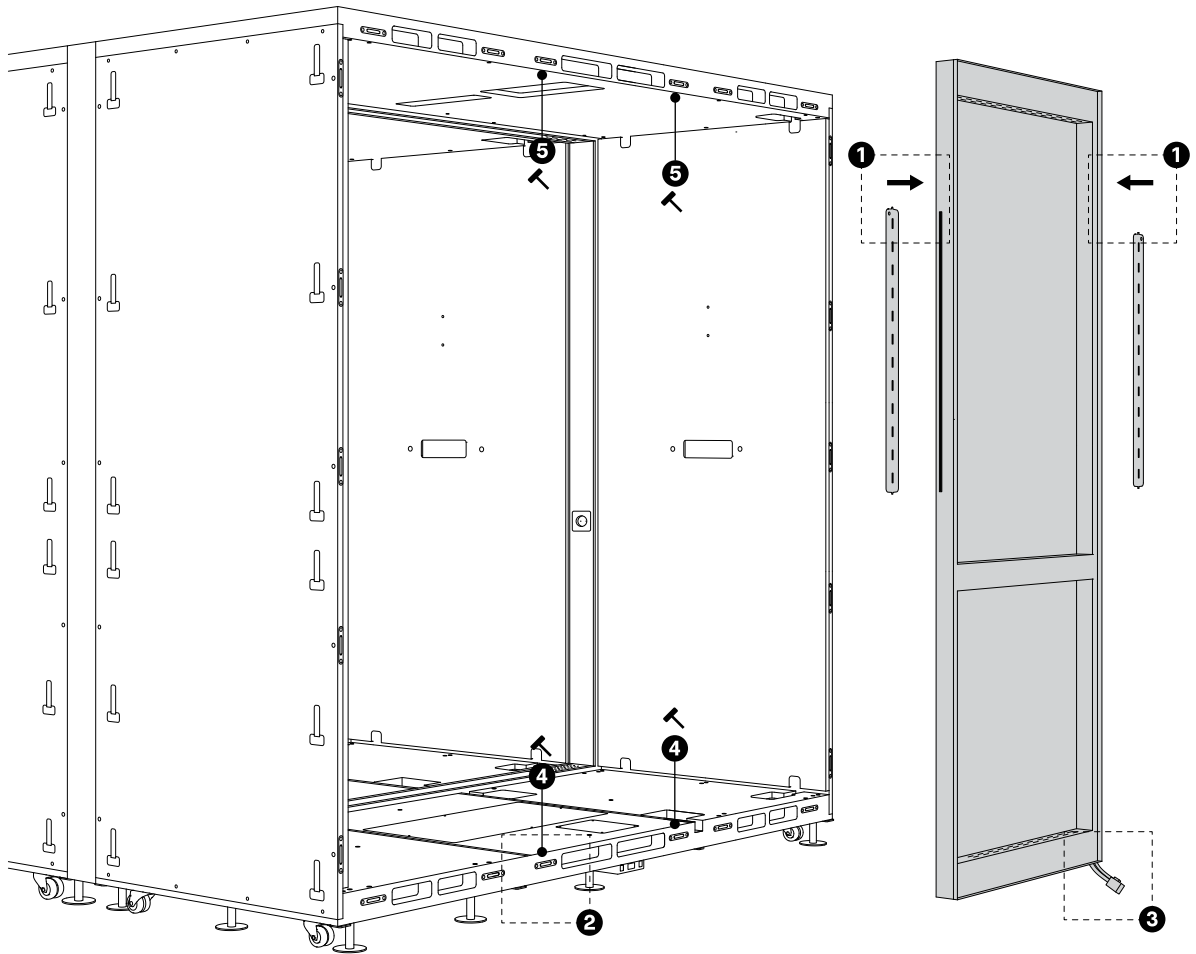


Recommendation

It is recommended to start with the Center Back Glass Wall.





T-Handle Hex Key 7
Suction cup handles

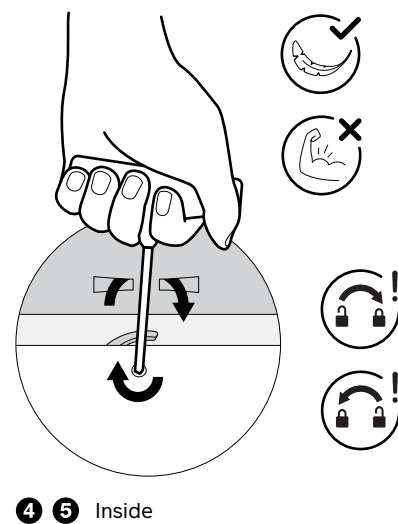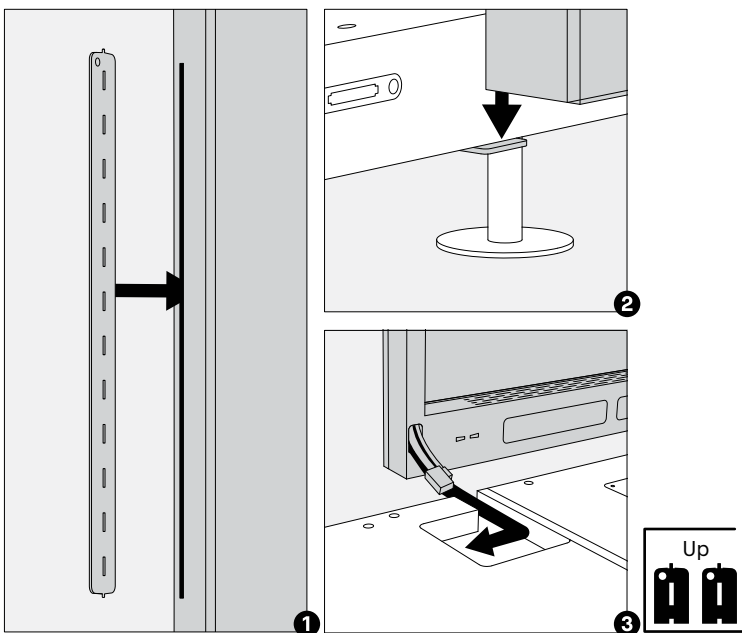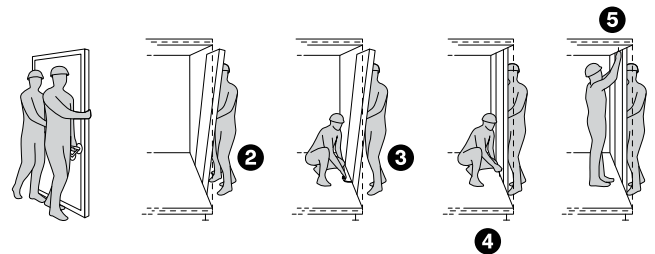


4 5 Inside

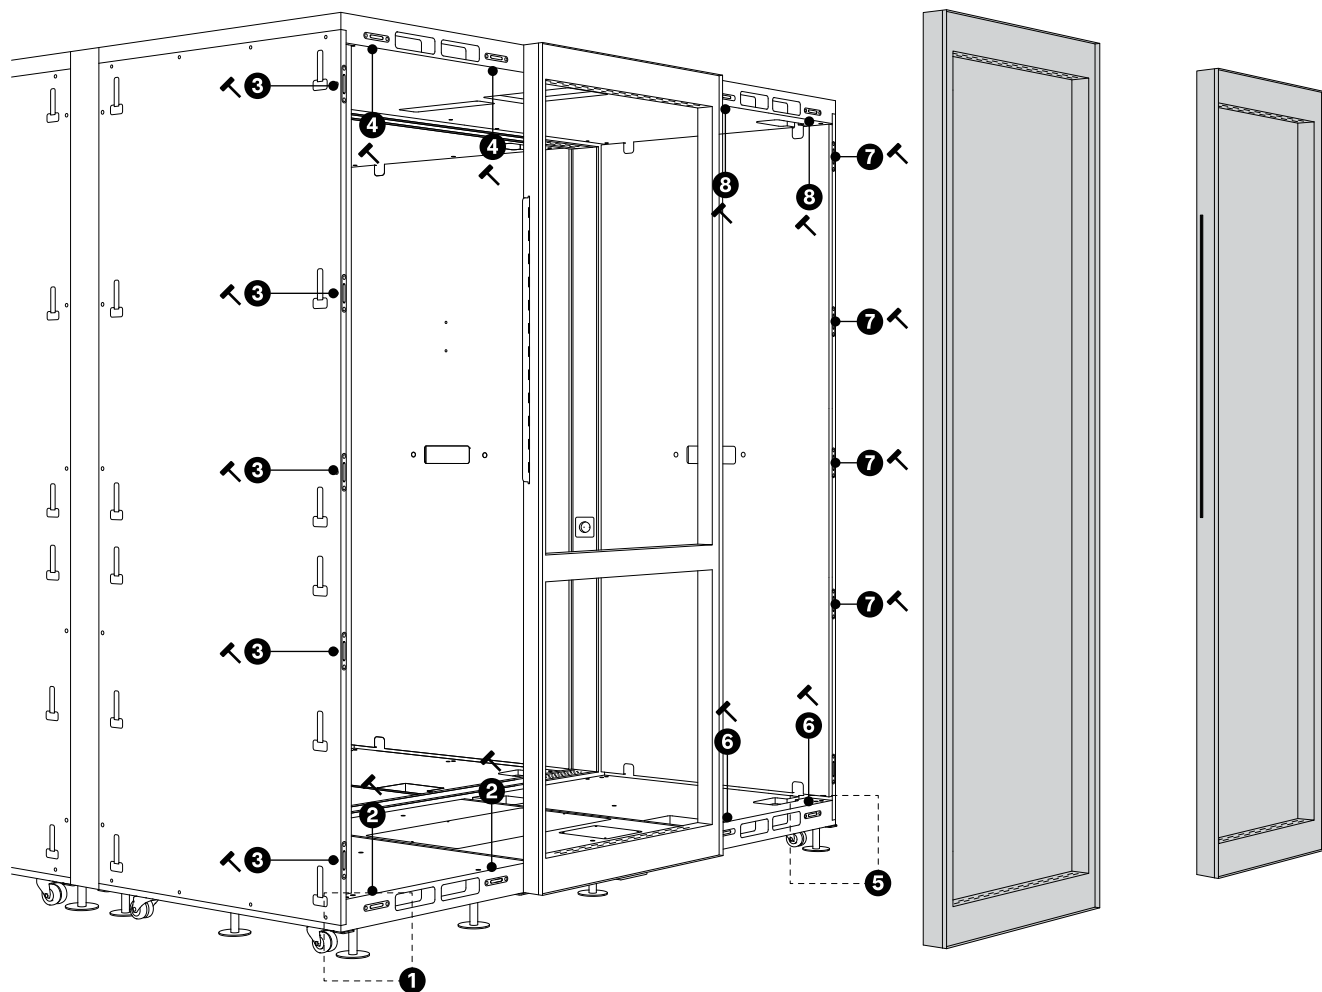

T-Handle Hex Key 7
Suction cup handles

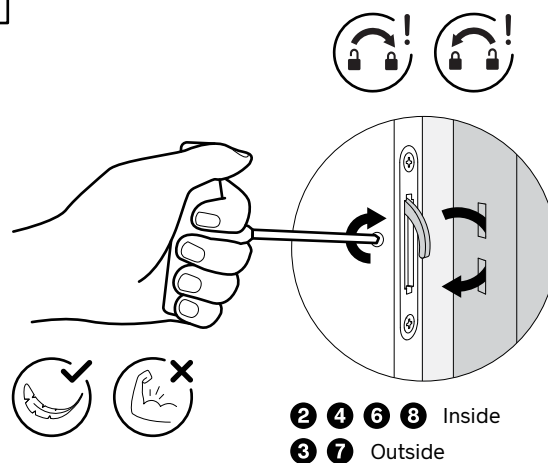

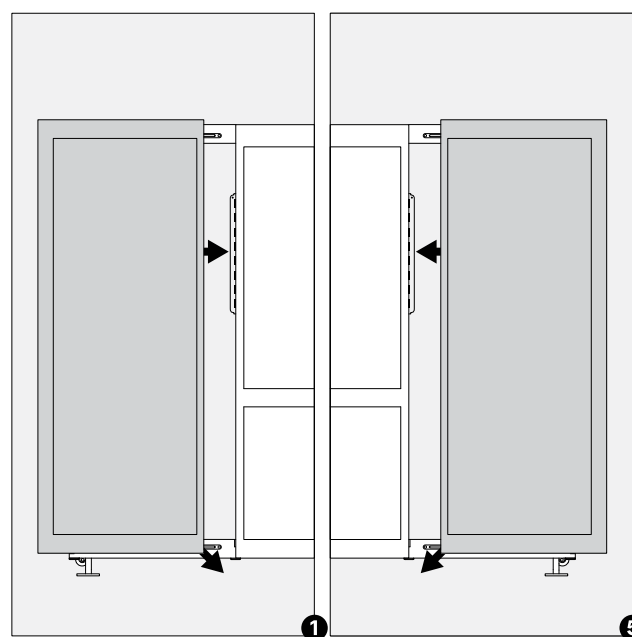
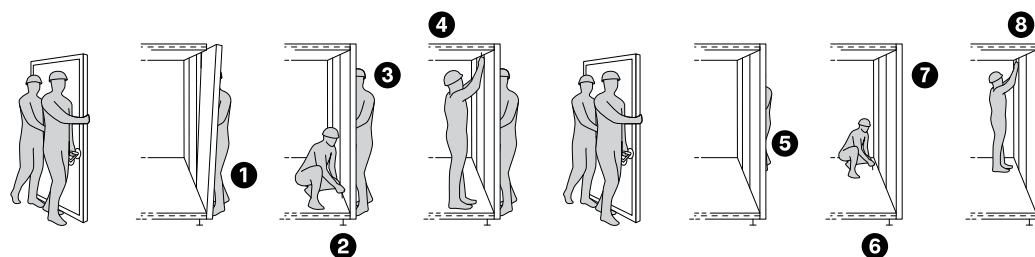


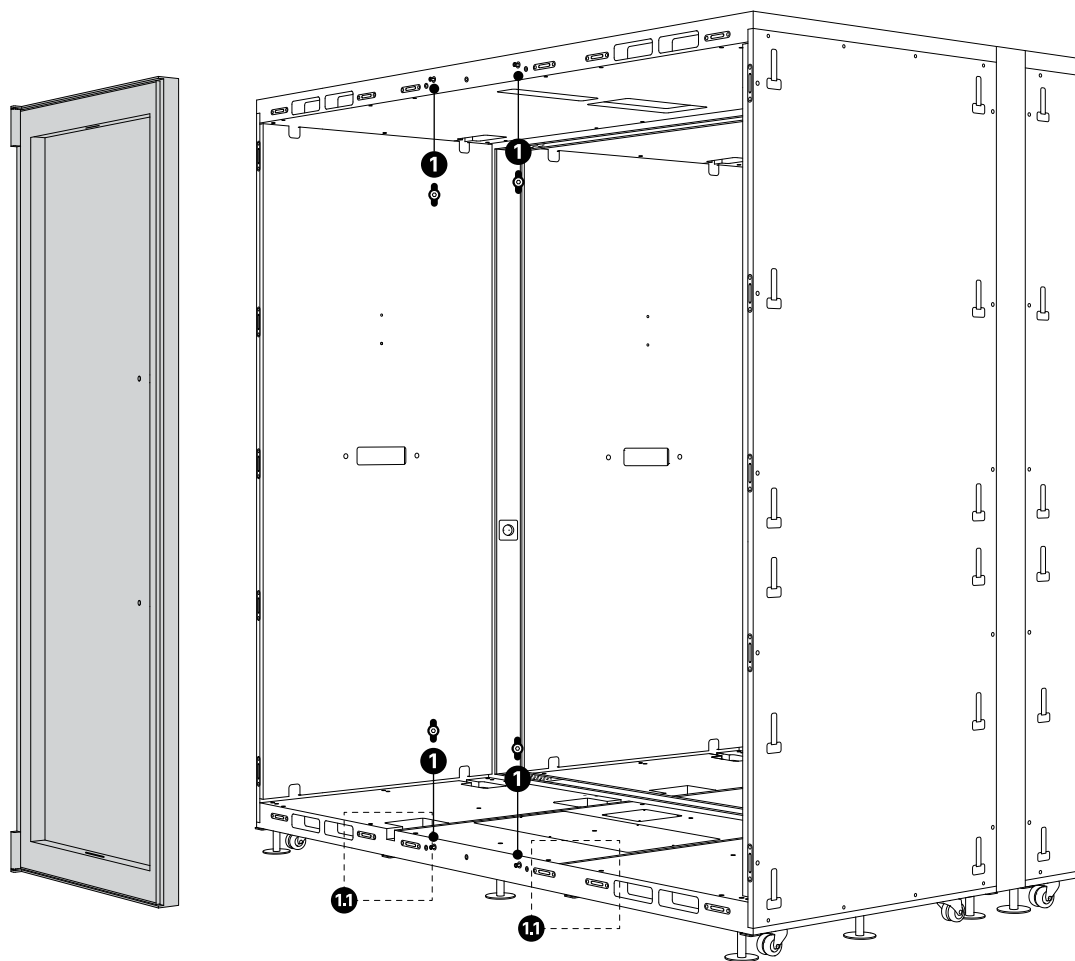

Recommendation


It is recommended to start with the Door Frame.

Suction cup handles

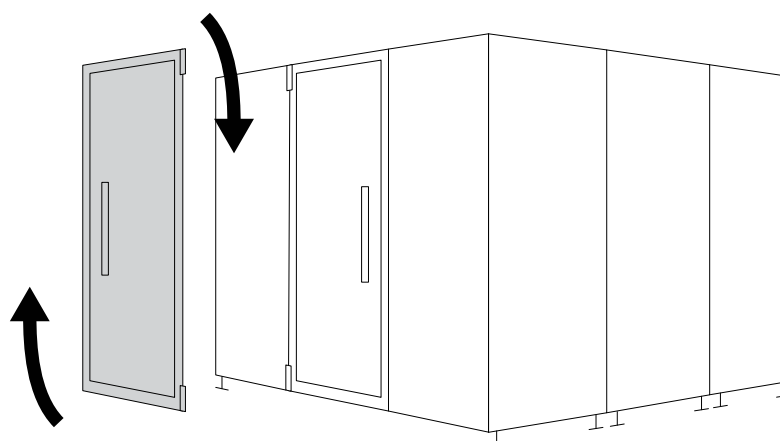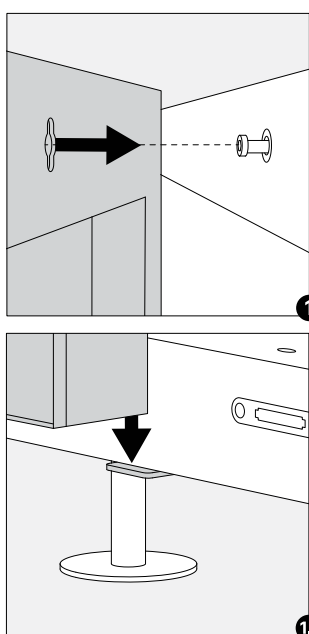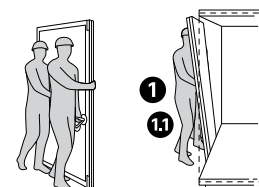







The door opening can be oriented **Left** or **Right** just by rotating the frame.

14

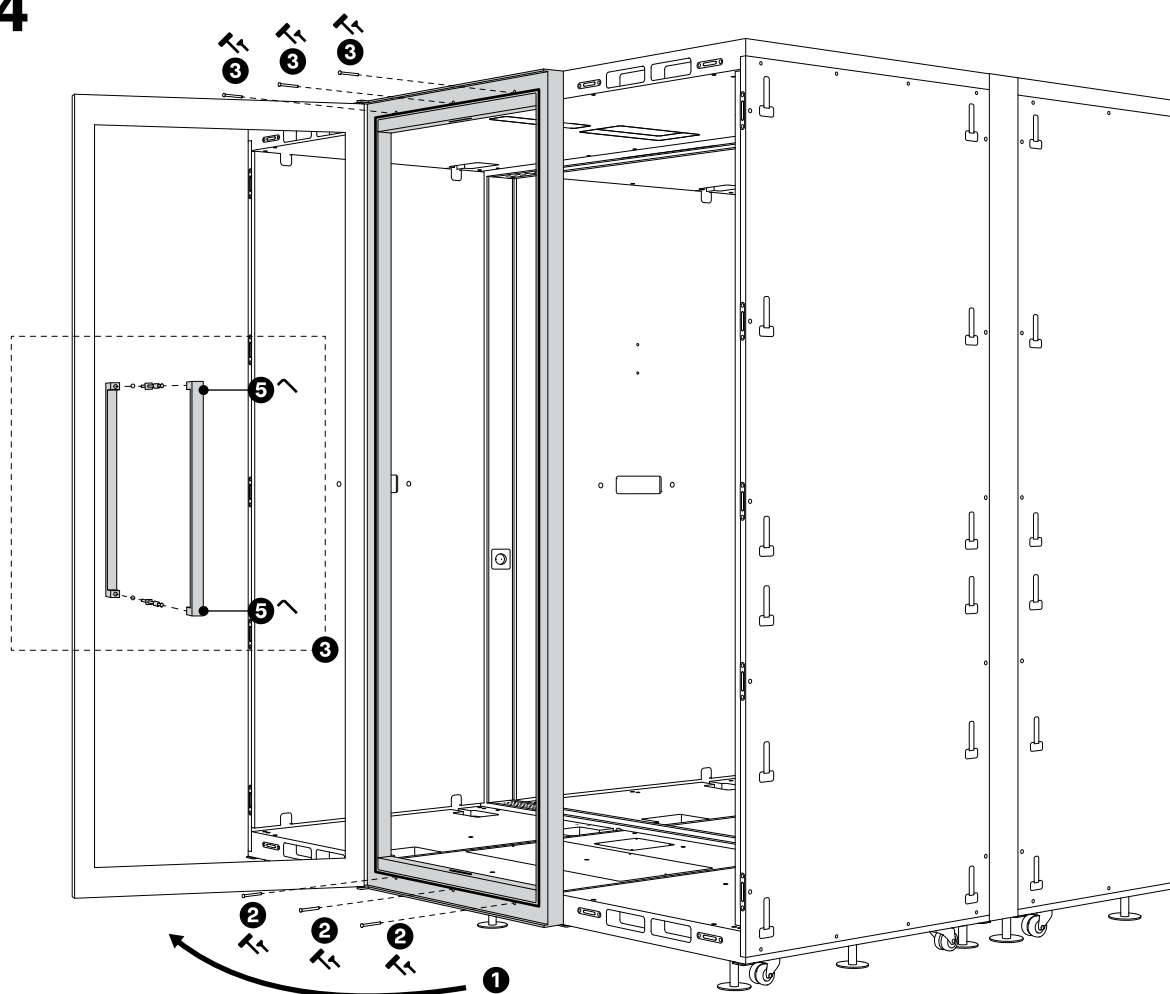


B x6 with
T-Handle Hex Key 4

C x2 with
Allen Key 3

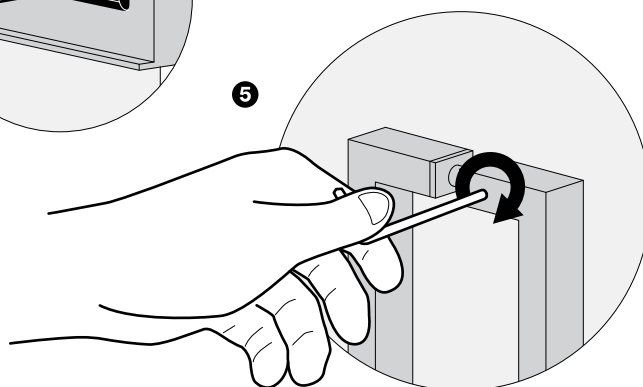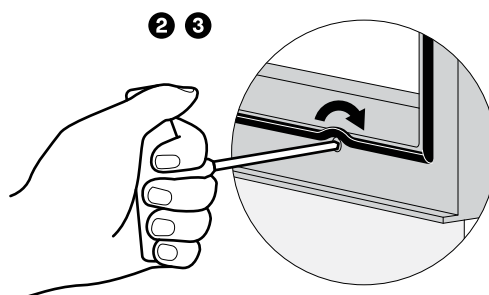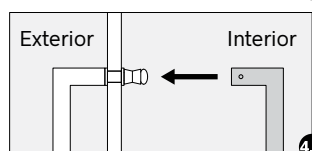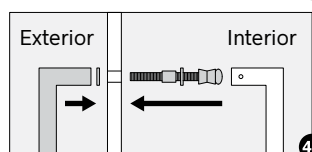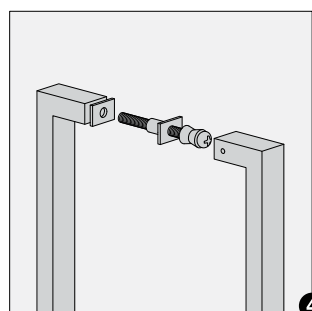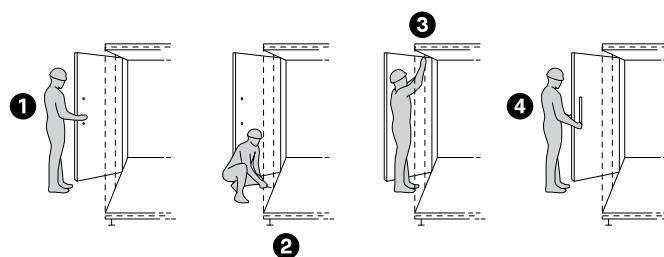


15

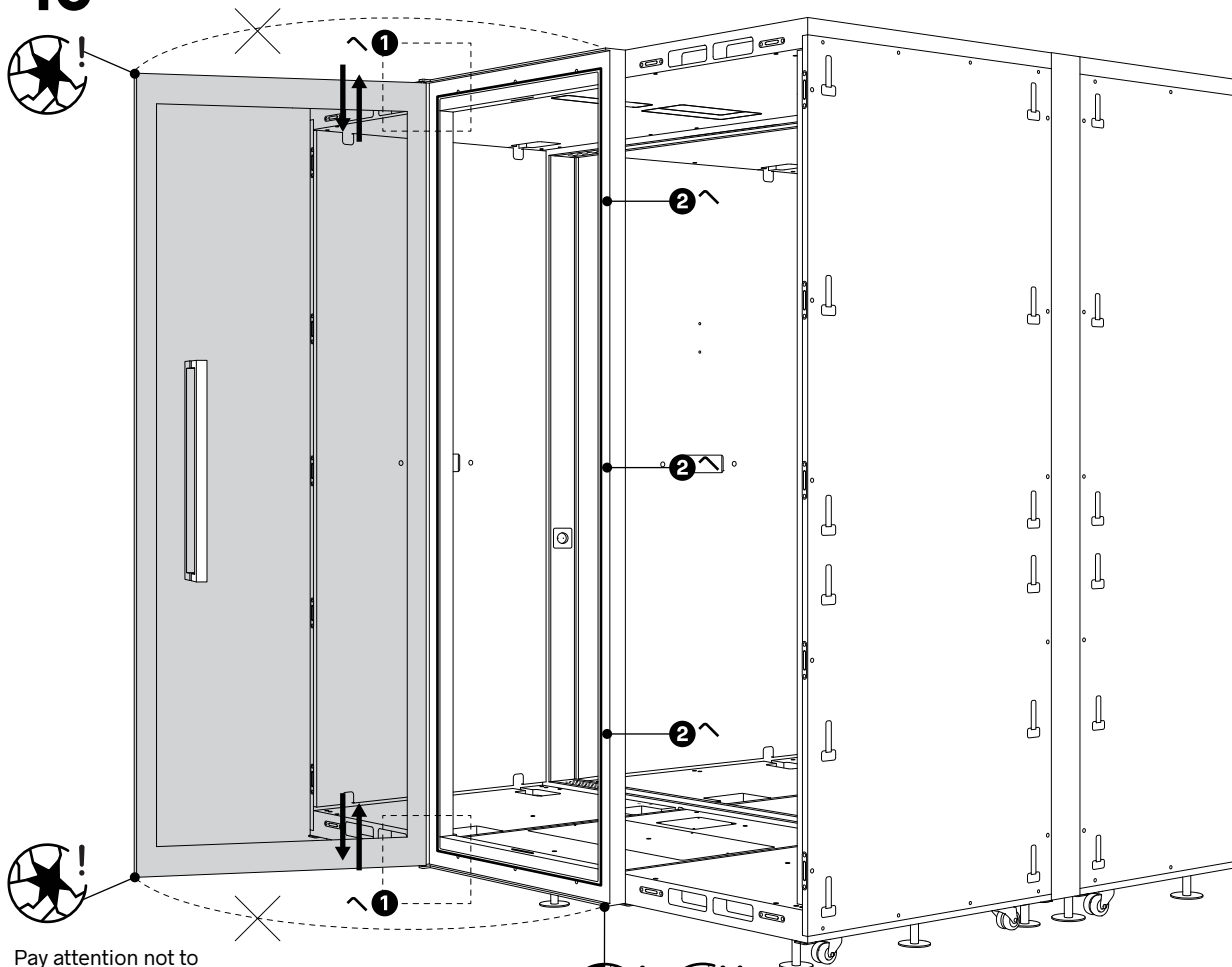

Pay attention not to break the glass door.



Check if the glass door hits the frame edge before closing it.







Adjust the glass door if necessary.

2



Allen Key 3
Allen Key 2

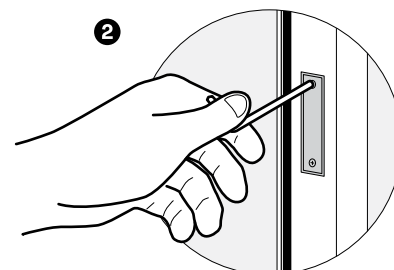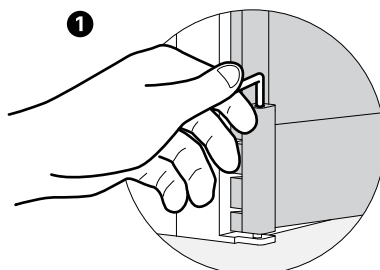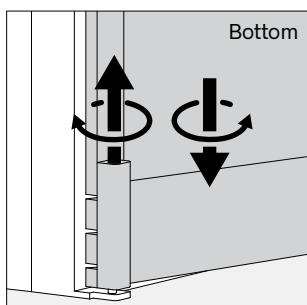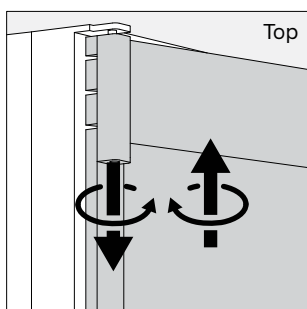

To adjust the glass door the height must be calibrated. If you need to raise the glass door, you loosen the top hinge and tighten the bottom hinge.





If you need to lower the glass door, you loosen the bottom hinge and tighten the top hinge.





Check if the door closes properly and adjust the door plates if needed.








Tighten or loosen the plates when needed.

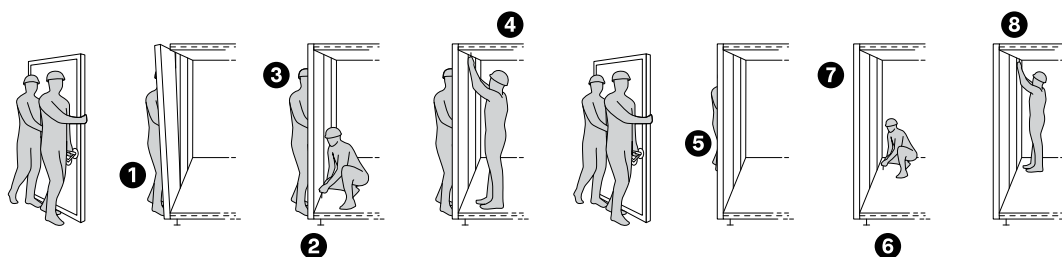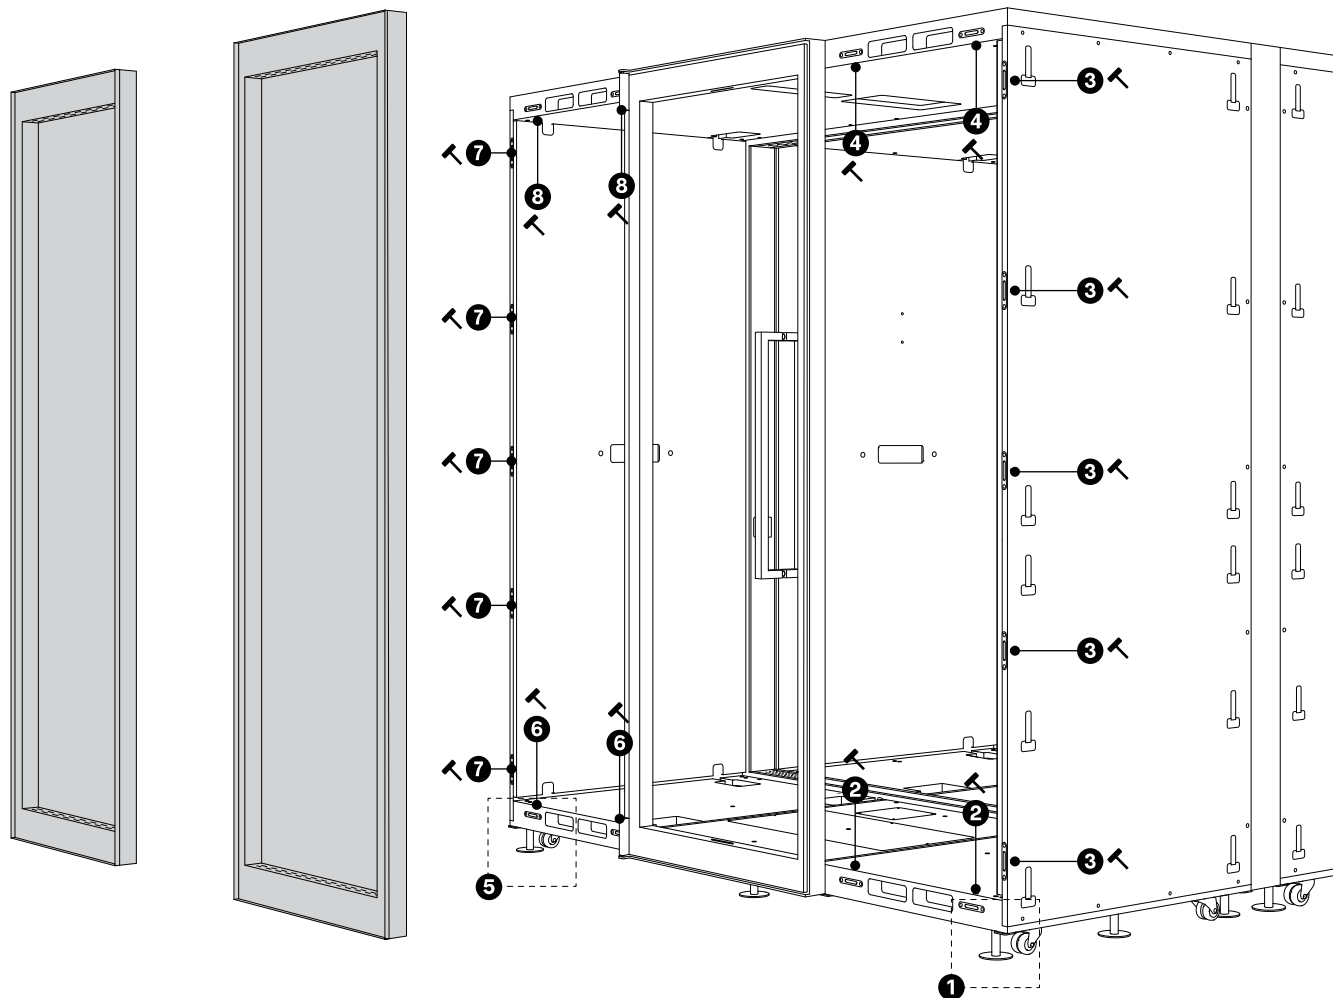


T-Handle Hex Key 7
Suction cup handles

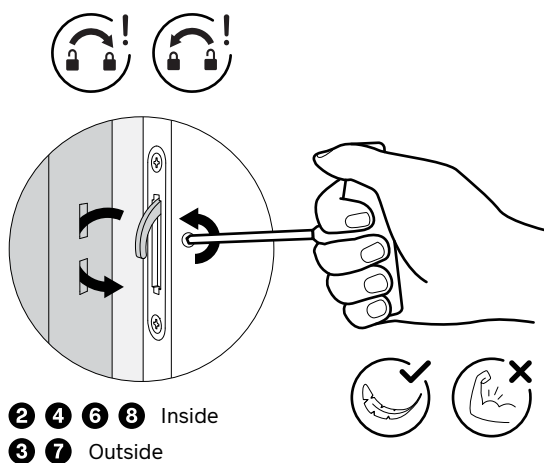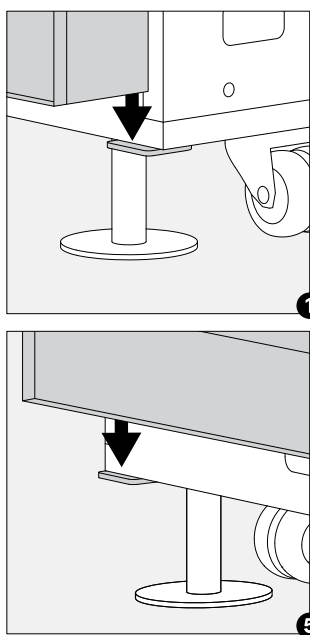


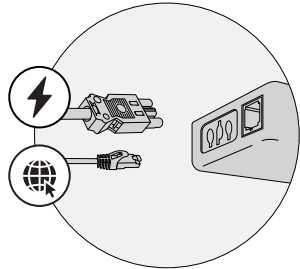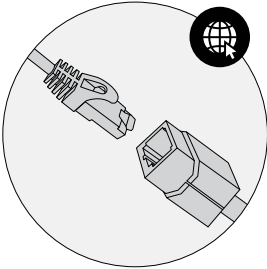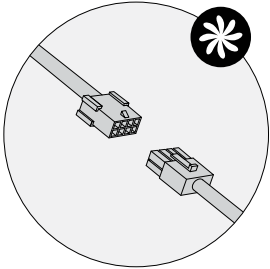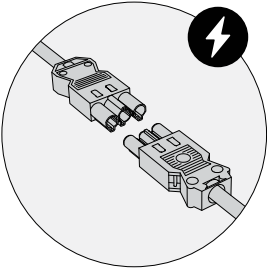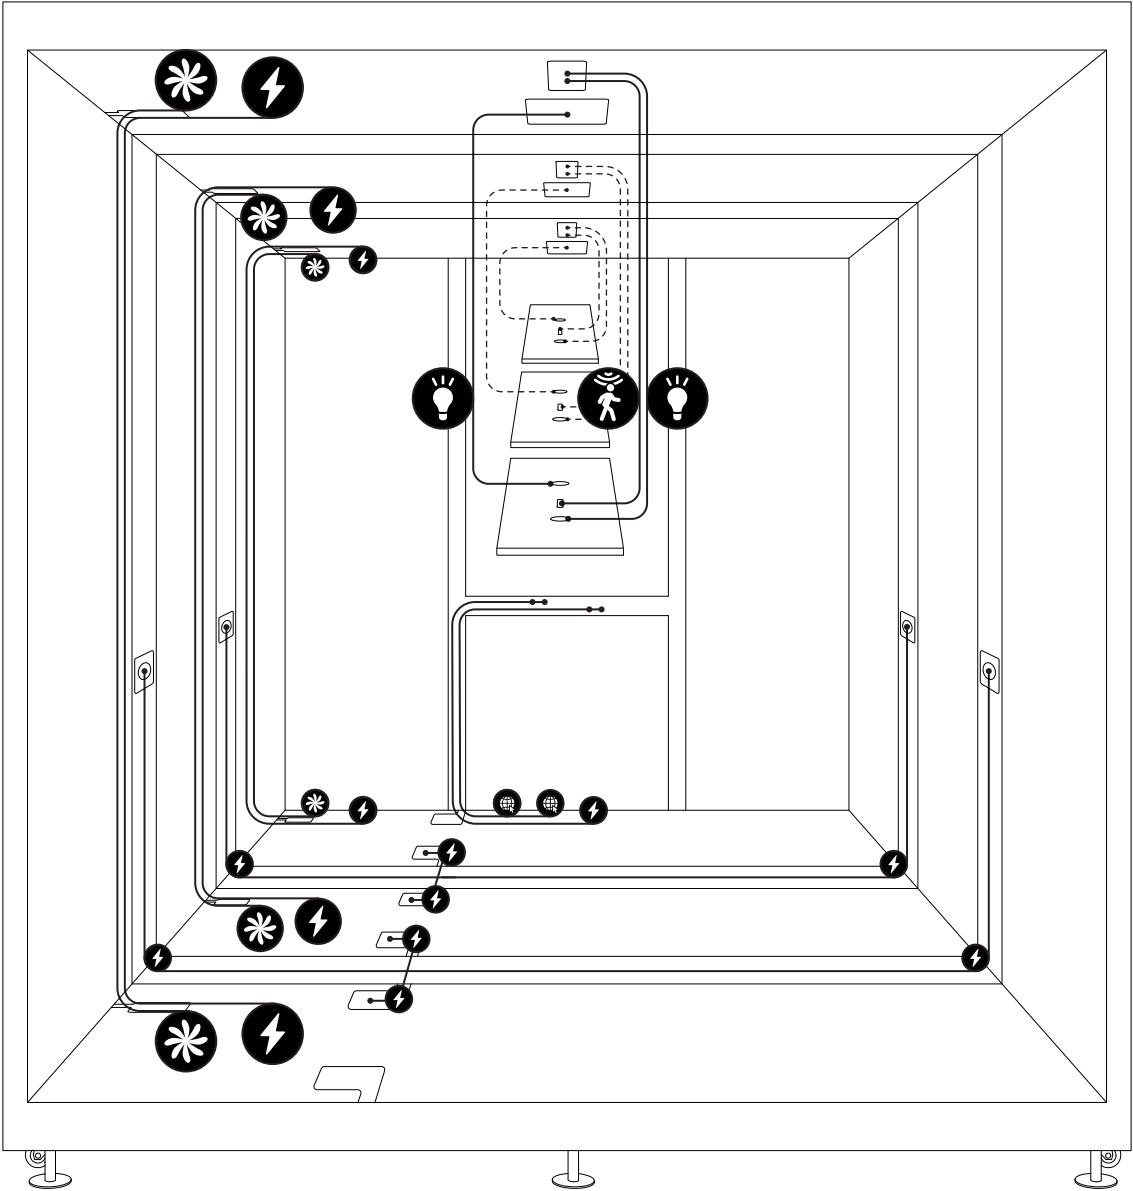

Orange

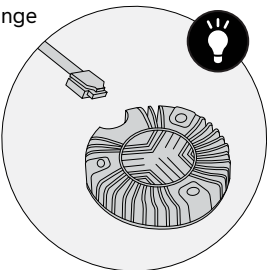




Black

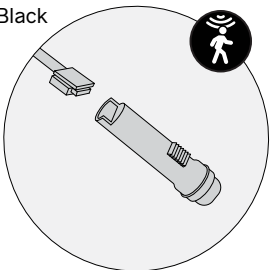


Main Power & Ethernet supply at the back of the pod.











Check if the lighting, ventilation and power sockets are conected properly.

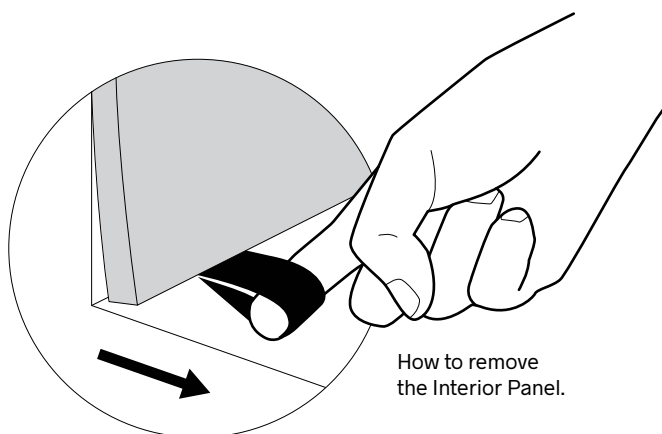
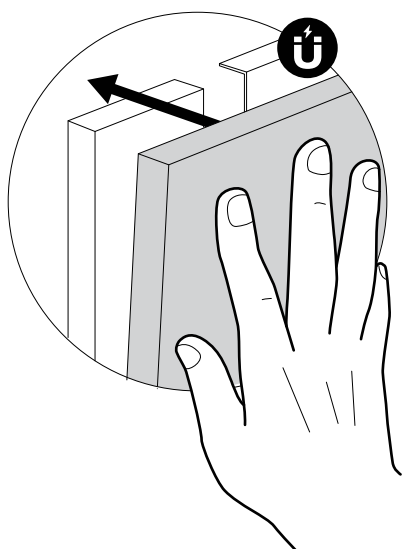
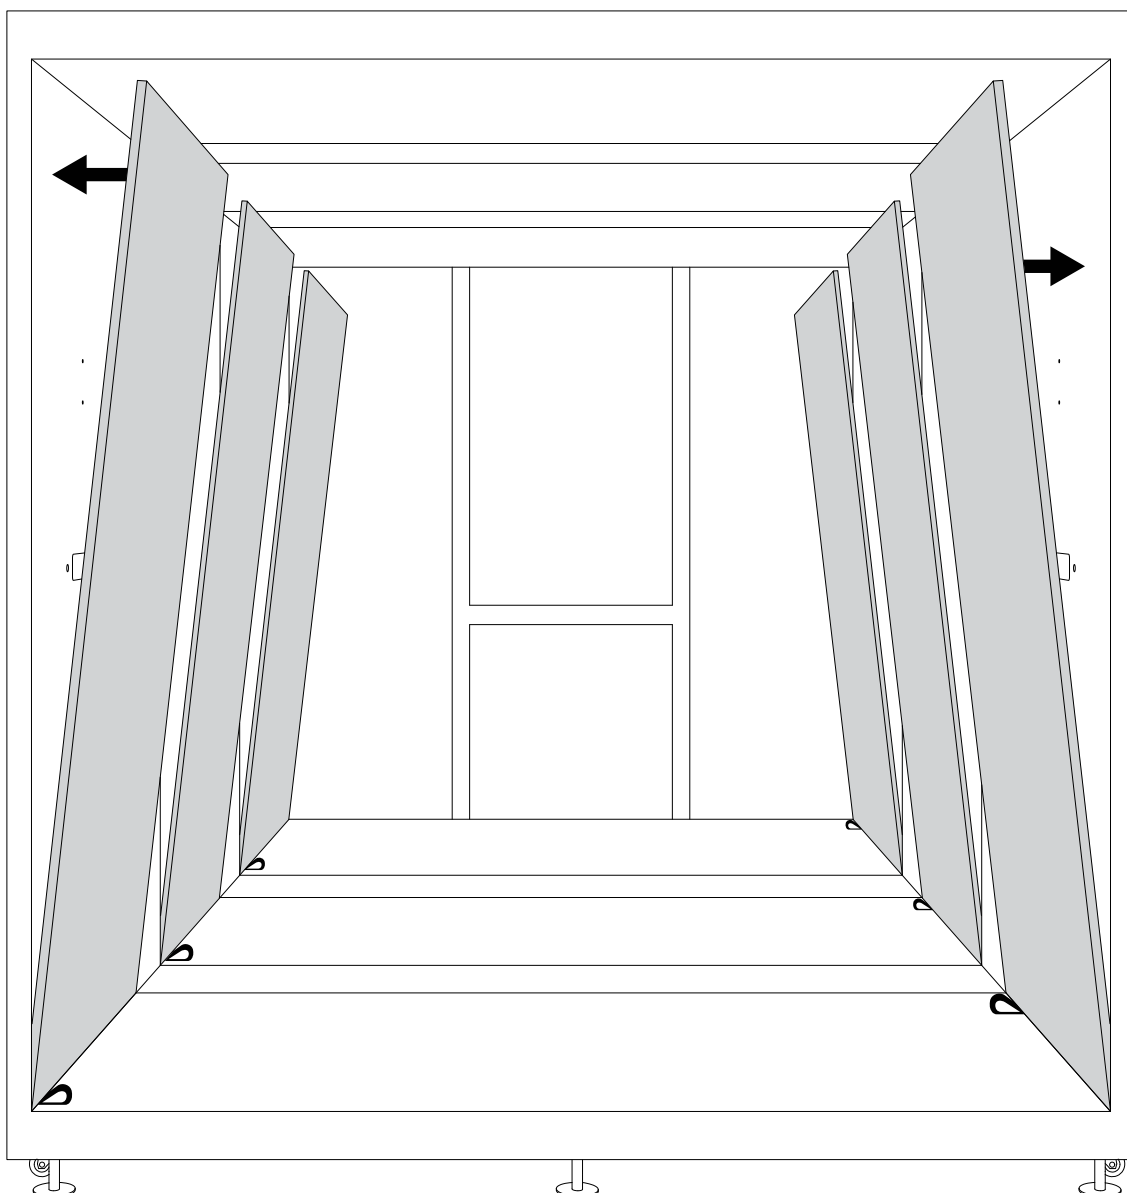





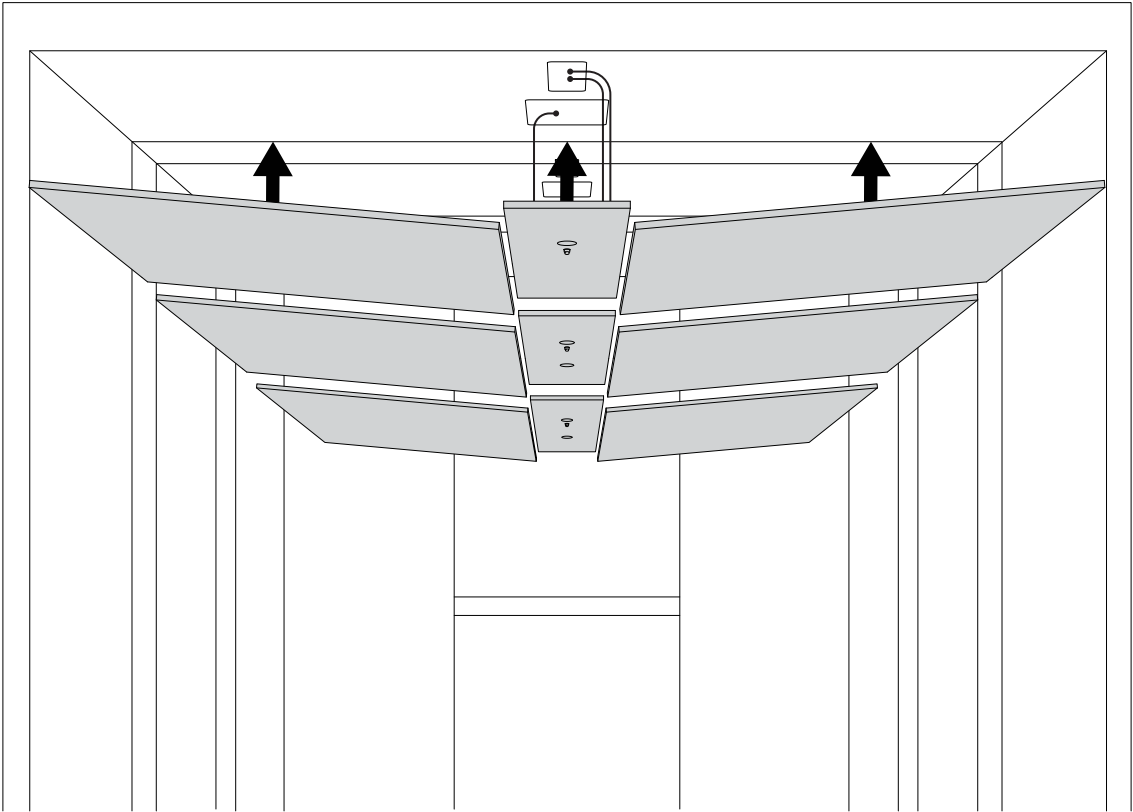


Ceiling Panels Adjuster

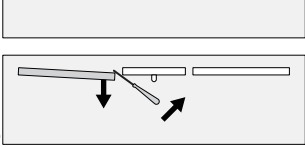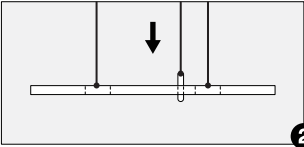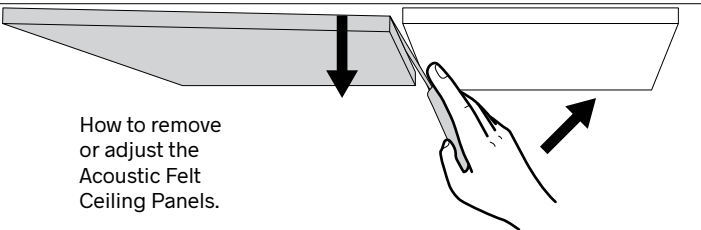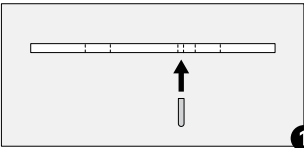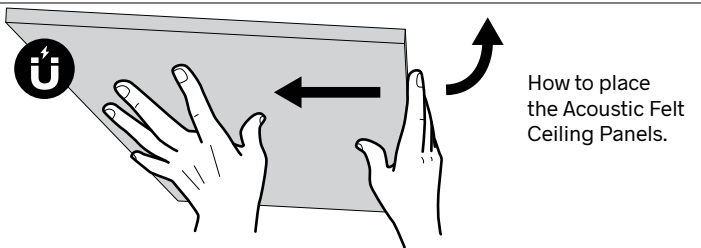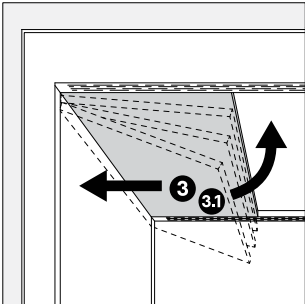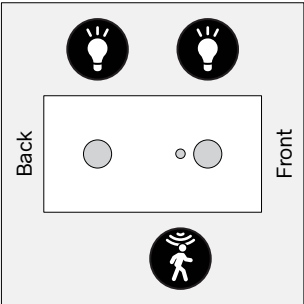

20

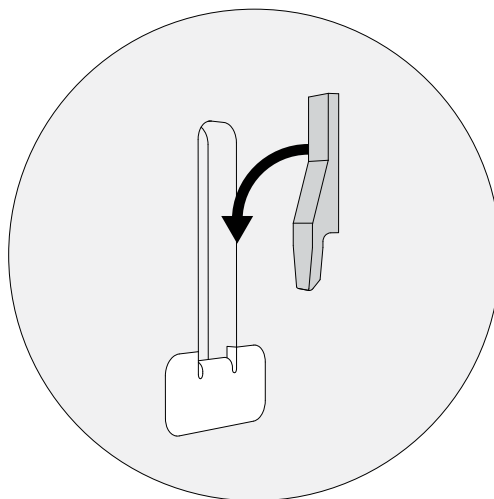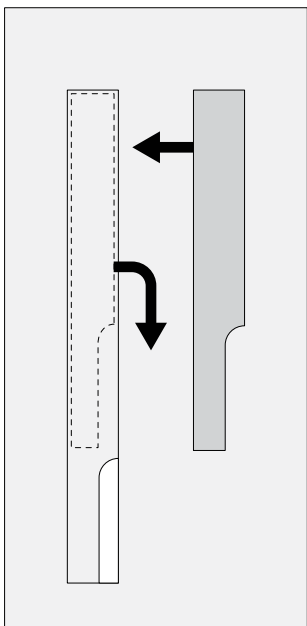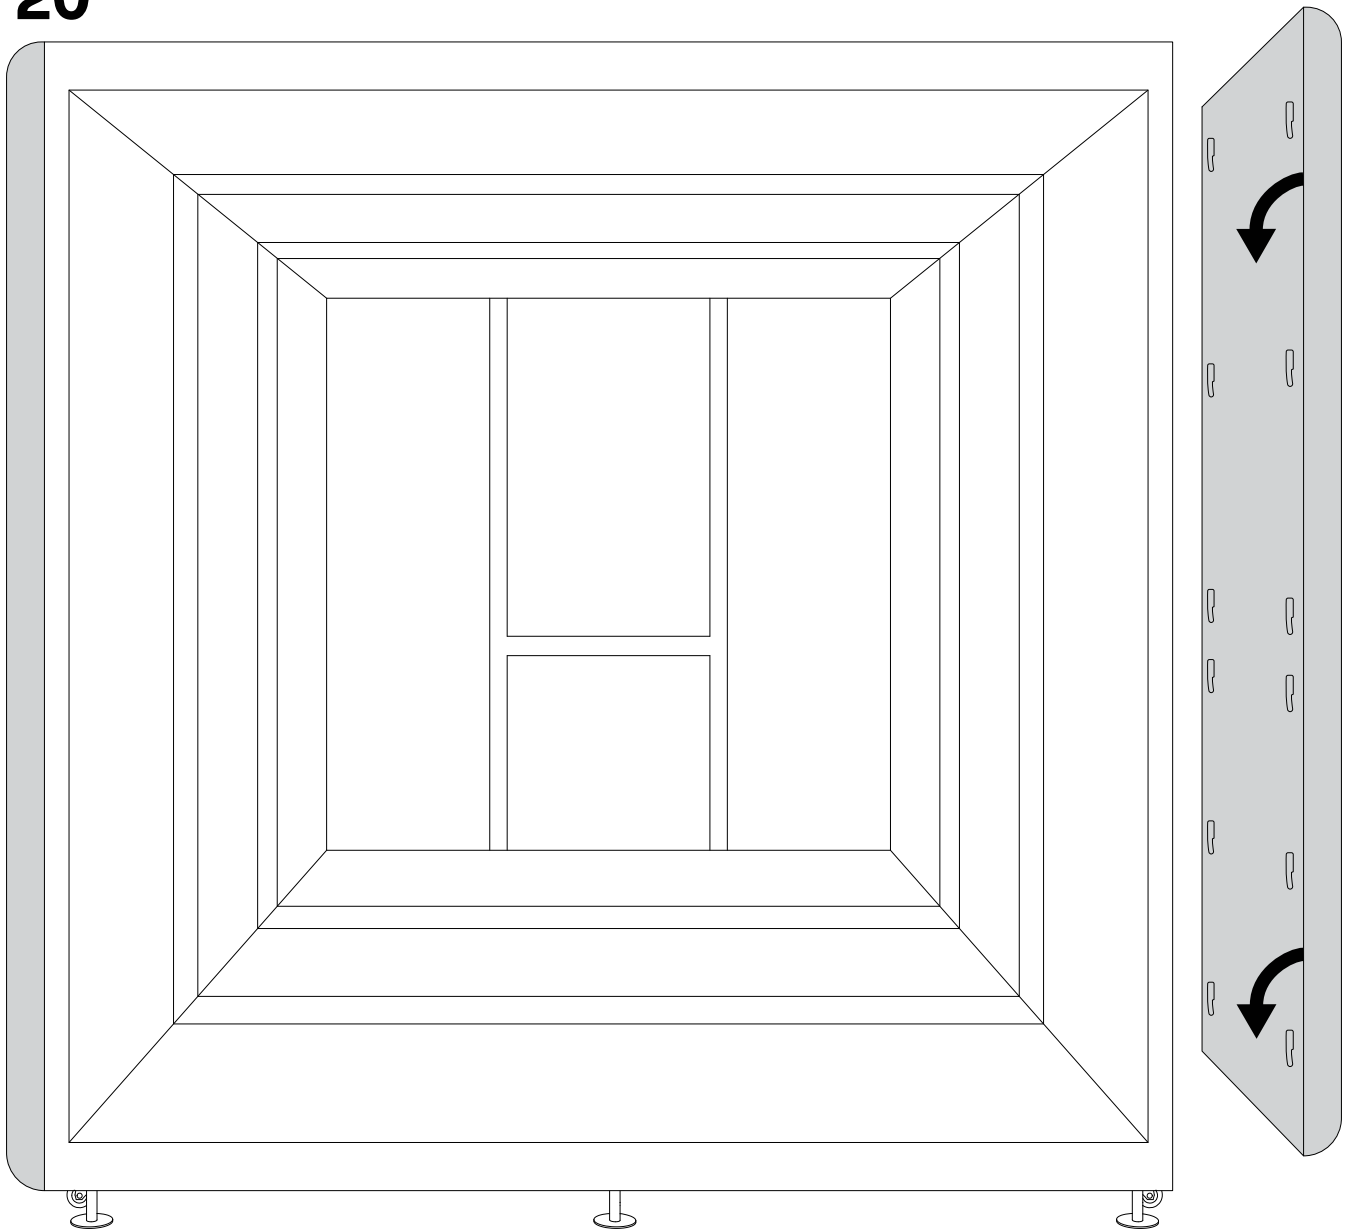

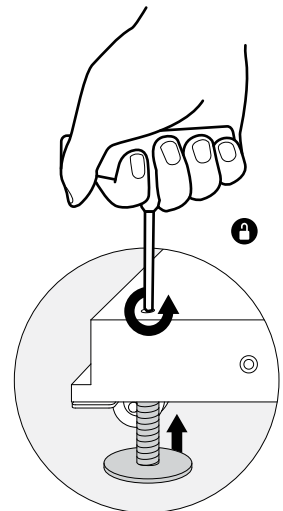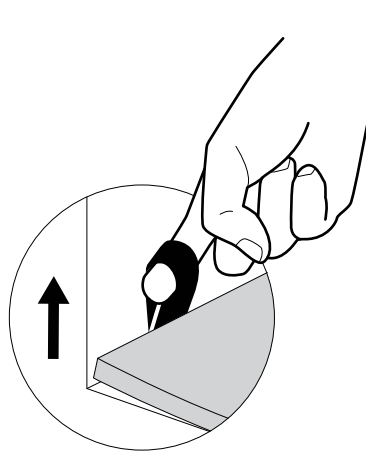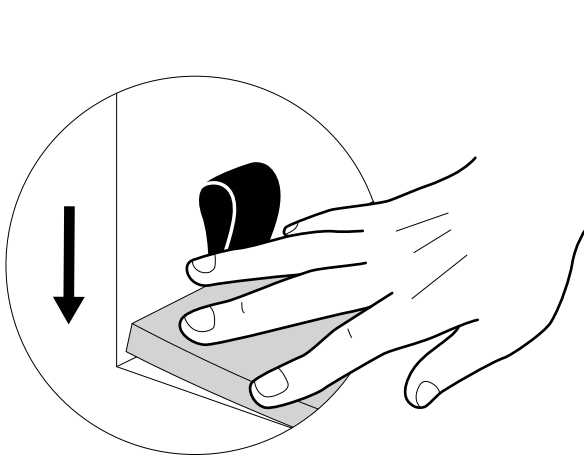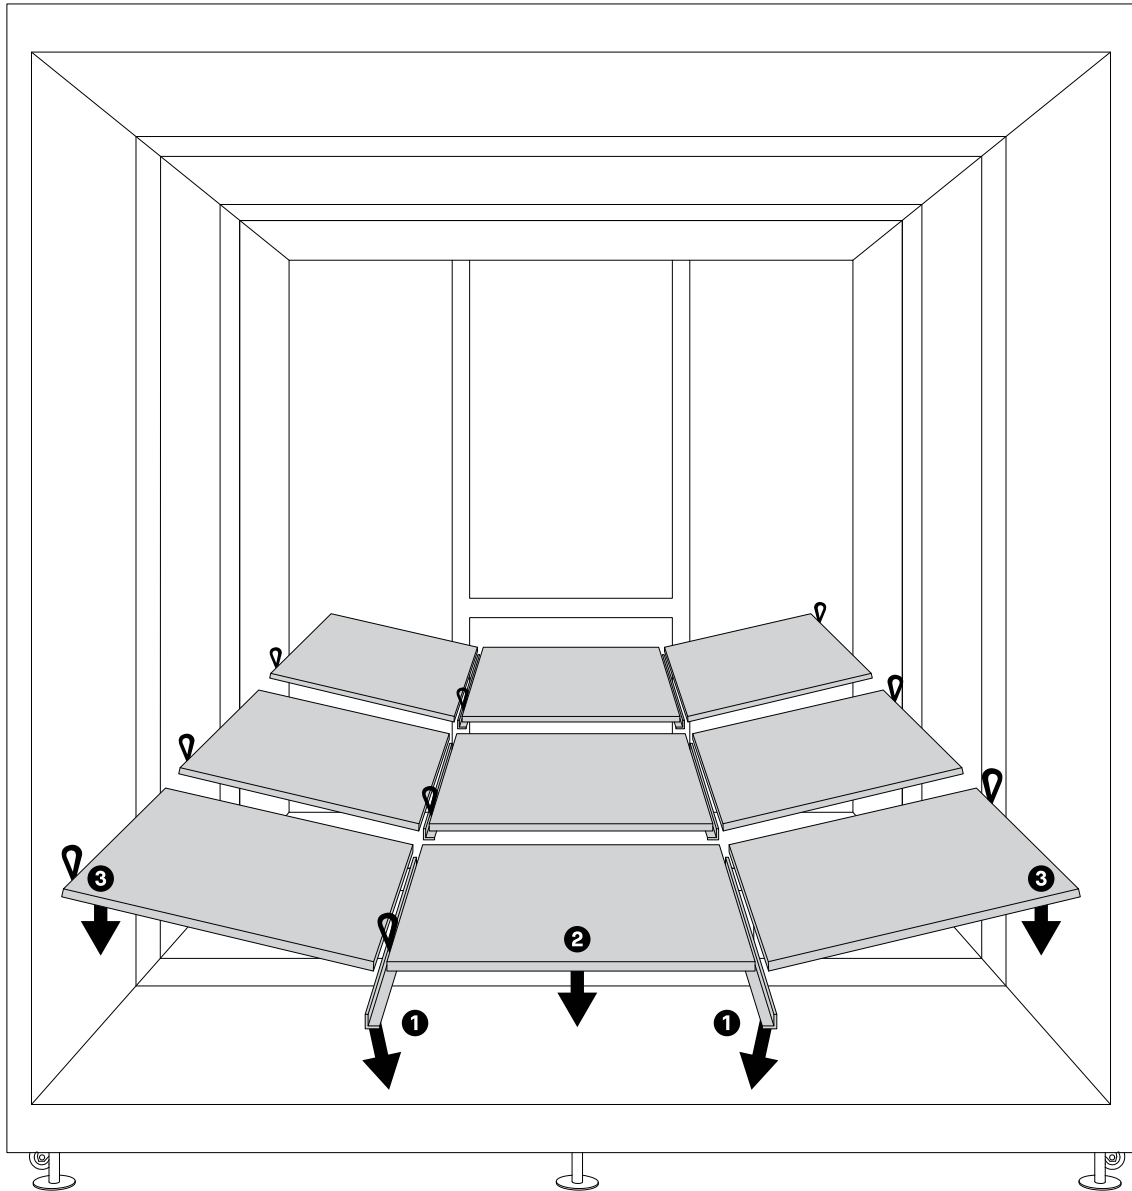


If you are satisfied with the pod's position, you can place the carpets.




If you want to reposition the pod, you have to remove the carpet, if needed, and unlock the legs. When you are satisfied with the pod's position, lock the legs and place the carpets.

Adjustable FAN and LED

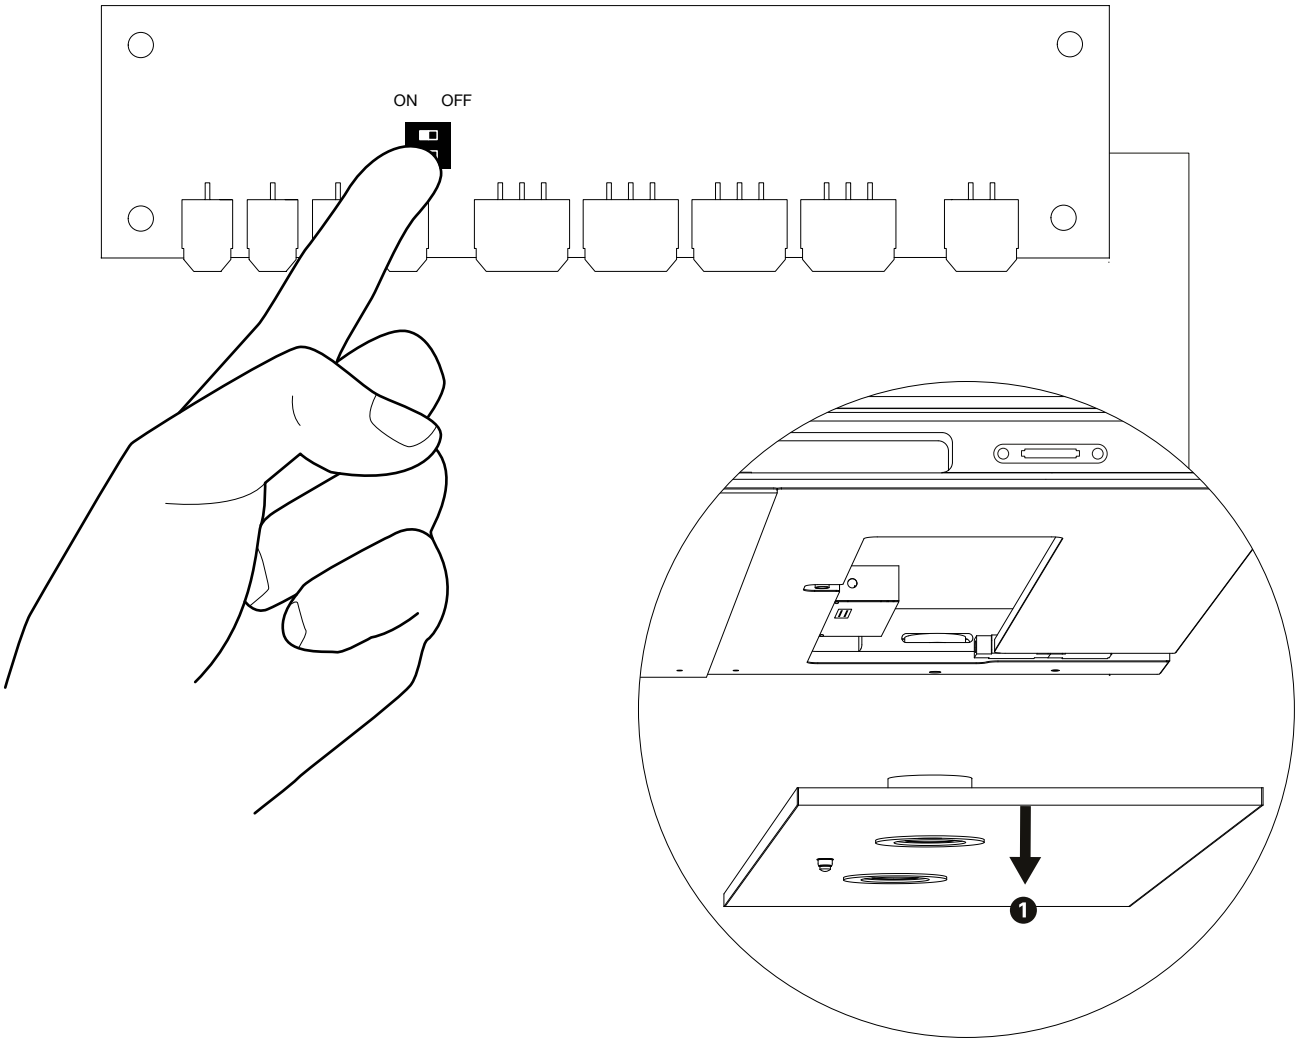

FAN		100%	80%	60%
1	<input type="checkbox"/> ON <input type="checkbox"/> OFF	<input type="checkbox"/> OFF	<input type="checkbox"/> OFF	ON <input type="checkbox"/>
2	<input type="checkbox"/> ON <input type="checkbox"/> OFF	<input type="checkbox"/> OFF	ON <input type="checkbox"/>	ON <input type="checkbox"/>

Scan

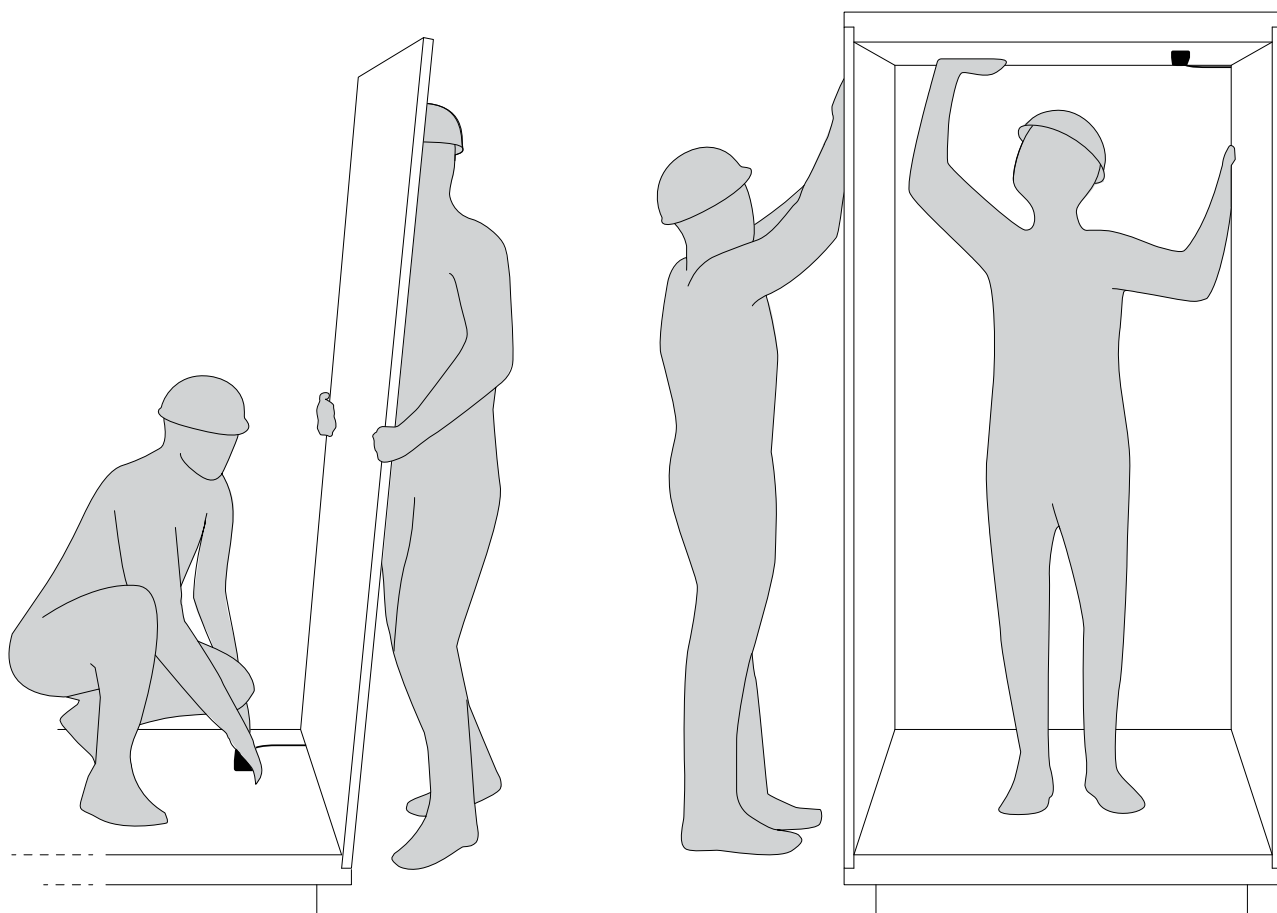


You can watch an instructional video of the K4 assembly process. Thanks to the modular design and limited number of components used for each pod, many steps are similar between different Kameleon pods.



Optional




VESA Adapter



Coat Hanger



Exterior Hanging
Whiteboard or Pinboard



Interior Hanging
Whiteboard or Pinboard



There are multiple features that you can personalize your pod with. You can view them for each Kameleon on our website www.askiafurniture.ro



Eliade Tower,
Mircea Eliade No.18
RO-Bucharest, 012015

T +40 212 121 381
contact@askiafurniture.ro

www.askiafurniture.ro
Last update: 06.02.2023